# OMRON

# **Digital Temperature Controllers**

Communications Manual E5





H175-E1-04

# Preface

This Communications Manual describes the communications capabilities supported by the E5<sup>C</sup> Digital Controllers.

Read and understand this manual before using communications with the E5<sup>C</sup> Digital Controllers and be sure you are performing communications correctly.

Keep this manual in a safe location where it will be available when needed.

#### © OMRON, 2011

All rights reserved. No part of this publication may be reproduced, stored in a retrieval system or transmitted, in any form, or by any means, mechanical, electronic, photocopying, recording, or otherwise, without the prior written permission of OMRON.

No patent liability is assumed with respect to the use of the information contained herein. Moreover, because OMRON is constantly striving to improve its high-quality products, the information contained in this manual is subject to change without notice. Every precaution has been taken in the preparation of this manual. Nevertheless, OMRON assumes no responsibility for errors or omissions. Neither is any liability assumed for damages resulting from the use of the information contained in this publication.

# **Read and Understand this Manual**

Please read and understand this manual before using the products. Please consult your OMRON representative if you have any questions or comments.

# Warranty and Limitations of Liability

## WARRANTY

OMRON's exclusive warranty is that the products are free from defects in materials and workmanship for a period of one year (or other period if specified) from date of sale by OMRON.

OMRON MAKES NO WARRANTY OR REPRESENTATION, EXPRESS OR IMPLIED, REGARDING NON-INFRINGEMENT, MERCHANTABILITY, OR FITNESS FOR PARTICULAR PURPOSE OF THE PRODUCTS. ANY BUYER OR USER ACKNOWLEDGES THAT THE BUYER OR USER ALONE HAS DETERMINED THAT THE PRODUCTS WILL SUITABLY MEET THE REQUIREMENTS OF THEIR INTENDED USE. OMRON DISCLAIMS ALL OTHER WARRANTIES, EXPRESS OR IMPLIED.

## LIMITATIONS OF LIABILITY

OMRON SHALL NOT BE RESPONSIBLE FOR SPECIAL, INDIRECT, OR CONSEQUENTIAL DAMAGES, LOSS OF PROFITS OR COMMERCIAL LOSS IN ANY WAY CONNECTED WITH THE PRODUCTS, WHETHER SUCH CLAIM IS BASED ON CONTRACT, WARRANTY, NEGLIGENCE, OR STRICT LIABILITY.

In no event shall the responsibility of OMRON for any act exceed the individual price of the product on which liability is asserted.

IN NO EVENT SHALL OMRON BE RESPONSIBLE FOR WARRANTY, REPAIR, OR OTHER CLAIMS REGARDING THE PRODUCTS UNLESS OMRON'S ANALYSIS CONFIRMS THAT THE PRODUCTS WERE PROPERLY HANDLED, STORED, INSTALLED, AND MAINTAINED AND NOT SUBJECT TO CONTAMINATION, ABUSE, MISUSE, OR INAPPROPRIATE MODIFICATION OR REPAIR.

# **Application Considerations**

## SUITABILITY FOR USE

OMRON shall not be responsible for conformity with any standards, codes, or regulations that apply to the combination of products in the customer's application or use of the products.

At the customer's request, OMRON will provide applicable third party certification documents identifying ratings and limitations of use that apply to the products. This information by itself is not sufficient for a complete determination of the suitability of the products in combination with the end product, machine, system, or other application or use.

The following are some examples of applications for which particular attention must be given. This is not intended to be an exhaustive list of all possible uses of the products, nor is it intended to imply that the uses listed may be suitable for the products:

- Outdoor use, uses involving potential chemical contamination or electrical interference, or conditions or uses not described in this manual.
- Nuclear energy control systems, combustion systems, railroad systems, aviation systems, medical equipment, amusement machines, vehicles, safety equipment, and installations subject to separate industry or government regulations.
- Systems, machines, and equipment that could present a risk to life or property.

Please know and observe all prohibitions of use applicable to the products.

NEVER USE THE PRODUCTS FOR AN APPLICATION INVOLVING SERIOUS RISK TO LIFE OR PROPERTY WITHOUT ENSURING THAT THE SYSTEM AS A WHOLE HAS BEEN DESIGNED TO ADDRESS THE RISKS, AND THAT THE OMRON PRODUCTS ARE PROPERLY RATED AND INSTALLED FOR THE INTENDED USE WITHIN THE OVERALL EQUIPMENT OR SYSTEM.

## PROGRAMMABLE PRODUCTS

OMRON shall not be responsible for the user's programming of a programmable product, or any consequence thereof.

# Disclaimers

## CHANGE IN SPECIFICATIONS

Product specifications and accessories may be changed at any time based on improvements and other reasons.

It is our practice to change model numbers when published ratings or features are changed, or when significant construction changes are made. However, some specifications of the products may be changed without any notice. When in doubt, special model numbers may be assigned to fix or establish key specifications for your application on your request. Please consult with your OMRON representative at any time to confirm actual specifications of purchased products.

## DIMENSIONS AND WEIGHTS

Dimensions and weights are nominal and are not to be used for manufacturing purposes, even when tolerances are shown.

## PERFORMANCE DATA

Performance data given in this manual is provided as a guide for the user in determining suitability and does not constitute a warranty. It may represent the result of OMRON's test conditions, and the users must correlate it to actual application requirements. Actual performance is subject to the OMRON Warranty and Limitations of Liability.

## ERRORS AND OMISSIONS

The information in this manual has been carefully checked and is believed to be accurate; however, no responsibility is assumed for clerical, typographical, or proofreading errors, or omissions.

# **Safety Precautions**

## **Definition of Precautionary Information**

The following notation is used in this manual to provide precautions required to ensure safe usage of the E5 $\Box$ C Digital Controllers.

The safety precautions that are provided are extremely important to safety. Always read and heed the information provided in all safety precautions.

The following notation is used.




Indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury or in property damage.

#### **Symbols**

Symbol		Meaning
Caution	$\underline{\land}$	<ul> <li>General Caution Indicates non-specific general cautions, warnings, and dangers.</li> </ul>
Caution		Electrical Shock Caution     Indicates possibility of electric shock under specific conditions.
Prohibition	$\bigcirc$	General Prohibition     Indicates non-specific general prohibitions.
Mandatory Caution	0	<ul> <li>General Caution Indicates non-specific general cautions, warnings, and dangers.</li> </ul>

#### Safety Precautions

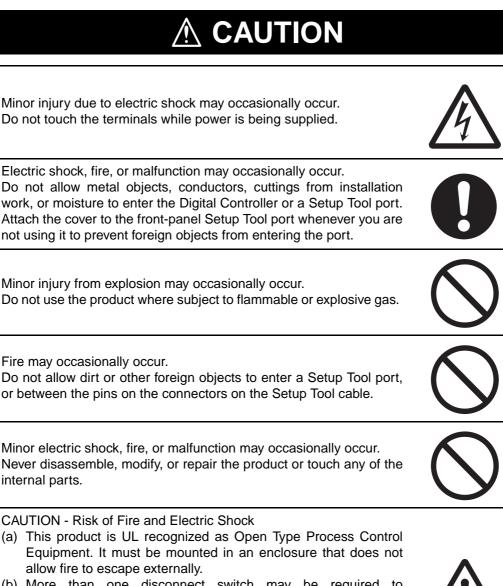

- (b) More than one disconnect switch may be required to de-energize the equipment before servicing.
- (c) Signal inputs are SELV, limited energy.<sup>\*1</sup>
- (d) Caution: To reduce the risk of fire or electric shock, do not interconnect the outputs of different Class 2 circuits.<sup>\*2</sup>

If the output relays are used past their life expectancy, contact fusing or burning may occasionally occur.

Always consider the application conditions and use the output relays within their rated load and electrical life expectancy. The life expectancy of output relays varies considerably with the output load and switching conditions.

- \*1 An SELV circuit is one separated from the power supply with double insulation or reinforced insulation, that does not exceed 30 V r.m.s. and 42.4 V peak or 60 VDC.
- \*2 A class 2 power supply is one tested and certified by UL as having the current and voltage of the secondary output restricted to specific levels.





# 

Loose screws may occasionally result in fire. Tighten the terminal screws to the specified torque of 0.43 to 0.58 N·m.

Set the parameters of the product so that they are suitable for the system being controlled. If they are not suitable, unexpected operation may occasionally result in property damage or accidents.

A malfunction in the Digital Controller may occasionally make control operations impossible or prevent alarm outputs, resulting in property damage. To maintain safety in the event of malfunction of the Digital Controller, take appropriate safety measures, such as installing a monitoring device on a separate line.





# **Precautions for Safe Use**

Be sure to observe the following precautions to prevent operation failure, malfunction, or adverse affects on the performance and functions of the product. Not doing so may occasionally result in unexpected events. Use the product within specifications.

• The product is designed for indoor use only. Do not use or store the product in any of the following locations.

Locations directly subject to heat radiated from heating equipment.

Locations subject to splashing liquid or oil atmosphere.

Locations subject to direct sunlight.

Locations subject to dust or corrosive gas (in particular, sulfide gas and ammonia gas).

Locations subject to intense temperature change.

Locations subject to icing and condensation.

Locations subject to vibration and large shocks.

- Use and store the Digital Controller within the rated ambient temperature and humidity. Gang-mounting two or more Digital Controllers, or mounting Digital Controllers above each other may cause heat to build up inside the Digital Controllers, which will shorten their service life. In such a case, use forced cooling by fans or other means of air ventilation to cool down the Digital Controllers.
- To allow heat to escape, do not block the area around the product. Do not block the ventilation holes on the product.
- Be sure to wire properly with correct polarity of terminals.
- Use the specified size of crimped terminals (M3, width of 5.8 mm or less) for wiring. To connect bare wires to the terminal block, use copper braided or solid wires with a gage of AWG24 to AWG18 (equal to a cross-sectional area of 0.205 to 0.8231 mm<sup>2</sup>). (The stripping length is 6 to 8 mm.) Up to two wires of the same size and type, or two crimped terminals can be inserted into a single terminal.
- Do not wire the terminals that are not used.
- To avoid inductive noise, keep the wiring for the Digital Controller's terminal block away from power cables that carry high voltages or large currents. Also, do not wire power lines together with or parallel to Digital Controller wiring. Using shielded cables and using separate conduits or ducts are recommended.

Attach a surge suppressor or noise filter to peripheral devices that generate noise (in particular, motors, transformers, solenoids, magnetic coils or other equipment that have an inductance component).

When a noise filter is used at the power supply, first check the voltage or current, and attach the noise filter as close as possible to the Digital Controller.

Allow as much space as possible between the Digital Controller and devices that generate powerful high frequencies (high-frequency welders, high-frequency sewing machines, etc.) or surge.

- Use this product within the rated load and power supply.
- Make sure that the rated voltage is attained within 2 seconds of turning ON the power using a switch or relay contact. If the voltage is applied gradually, the power may not be reset or output malfunctions may occur.
- Make sure that the Digital Controller has 30 minutes or more to warm up after turning ON the power before starting actual control operations to ensure the correct temperature display.
- When executing self-tuning, turn ON power for the load (e.g., heater) at the same time as or before supplying power to the Digital Controller. If power is turned ON for the Digital Controller before turning ON power for the load, self-tuning will not be performed properly and optimum control will not be achieved.

- A switch or circuit breaker must be provided close to the Digital Controller. The switch or circuit breaker must be within easy reach of the operator, and must be marked as a disconnecting means for the Digital Controller.
- Wipe off any dirt from the Digital Controller with a soft dry cloth. Never use thinners, benzine, alcohol, or any cleaners that contain these or other organic solvents. Deformation or discoloration may occur.
- Design the system (e.g., control panel) considering the 2 seconds of delay in setting the Digital Controller's output after the power supply is turned ON.
- The output will turn OFF when you move to the initial setting level. Take this into consideration when performing control.
- The number of non-volatile memory write operations is limited. Therefore, use RAM write mode when frequently overwriting data, e.g., through communications.
- Use suitable tools when taking the Digital Controller apart for disposal. Sharp parts inside the Digital Controller may cause injury.
- Do not connect cables to both the front-panel Setup Tool port and the top-panel Setup Tool port at the same time. The Digital Controller may be damaged or may malfunction.
- Do not exceed the communications distance that is given in the specifications and use the specified communications cable. Refer to the *E5 C Digital Temperature Controllers User's Manual* (Cat. No. H174) for the communications distance and cable specifications.
- Do not turn the power supply to the Digital Controller ON or OFF while the USB-Serial Conversion Cable is connected. The Digital Controller may malfunction.

# Trademarks

• MELSEC and GX-Works are trademarks of the Mitsubishi Electric Corporation.

Other company names and product names in this document are the trademarks or registered trademarks of their respective companies.

 
# Versions

Check the version on the nameplate on the E5 $\Box$ C Controller or on the label on the packing box. If the version is not given, the version of the E5 $\Box$ C Controller is version 1.0.

Product nameplate	Package label
The version is given here.	TYPE ESOC-RIVANSH-000 DIGITAL CONTROLLER INPUT MULTI-RANGE VOLTS. 100 to 240 VAC FREQ. 50/60Hz LOT.No. 17212M GTY.1 Ver1. OMRON Corporation Designed by OMRON MADE IN CHINA

# **Revision History**

A manual revision code appears as a suffix to the catalog number on the front cover of the manual.

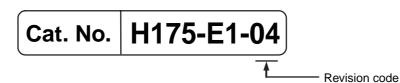

Revision code	Date	Revised content
01	December 2011	Original production
02	January 2012	Page 9: Made correction in Precautions for Safe Use.
03	May 2012	Added the following sections: Section 6 Programless
		Communications and Section 7 Component Communications.
		Page 10: Added trademark information.
		Page 11: Added version information.
		Page 13: Added functional upgrade information.
		Pages 3-17 to 3-18: CompoWay/F variable area additions.
		Corrected mistakes.
04	December 2012	Added Digital Controllers with position-proportional control.


# Functional Upgrades Ver.1.1

 Support for programless communications and component communications was added. The functional upgrades that were made are described in this section.

Refer to Section 6 Programless Communications and Section 7 Component Communications in this manual for details on the functional upgrades.


#### **Programless Communications**

With programless communications you can read and write  $E5\square C$  parameters or start and stop the  $E5\square C$  from a Programmable Controller. Communications with the PLC are performed automatically by the  $E5\square C$ , so there is no need to program communications.

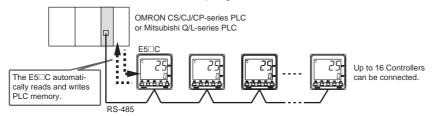


### **Component Communications**

You can use component communications to connect two or more E5<sup>C</sup>C Controllers via RS-485 and then change the set points or RUN/STOP status for all of the Controllers at the same time.

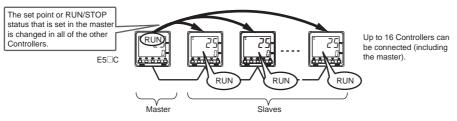

#### **Copying Parameter Set Values**

You can sequentially copy the parameter set values from the master to up to 15 slaves.

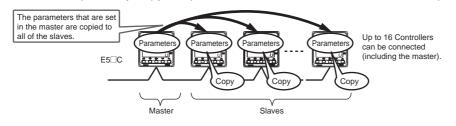

## Identifying Controllers with the Functional Upgrades

The new functionality can be used with version 1.1. Refer to Versions for information on confirming the version.

# New Models Ver.2.0


E5EC/E5AC Digital Controllers with position-proportional control and E5AC Digital Controllers were added.

# 也

#### **Precautions for Correct Use**

The CX-Thermo does not support the new functionality as of May 2012. To use the CX-Thermo, first set other parameters from the CX-Thermo and then set the parameters for the new functionality from the E5 $\Box$ C Controller. If the set values of the parameters are read from the CX-Thermo after setting parameters for the new functions, the set value of the Protocol Setting parameter will be initialized in the CX-Thermo. Also, if the set values of the parameters that were previously read are written to the E5 $\Box$ C Controller, the initialized set value of the Protocol Setting parameter will be written to Controller. As a result, the new functionality will be disabled.

# **Sections in This Manual**

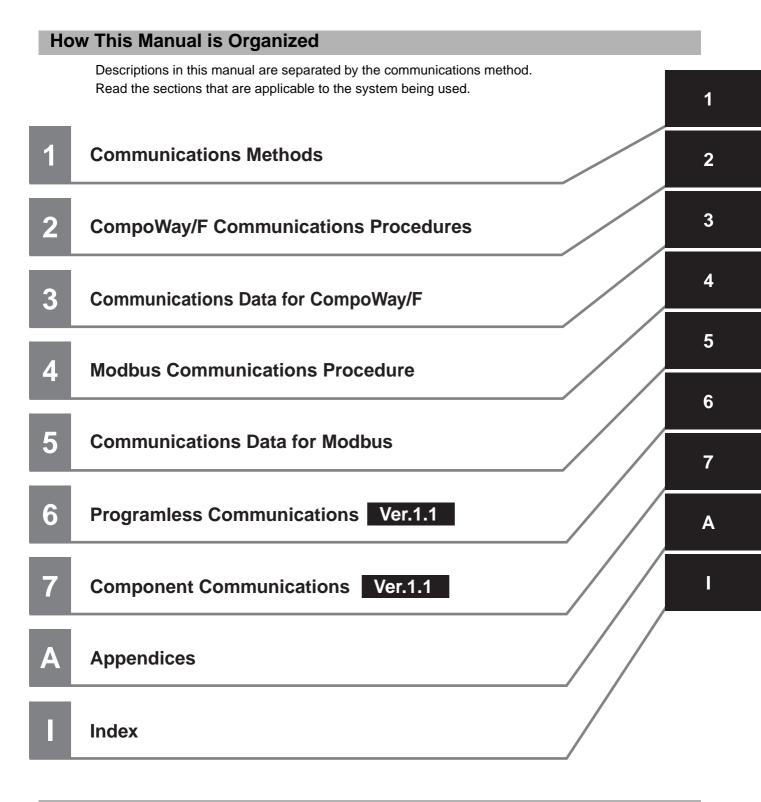

#### **Related Manuals**

For details on the functions of the E5 C Digital Controllers, refer to the *E5 C Digital Temperature Controllers User's Manual* (Cat. No. H174).

# CONTENTS

Preface	1
Read and Understand this Manual	2
Safety Precautions Definition of Precautionary Information Symbols	5
Precautions for Safe Use	8
Trademarks	10
Versions	11
Revision History	12
Functional Upgrades Programless Communications Component Communications Copying Parameter Set Values Identifying Controllers with the Functional Upgrades	
New Models	14

# Section 1 Communications Methods

1-1	Overv	view of Communications Methods	1-2
		Introduction	
	1-1-2	Communications Specifications	
	1-1-3	Transmission Procedure	
	1-1-4	Interface	
	1-1-5	Wiring	1-4
	1-1-6	Communications Parameters	
	1-1-7	Communications Parameter Setup	
	1-1-8	Description of Communications Parameters	

# Section 2 CompoWay/F Communications Procedures

2-1	Data F	ormat	
	2-1-1	Command Frame	
	2-1-2	BCC Calculation Example	2-3
	2-1-3	Response Frame	
	2-1-4	Communications Data	
	2-1-5	End Code Example	2-4
2-2	Struct	ure of Command Text	
2-2	Struct 2-2-1	ure of Command Text PDU Structure	••••••
2-2		PDU Structure	
2-2	2-2-1	PDU Structure Area Definitions	2-6 2-6
2-2	2-2-1 2-2-2	PDU Structure Area Definitions Type Code (Variable Type)	
2-2	2-2-1 2-2-2 2-2-3	PDU Structure Area Definitions	2-6 2-6 2-7

	2-2-6	List of Services (Main Request Codes and Sub-Request Codes)	
2-3	Detaile	ed Description of the Services	
	2-3-1	Read Variable Area	
	2-3-2	Write Variable Area	
	2-3-3	Composite Read from Variable Area	
	2-3-4	Composite Write to Variable Area	
	2-3-5	Read Controller Attributes	2-13
	2-3-6	Read Controller Status	
	2-3-7	Echoback Test	
	2-3-8	Operation Command	2-16
2-4	Respo	onse Code List	

## Section 3 Communications Data for CompoWay/F

3-1	Variable Area (Setting Range) List	3-2
3-2	Status and Status 2	3-21

# Section 4 Modbus Communications Procedure

4-1	<b>Data F</b> 4-1-1 4-1-2 4-1-3	ormat Command Frame Response Frame Error Codes	
4-2	Function	on List	
4-3	Variabl	e Area	4-7
4-4	Detaile	d Description of the Functions	4-8
	4-4-1	Variable Read. Multiple	
	4-4-2	Variable Write, Multiple	4-10
	4-4-3	Variable Write, Single/Operation Command	4-12
	4-4-4	Echoback Test	

# Section 5 Communications Data for Modbus

5-1	Variable Area (Setting Range) List	. 5-2
5-2	Status	5-15

## Section 6 **Programless Communications**

6-1	Progra	mless Communications	6-3
	6-1-1	Introduction	6-3
	6-1-2	Features	
	6-1-3	Operation for Programless Communications	6-4
	6-1-4	Timing of Turning Power ON and OFF	
	6-1-5	Connectable PLCs	6-5
6-2	E5⊡C S	Setup	6-6
	6-2-1	Protocol Setting	6-6
	6-2-2	Communications Unit No. and Communications Baud Rate	
	6-2-3	Send Data Wait Time	6-7
	6-2-4	Highest Communications Unit No.	6-7
	6-2-5	Areas and First Address of Linked Data	
	6-2-6	Receive Data Wait Time	
	6-2-7	Communications Node Number	
	6-2-8	Upload Settings and Download Settings	
	6-2-9	Copying Parameter Settings	

	6-2-10	Communications Writing	
	6-2-11	Communications Monitor Parameter	6-16
6-3	Contro	Iling Programless Communications	6-17
	6-3-1	Controlling Programless Communications with the Request Flag	
	6-3-2	Response Flag	6-18
	6-3-3	Range of Operation for Programless Communications	6-18
	6-3-4	Operation Command Codes	
	6-3-5	Confirming Operation of Programless Communications	6-19
	6-3-6	Write Mode	6-19
	6-3-7	Troubleshooting	6-20
6-4	Conne	cting to CP-series PLCs	6-21
	6-4-1	Configuration and Procedure	
	6-4-2	Switch Settings and Wiring	6-22
	6-4-3	PLC Setup	6-22
	6-4-4	E5 C Controller Setup	6-25
	6-4-5	Checking Operation	6-27
6-5	Conne	cting to CJ-series PLCs	6-32
	6-5-1	Configuration and Procedure	
	6-5-2	Switch Settings and Wiring	
	6-5-3	PLC Setup	6-33
	6-5-4	E5 C Controller Setup	6-36
	6-5-5	Checking Operation	6-36
6-6	Conne	cting to MELSEC Q-series PLCs	6-37
	6-6-1	Configuration and Procedure	
	6-6-2	Wiring	6-38
	6-6-3	PLC Setup	6-38
	6-6-4	E5 C Controller Setup	6-43
	6-6-5	Checking Operation	6-44

# Section 7 Component Communications

7-1	Comp	onent Communications	
		Introduction	
	7-1-2	Wiring	7-2
	7-1-3	E5□C Setup	7-3
7-2		tion for Component Communications	
7-3	Troub	leshooting	7-6

# Section A Appendices

A-1	ASCII List	.A-2
A-2	Troubleshooting	.A-3

## Index

# **Communications Methods**

This section briefly describes the supported communications methods and how to wire equipment. Refer to this section when setting up equipment.

1

1-1	Overv	iew of Communications Methods	1-2
	1-1-1	Introduction	1-2
	1-1-2	Communications Specifications	1-2
	1-1-3	Transmission Procedure	1-3
	1-1-4	Interface	1-3
	1-1-5	Wiring	1-4
	1-1-6	Communications Parameters	1-5
	1-1-7	Communications Parameter Setup	1-6
	1-1-8	Description of Communications Parameters	1-7

# 1-1 Overview of Communications Methods

#### 1-1-1 Introduction

The program for the communications functions is created on the host (personal computer, PLC, or other type of communications master), and the  $E5\Box C$ 's parameters are monitored or set from the host. Therefore, the description provided here is from the viewpoint of the host.

CompoWay/F is OMRON's standard communications format for general serial communications. This format uses a standard frame format as well as the well-established FINS\* commands used for OMRON's PLCs. Therefore, it can simplify communications between components and the host.

FINS (Factory Interface Network service)
 The FINS protocol provides message communications between controllers in OMRON FA networks.

Modbus is a standard communications control method that conforms to the Modicon Company's RTU-mode Modbus Protocol (PI-MBUS-300 Revision J). Modbus is a registered trademark of Schneider Electric.

It supports functions equivalent to the CompoWay/F Read Variable Area, Write Variable Area, Operation Command, and Echoback Test functions.

The E5<sup>C</sup> supports the following communications functions.

- Reading/writing of parameters
- Operation instructions
- Selection of setup levels

Communications are subject to the following condition:

• Parameters can be written only when the Communications Writing parameter is set to ON (enabled).

## 1-1-2 Communications Specifications

Transmission line connection	RS-485: Multidrop		
Communications method	RS-485 (2-wire, half-duplex)		
Synchronization method	Start-stop synchronization		
Communications baud rate *	9,600, 19,200, 38,400 or 57,600 bps		
Communications code	ASCII		
Communications data length *	7 or 8 bits		
Communications stop bits *	1 or 2 bits		
Error detection	Vertical parity (none, even, or odd) * BCC (Block Check Character) with CompoWay/F communications CRC-16 (Cyclic Redundancy Check 16) with Modbus communications		
Flow control	None		
Interface	RS-485		
Retry function	None		
Communications buffer	217 bytes		
Send data wait time	0 to 99 ms, default time: 20 ms		


Communications baud rate, data length, stop bits and vertical parity can each be set independently in the communications setting level. Highlighted values indicate default settings.

# 1-1 Overview of Communications Methods

1

## 1-1-3 Transmission Procedure

When the host transmits a command frame, the  $E5\square C$  transmits a response frame that corresponds to the command frame. A single response frame is returned for each command frame. The following diagram shows the operation of the command and response frames.

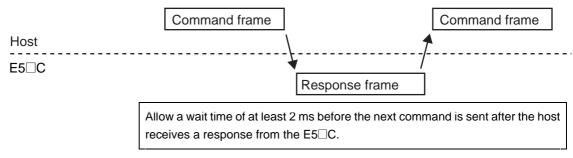


### 1-1-4 Interface

Communications with the host are carried out through a standard RS-485 interface. Use a K3SC Interface Converter for RS-485 interface conversion.

### 1-1-5 Wiring

#### • RS-485

- The RS-485 connection can be either one-to-one or one-to-N. Up to 32 units including the host can be connected in a one-to-N system.
- The total cable length is 500 m max.
- Use a shielded twisted-pair cable with a wire gauge of AWG24 to AWG18 (cross-sectional area of 0.205 to 0.823 mm<sup>2</sup>).

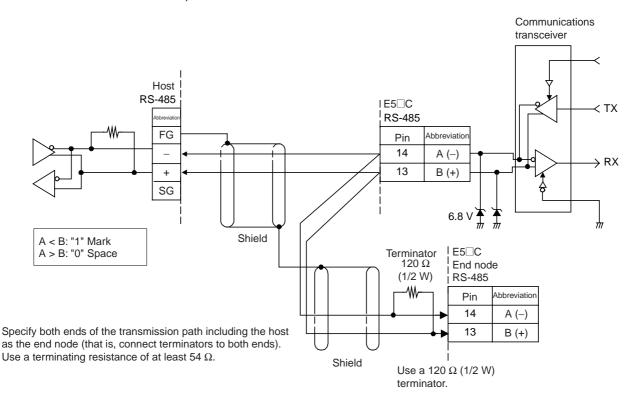

Match the communications specifications of the E5 $\Box$ C and the host. When using a 1:N connection, set the same communications specifications in all of the Units. Each Communications Unit must have a unique unit number.

This section explains how to set the E5 $\Box$ C's communications specifications. For details on the host, refer to the user's manual provided with the host.

## 1-1-6 Communications Parameters

The E5 $\Box$ C's communications specifications are set in the communications setting level. These parameters are set on the E5 $\Box$ C's front panel. The following table shows the communications parameters and their setting ranges.

Item	Code	Settings	Set Values
Communications protocol setting	PSEL	CompoWay/F /Modbus	EWF/Mād
Communications unit number	U-Nā	0 to 99	0, 1 to 99
Communications baud rate	6PS	9.6/19.2/38. 4/57.6 (kbit/s)	9.6/19.2 /38.4/57.6 (kbit/s)
Communications data length *	LEN	7/8 (bit)	7/8 (bit)
Communications stop bits *	5626	1/2	1/2
Communications parity	РРЕЧ	None, Even, Odd	NõNE/EVEN/õdd
Send data wait time	SdWE	0 to 99	0 to 99 ms, default time: 20 ms

Highlighted values indicate default settings.


\* When the Protocol Setting parameter is set to Modbus, the communications data length must be 8 bits, and the communications stop bits must be 1 bit by setting the communications parity to Even/Odd or it must be 2 bits by setting the parity to None. These two parameters are not displayed on the Controller's display.

1

#### 1-1-7 Communications Parameter Setup

Before you carry out communications with the E5 $\Box$ C, set up the communications unit number, baud rate, and other parameters by carrying out the following procedure. For details on operations other than communications parameter setup, refer to the *E5\BoxC Digital Temperature Controllers User's Manual* (Cat. No. H174) for the devices being used.

- (1) Press the Key for at least three seconds to move from the "operation level" to the "initial setting level."
- (3) Select the parameters as shown below by pressing the  $\ensuremath{\overline{\mathrm{e}}}$  Key.
- (4) Use the  $\boxtimes$  or  $\boxtimes$  Keys to change the parameter set values.

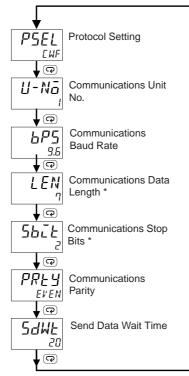

\* Displayed only when the Protocol Setting parameter is set to CompoWay/F.

## 1-1-8 Description of Communications Parameters

When communications parameter settings have been changed, the new settings must be enabled by resetting the Controller.

- Protocol Setting (PSEL) The communications protocol can be selected. Set CompoWay/F or Modbus.
- Communications Unit No. (U-N□)

This parameter is for setting a unique unit number for each of the Digital Controllers. This unit number is set so that the host can identify the Digital Controller when communications are carried out with the host. The unit number can be set to an integer value between 0 and 99. The default is "1." When two or more Digital Controllers are used, do not set the same unit number. Doing so will prevent normal operation.

- Communications Baud Rate (bP5) This parameter is for setting the baud rate for communications with the host. The communications baud rate settings are as follows: 9.6 (9600 bps), 19.2 (19200 bps), 38.4 (38400 bps) or 57.6 (57600 bps)
- Communications Data Length (LEN)
   This parameter is for setting the number of communications data bits. Set either "7 bits" or "8 bits."
- Communications Stop Bits (562)
   This parameter is for setting the number of communications stop bits. Set either "1" or "2."
- Communications Parity (PRLY) This parameter is for setting the communications parity. Set the parity to "none," "even," or "odd."
- Send Data Wait Time (5dWE)

The send data wait time is the delay from when the Controller receives a command from the host computer until it returns a response. If the response is returned too quickly, the host computer may not be able to receive the response. Change the send data wait time as required. To increase the response speed for communications, reduce the send data wait time. The send data wait time can be set in 1-ms increments between 0 and 99 ms. The default is 20 ms.

1

# 2

# CompoWay/F Communications Procedures

Read this section if you are to communicate using the CompoWay/F format.

2-1	Data I	Format	2-2
	2-1-1 2-1-2 2-1-3 2-1-4 2-1-5	Command Frame	
2-2	Struc	ture of Command Text	2-6
	2-2-1	PDU Structure	-
	2-2-2	Area Definitions	
	2-2-3	Type Code (Variable Type)	
	2-2-4	Addresses	
	2-2-5	Number of Elements	
	2-2-6	List of Services (Main Request Codes and Sub-Request Codes)	2-7
2-3	Detail	ed Description of the Services	2-8
	2-3-1	Read Variable Area	
	2-3-2	Write Variable Area	2-9
	2-3-3	Composite Read from Variable Area	2-10
	2-3-4	Composite Write to Variable Area	2-12
	2-3-5	Read Controller Attributes	
	2-3-6	Read Controller Status	2-14
	2-3-7	Echoback Test	
	2-3-8	Operation Command	2-16
2-4	Resp	onse Code List	2-21

# 2-1 Data Format

Hexadecimal values are expressed by adding the prefix H' before the number, e.g., H'02. Numbers shown without the H' prefix are ASCII characters.

The number underneath each item in a frame indicates the number of bytes.

## 2-1-1 Command Frame

				Text			
	Node number	Sub-a	ddress	SID	Command text		BCC
STX		0	0	0		ETX	
1	2	2	2	1		1	1

BCC calculation rar
---------------------

STX	This code (H'02) indicates the beginning of the communications frame (text). Always set this character in the first byte. When STX is received again during reception, reception is carried out again from the point where STX was received.
Node number	<ul> <li>This number specifies the transmission's destination.</li> <li>Specify the E5□C's communications unit number.</li> <li>A BCD value between 00 and 99 or an ASCII value of XX can be set.</li> <li>Specify "XX" for a broadcast transmission. No responses will be returned for broadcast transmissions.</li> <li>No responses will be returned from node numbers other than the ones in the above range.</li> </ul>
Sub-address	Always set the sub-address to "00."
SID (Service ID)	Always set the service ID to "0."
Command text	This is the command text area. For details, refer to 2-2 Structure of Command Text.
ETX	This code (H'03) indicates the end of the text.
BCC	This is the Block Check Character. The BCC result is found by calculating the exclusive OR of the bytes from the node number up to ETX.

## 2-1-2 BCC Calculation Example

 
The BCC (Block Check Character) is determined by calculating the exclusive OR of the bytes from the node number up to ETX. The 8-bit result is written to the BCC byte at the end of the frame.

	STX	Node r	number	Sub-ac	dress	SID		Comm	and text		ETX	BCC
	02H	0 (30H)	5 (35H)	0 (30H)	3 (33H)	03H	35H					
B	BCC = 30H+30H+30H+30H+30H+35H+30H+33H+03H = 35H											

The result of the calculation (35 hex) is written to the BCC byte. -

The⊕symbols indicate XOR (exclusive OR) operations.

#### 2-1-3 Response Frame

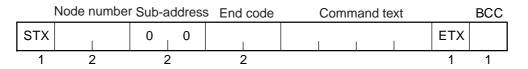

End code	Name	Description	Error detection priority			
00	Normal completion	The command ended normally without error.	None			
0F	FINS command error	The specified FINS command could not be executed. The FINS response code should indicate why the command could not be executed.	8			
10	Parity error	The sum total of bits whose received data is "1" does not match the set value of the "communications parity" bit.				
11	Framing error	Stop bit is "0."	1			
12	Overrun error	rrun error An attempt was made to transfer new data when the reception data buffer was already full.				
13	BCC error	The calculated BCC value is different from the received BCC value.	5			
14	Format error	<ul> <li>The command text contains characters other than 0 to 9, and A to F. This error does not apply to Echoback Tests. (Refer to 2-3-7 Echoback Test for details.)</li> <li>There was no SID and command text. There was no command text.</li> <li>"MRC/SRC" not included in command text.</li> </ul>	7			
16	Sub-address error	<ul> <li>Illegal (unsupported) sub-address</li> <li>There was no sub-address, SID, and command text.</li> <li>Sub-address was less than two characters, and there was no SID and command text</li> </ul>	6			
18	Frame length error	The received frame exceeds the specified (supported) number of bytes.	4			

• An end code is returned for each command frame received that was addressed to the local node.

• No response will be returned unless the frame contained all elements up to the ETX and BCC.

• "Error Detection Priority" indicates the priority when two or more errors occur simultaneously.

## 2-1-4 Communications Data

Communications format	Set (monitor) values	Negative values	Decimal point
CompoWay/F	8-digit hexadecimal	2's complement	Decimal point is removed and the result is converted to hexadecimal. Example conversion: $105.0 \rightarrow 1050 \rightarrow$ H'0000041A

#### 2-1-5 End Code Example

The following examples show the end code when a command did not end normally.

Example 1) Illegal Sub-address, No SID, and No Command Text

Command

	Node r	number	Sub-a	address		BCC
STX			0	A	ETX	

Response

	Node number	Sub-a	ddress	End	End code		
STX		0	А	1	6	ETX	

End code is "16" (sub-address error).

The sub-address error code is used because the sub-address error has a higher error detection priority than the format error.

#### Example 2) No Command Text

Command

	Node number	Sub-a	ddress	SID		BCC
STX		0	0	0	ETX	

Response

	Node number	Sub-a	ddress	End	End code		
STX		0	0	1	4	ETX	

The end code is "14" (format error).

Example 3) No Node Number Provided

• Command

		BCC
STX	ETX	

The node number is lacking one character.

Response

There is no response.

#### Example 4) No Sub-address and Illegal BCC

• Command

	Node numbe	r	BCC
STX		ETX	Err

Response

	Node number	Sub-a	ddress	End	code	BCC		
STX		0	0	1	3	ETX		

The sub-address is "00" and the end code is "13" (BCC error).

# 2-2 Structure of Command Text

#### 2-2-1 PDU Structure

An MRC (Main Request Code) and SRC (Sub-Request Code) followed by the various required data is transferred to the command text.

Service Request PDU



The MRES (Main Response Code) and SRES (Sub-Response Code) are transferred to the response frame following the above MRC/SRC. Data is then transferred following the MRES and SRES.

• Service Response PDU (Normal Response)

MR	C	SR	С	MR	ES	SR	ES		D	ata		

If the specified command text could not be executed, the service response PDU will contain only the MRC/SRC and MRES/SRES.

• Service Response PDU (Command Text Not Executed)

MRC	SŖC	MRES	SRES


MRES/SRES provides the response code. MRES/SRES are not output when processing ends in a normal completion.

#### 2-2-2 Area Definitions

Areas comprise only the variable area.

## 2-2-3 Type Code (Variable Type)

The following figure shows the variable area type code.

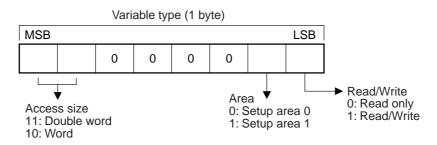

The following table summarizes setup areas 0 and 1.

Area	Description
Setup area 0	This area groups together the protect, manual control, operation, and adjustment levels.
Setup area 1	This area groups together the initial setting, communications setting, advanced function setting, and calibration levels.

The type code depends on the parameter. Refer to 3-1 Variable Area (Setting Range) List for details.

The variable type is converted to 2-byte ASCII and loaded to the frame. The following table shows the available variable types.

Variable type Description					
C0/80	R/O (read only) parameter for setup area 0.				
C1/81	R/W parameter for setup area 0.				
C3/83	R/W parameter for setup area 1.				

Note: Setup area 1 has no read-only parameters, so there is no variable type "C2."

#### 2-2-4 Addresses

An address is appended to each of the variable types. Express addresses in 2-byte hexadecimal and append them for the specified access size. The address depends on the parameter. Refer to 3-1 Variable Area (Setting Range) List for details.

#### 2-2-5 **Number of Elements**

The number of elements is expressed in 2-byte hexadecimal. The range that can be specified for the number of elements depends on the command. Refer to 2-3 Detailed Description of the Services for details.

#### 2-2-6 List of Services (Main Request Codes and Sub-Request Codes)

MRC	SRC	Name of service	Processing
01	01	Read Variable Area	This service reads from the variable
			area.
01	02	Write Variable Area	This service writes to the variable area.
01	04	Composite Read from Variable Area	This service reads from the variable area
			in the order specified by the parameters.
01	13	Composite Write to Variable Area	This service writes to the variable area in
			the order specified by the parameters.
05	03	Read Controller Attributes	This service reads the model number
			and communications buffer size.
06	01	Read Controller Status	This service reads the operating status.
08	01	Echoback Test	This service performs an echoback test.
30	05	Operation Command	This service performs operations such
			as RUN/STOP, executing/stopping AT
			(auto-tuning), and moving to Setup Area
			1.

Note: No commands will be accepted and no responses will be returned when a memory error (RAM error) has occurred or the Controller is initializing (until the Controller recognizes the process value after the power is turned ON).

# 2-3 Detailed Description of the Services

### 2-3-1 Read Variable Area

This service reads data from the variable area.

• Service Request PDU

MRC	SRC	Variable type	Read start address	Bit position	Number of elements
0   1	0   1			0 0	
2	2	2	4	2	4

• Service Request PDU

MRC	SRC	Response	Read data (for number	
0   1	0   1	code	of elements)	
2	2	4	Number of elements × 8 or 4	

#### (1) Variable Type and Read Start Address

For details on variable types and read start addresses, refer to Section 3 Communications Data for CompoWay/F.

#### (2) Bit Position

Bit access is not supported. Fixed to "00."

#### (3) Number of Elements

Number of elemen	ts	Processing
0000		The read operation is not performed (read data is not appended to the service response PDU), and processing ends in a normal completion.
Double word	0001 to 0019	The read operation is performed and processing ends in a
(variable type C0, C1, or C3)	(1 to 25)	normal completion.
Word	0001 to 0032	
(variable type 80, 81, or 83)	(1 to 50)	

#### (4) Response Code

Normal Completion

Response code	Name	Description
0000	Normal completion	No errors were found.

• Error Occurred

Response code	Error name	Cause
1001	Command too long	The command is too long.
1002	Command too short	The command is too short.
1101	Area type error	The variable type is wrong.
1103	Start address out-of-range error	The read start address is out of range.
110B	Response too long	The number of elements exceeds the maximum.
1100	Parameter error	Bit position is not "00."
2203	Operation error	Non-volatile memory error

#### (5) Precautions

#### Alarm Function

Even though alarms are not displayed on the Controller's display, they function normally in communications.

#### 2-3-2 Write Variable Area

This service writes data to the variable area.

Service Request PD

MRC	SRC	Variable type	Start write address	Bit position	Number of elements	Write Data (for number of elements)
0   1	0   2			0 0		
2	2	2	4	2	4	Number of elements $\times 8$ or 4

Service Response PDU

MRC	SRC	Response code
0   1	0   2	
2	2	4

#### (1) Variable Type and Write Start Address

For details on variable types and write start addresses, refer to Section 3 Communications Data for CompoWay/F.

#### (2) Bit Position

Bit access is not supported. Fixed to "00."

#### (3) Number of Elements

Number of elements		Processing
0000		The write operation is not performed (do not append write data to the service request PDU) and processing ends in a normal completion.
Double word	0001 to 0018	The write operation is performed and processing ends in a
(variable type C0, C1, or C3)	(1 to 24)	normal completion.
Word	0001 to 0030	
(variable type 80, 81, or 83)	(1 to 48)	

- (4) Response Code
  - Normal Completion

Response code	Name	Description
0000	Normal completion	No errors were found.

#### • Error Occurred

Response code	Error name	Cause
1002	Command too short	The command is too short.
1101	Area type error	The variable type is wrong.
1103	Start address out-of-range error	Write start address is out of range.
1104	End address out-of-range error	The write end address (write start address + number of elements) exceeds the final address of the variable area.
1003	Number of elements/data mismatch	The number of data does not match the number of elements.
1100	Parameter error	<ul><li>Bit position is not "00."</li><li>The write data is out of the setting range.</li></ul>
3003	Read-only error	Variable type "C0" was written to.
2203	Operation error	<ul> <li>The Communications Writing parameter is set to "OFF" (disabled).</li> <li>Attempted to write to a parameter in setup area 1 from setup area 0.</li> <li>Attempted to write to a protect parameter from other than the protect level.</li> <li>AT (auto-tuning) was in progress. *</li> <li>Non-volatile memory error</li> </ul>

\* For details on AT (auto-tuning), refer to the *E5 C Digital Temperature Controllers User's Manual* (Cat. No. H174).

#### (5) Precautions

 
Alarm Function

Even though alarms are not displayed on the Controller's display, they function normally in communications.


#### 2-3-3 Composite Read from Variable Area


This service reads in order the contents of specified addresses in the variable area.

Service Request PDU

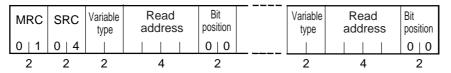

Service Response PDU

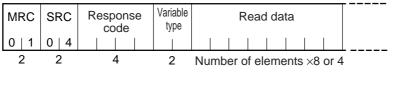 

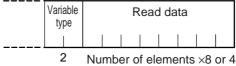 

Note: The read data is read together with the variable type in the order specified by the command.

#### (1) Variable Type and Read Start Address

For details on variable types and read start addresses, refer to Section 3 Communications Data for CompoWay/F.

#### (2) Bit Position

Bit access is not supported. Fixed to "00."

#### (3) Number of Read Data Items (Variable Type + Read Data + Bit Position Counted As 1 Item)

Read data length	Number of read data items
For double word (variable type C0, C1, or C3)	20 max.
For word (variable type 80, 81, or 83)	25 max.

Note: The following table gives the maximum number of read data items when double-word data and word data are used together.

Composite Read		Compos	ite Read
Double word (variable type C0, C1, or C3)	Word (variable type 80, 81, or 83)	Double word (variable type C0, C1, or C3)	Word (variable type 80, 81, or 83)
20	0	11	14
19	1	10	15
18	2	9	16
18	3	8	17
17	4	7	18
17	5	6	19
16	6	8	20
15	7	4	21
15	8	3	22
14	9	2	23
14	10	1	24
13	11	0	25
12	12		
12	13		

#### (4) Response Code

• Normal Completion

Response code	Name	Description
0000	Normal completion	No errors were found.

#### Error Occurred

 
Response code	Error name	Cause
1002	Command too short	The command is too short.
1101	Area type error	The variable type is wrong.
110B	Response too long	The number of elements exceeds the maximum.
1100	Parameter error	Bit position is not "00."
2203	Operation error	Non-volatile memory error

 
2

#### 2-3-4 Composite Write to Variable Area

This service writes in order the contents of specified addresses to a variable area.

Service Request PDU

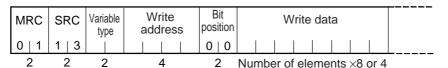

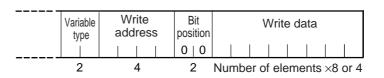

• Service Response PDU

MRC	SRC	Response code
0   1	1   3	
2	2	4

#### (1) Variable Type and Write Start Address

For details on variable types and write start addresses, refer to Section 3 Communications Data for CompoWay/F.

#### (2) Bit Position

Bit access is not supported. Fixed to "00."

(3) Number of Write Data Items (Variable Type + Write Address + Bit Position + Write Data Counted As 1 Item)

Write data length	Number of write data items
For double word (variable type C0, C1, or C3)	12 max.
For word (variable type 80, 81, or 83)	17 max.

Note: The following table gives the maximum number of write data items when double-word data and word data are used together.

Compos	ite Write	1	Compos	ite Write
Double word (variable type C0, C1, or C3)	Word (variable type 80, 81, or 83 )		Double word (variable type C0, C1, or C3)	Word (variable ty 81, or 8
12	0	-	5	10
12	1	-	4	11
11	2	-	3	12
10	3	-	3	13
9	4	-	2	14
9	5	-	1	15
8	6	-	0	16
7	7	-	0	17
6	8			
6	9			

rd type 80, r 83)

#### (4) Response Code

Normal Completion

Response code Name		Name	Description
0	0000 Normal completion		No errors were found.

#### • Error Occurred

Response code	Error name	Cause
1002	Command too short	The command is too short.
1101 Area type error T		The variable type is wrong.
1100	Parameter error	<ul><li>Bit position is not "00."</li><li>The write data is out of the setting range.</li></ul>
3003	Read-only error	Variable type "C0" was written to.
2203	Operation error	<ul> <li>The Communications Writing parameter is set to "OFF" (disabled).</li> <li>Attempted to write to a parameter in setup area 1 from setup area 0.</li> <li>Attempted to write to a protect parameter from other than the protect level.</li> <li>AT (auto-tuning) was in progress. *</li> <li>Non-volatile memory error</li> </ul>

\* For details on AT (auto-tuning), refer to the *E5 C Digital Temperature Controllers User's Manual* (Cat. No. H174).

#### 2-3-5 Read Controller Attributes

This service reads the model number and communications buffer size.

• Service Request PDU



• Service Response PDU

М	RC	SRC	Response code	Model No.	Buffer size
0	5	0   3			0   0   D   9
	2	2	4	10	4

#### (1) Model Number

The model number is expressed in 10-byte ASCII.

Example: The model is given as shown below for the E5CC-RX2ASM-000

(relay output, 2 auxiliary outputs, and no options).

#### (2) Buffer Size

The communications buffer size is expressed in 2-byte hexadecimal, and read after being converted to 4-byte ASCII.

Buffer size: 217 bytes (= H'00D9)

- (3) Response Code
  - Normal Completion

Response code	Name	Description
0000	Normal completion	No errors were found.

#### • Error Occurred

Response code	Error name	Description	
1001	Command too long	The command is too long.	
2203	Operation error	Non-volatile memory error	

#### 2-3-6 Read Controller Status

This service reads the operating status and error status.

Service Request PDU




Service Response PDU

MRC	SRC	Response code	Operating status	
0   6	0   1			tion
2	2	4	2	2

#### (1) Operating Status

Operating status	Description
00	Control is being carried out (error has not occurred in setup area 0 and the Controller is running).
01	Control is not being carried out (state other than above).

#### (2) Related Information

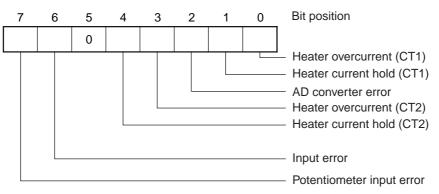

#### (3) Response Code

• Normal Completion

Response code	Name	Description
0000	Normal completion	No errors were found.

 
#### • Error Occurred

Response code	Error name	Description	
1001	Command too long	The command is too long.	
2203	Operation error	Non-volatile memory error	

#### 2-3-7 Echoback Test

This service performs an echoback test.

• Service Request PDU

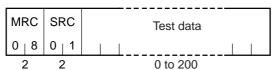

• Service Response PDU

MRC	SRC	Response code	Test data
0   8	0   1		
2	2	4	0 to 200

#### (1) Test Data

Set between 0 and 200 bytes of user-defined test data.

Set a value for the test data within the ranges shown below according to the communications data length.

Communications data length	Test Data	
8 bits	ASCII data: H'20 to H'7E or H'A1 to H'FE	
7 bits	ASCII data: H'20 to H'7E	

#### (2) Response Code

Normal Completion

Response code	Name	Description
0000	Normal completion	No errors were found.

#### • Error Occurred

Response code	Error name	Description
1001	Command too long	The command is too long.
2203	Operation error	Non-volatile memory error

2-3-7 Echoback Test

#### 2-3-8 Operation Command

- Communications Writing
- AT Execute/Cancel
- Software Reset
- Auto/Manual Switch
- Invert Direct/Reverse
   Operation
- RUN/STOP
- Write Mode
- Move to Setup Area 1
- Parameter Initialization
- Program Start
- Multi-SP
- Save RAM Data
- Move to Protect Level
- Alarm Latch Cancel
- SP Mode

• Service Request PDU

MRC	SRC		Related informa-
3   0	0   5	code	tion
2	2	2	2

#### Service Response PDU

MRC	SRC	
3   0	0   5	code
2	2	4

(1)	<b>Command Code and Related Information</b>

Command code	Command content	Related Information
00	Communications Writing	00: OFF (disabled)
00		01: ON (enabled)
01	RUN/STOP	00: Run
01		01: Stop
	Multi-SP	00: Set point 0
		01: Set point 1
		02: Set point 2
02		03: Set point 3
02		04: Set point 4
		05: Set point 5
		06: Set point 6
		07: Set point 7
	AT Execute/Cancel	00: AT cancel
03		01: 100% AT execute
		02: 40% AT execute
04	Write Mode	00: Backup
04		01: RAM write mode
05	Save RAM Data	00
06	Software Reset	00
07	Move to Setup Area 1	00
08	Move to Protect Level	00
00	Auto/Manual Switch	00: Automatic mode
09		01: Manual mode
0B	Parameter Initialization	00

Command code	Command content	Related Information
	Alarm Latch Cancel	00: Alarm 1 latch cancel
		01: Alarm 2 latch cancel
		02: Alarm 3 latch cancel
OC		03: HB alarm latch cancel
		04: HS alarm latch cancel
		05: Alarm 4 latch cancel
		0F: All alarm latch cancel
0D	SP Mode	00: Local SP mode
00		01: Remote SP mode
0E	Invert Direct/Reverse Operation	00: Not invert
UE		01: Invert
	Program Start	00: Reset
11		01: Start

#### (2) Response Code

Normal Completion

Response code	Name	Description
0000	Normal completion	No errors were found.

#### • Error Occurred

Response code	Error name	Description	
1001	Command too long	The command is too long.	
1002	Command too short	The command is too short.	
1100	Parameter error	Command code and related information are wrong.	
2203	Operation error	<ul> <li>The Communications Writing parameter is set to "OFF" (disabled). The command is received regardless of the Communications Writing parameter setting (ON/OFF).</li> <li>Processing could not be performed. For details, refer to (3) Operation Commands and Precautions below.</li> <li>Non-volatile memory error</li> </ul>	

#### (3) Operation Commands and Precautions

• Communications Writing

Set the Communications Writing parameter to "ON: enabled" or "OFF: disabled" with the related information setting. The setting can be accepted in both setup area 0 and setup area 1. An operation error will occur, however, if enabling or disabling communications writing is set for an event input.

#### • RUN/STOP

Set control to "run" or "stop" with the related information setting. The setting can be accepted in both setup area 0 and setup area 1. An operation error will occur, however, if RUN/STOP is set for an event input.

Multi-SP

Set eight set points beforehand in the adjustment level so that you can switch to a desired set point. The setting can be accepted in both setup area 0 and setup area 1. An operation error will occur in the following situations.

- When AT is being executed.
- When the Number of Multi-SP Points parameter is set to OFF.
- When the Number of Multi-SP Points parameter is not set to OFF, but Multi-SP No. Switch is set for an event input.
- AT Execute/Cancel

Set AT (auto-tuning) to "execute" or "cancel" with the related information setting. This command can be accepted in setup area 0 only. An "operation error" will be generated in the following instances:

- When the RUN/STOP parameter is set to "stop"
- When the command is executed in "setup area 1"
- When ON/OFF control is being used
- When 40% AT is specified during 100% AT execution.
- When 100% AT is specified during 40% AT execution.

A parameter error will occur if 40% AT is specified during heating and cooling control or floating position-proportional control.

- Note: If the same type of AT execution is specified during AT execution (e.g., if 100% AT is specified during 100% AT execution), the AT will not be restarted and the operation will end in normal completion with no processing.
- Write Mode

Set either the backup mode or RAM write mode with the related information setting. The setting can be accepted in both setup area 0 and setup area 1.

The number of non-volatile memory write operations is limited. Therefore, use RAM write mode when frequently overwriting data.

Write mode	Description
Backup mode	The data is written to non-volatile memory when the parameters in the operation/adjustment levels (excluding read-only parameters) are written by communications.
RAM write mode	The data is not written to non-volatile memory when the parameters in the operation/adjustment levels (excluding read-only parameters) are written by communications. Parameters can be changed by operating the keys on the front panel of the Controller.

- When the mode is switched from RAM write mode to backup mode, the parameters in the operation/adjustment levels (excluding read-only parameters) are written to non-volatile memory.
- The RAM write mode is enabled only when the Communications Writing parameter is set to "ON" (enabled).

Consequently, when the Communications Writing parameter setting is changed to "OFF" (disabled), the parameters in the operation/adjustment levels (excluding read-only parameters) are written to non-volatile memory even if the mode is set to RAM write mode.

#### Save RAM Data

This command writes the parameters in the operation/adjustment levels (excluding read-only parameters) to non-volatile memory. The setting can be accepted in both setup area 0 and setup area 1.

2

2-3-8 Operation Command

• Software Reset

Restarts processing from the point when power is turned ON. The setting can be accepted in both setup area 0 and setup area 1.

Move to Setup Area 1

This command moves to "setup area 1" and can be accepted at both setup areas 0 and 1. If the "initial setting/communications protect" is set to "2," an "operation error" will be generated, and the move to setup area 1 will be prohibited.

When this move is carried out from setup area 0, the display indicates the Input Type parameter in the "initial setting level." When this operation command is executed in setup area 1, the display will not change.

Move to Protect Level

This command moves to the "protect level" and can be accepted only in setup area 0. When this command is issued in setup area 1, an "operation error" will be generated, and the move to the protect level will be prohibited.

• Moving to Protect Level in Manual Mode

When this operation command is issued in manual mode, an "operation error" will be generated, and the move to the protect level will be prohibited.

• Auto/Manual Switch

This operation command switches the mode to manual mode or automatic mode, based on the related information setting. This command can be accepted in setup area 0 only. An "operation error" will be generated in the following instances:

• When the command is executed in "setup area 1"

When the Controller is switched to manual mode, the "manual manipulated variable" will be displayed. When the Controller is switched from manual mode to automatic mode, the operation level's first parameter will be displayed. When the Controller is switched to auto mode while already in auto mode or switched to manual mode while already in manual mode, the command will be completed normally and the display will not change (the contents will not be refreshed).

 Writing Auto/Manual Status in Non-volatile memory The write mode determines whether the auto/manual status is written to non-volatile memory.

Write mode	Description	
Backup mode	When the auto/manual mode is switched by communications, the	
	auto/manual status is written to non-volatile memory.	
RAM write mode	When the auto/manual mode is switched by communications, the	
	auto/manual status is not written to non-volatile memory.	
	The status can be written with the Controller key operation.	

Note: When the auto/manual mode is switched with an operation command through communications and the Controller is in RAM write mode, the auto/manual status is not stored in non-volatile memory. Consequently, if the Controller is restarted by performing a software reset or turning the power OFF and ON again, the auto/manual mode is set to the last saved status.

- Switching to Manual Mode during Auto-tuning If the mode is switched during auto-tuning (AT), the AT will be cancelled and the Controller will be switched to manual mode.
- Parameter Initialization

The present settings are returned to the default values and written to non-volatile memory. This command can be accepted in setup area 1 only. When this command is issued in setup area 0, an

"operation error" will be generated. (These settings are the same as the ones used when "FACT" is selected for the setting data's set value initialization.)

• Alarm Latch Cancel

The applicable alarm latch can be cleared with the related information setting. The setting can be accepted in both setup area 0 and setup area 1. An operation error will occur if communications writing is disabled or if an non-volatile memory error occurs.

• Invert Direct/Reverse Operation

Inverting or not inverting direct/reverse operation can be selected with the related information setting. The setting can be accepted in both setup area 0 and setup area 1. The related information specifications are written to non-volatile memory according to the write mode settings. An operation error will occur in the following situations:

- When AT is being executed.
- When inverting direct/reverse operation is set for an event input.
- When executed in manual mode.
- Program Start

The simple program function can be reset/started with the related information setting. The setting can be accepted in both setup area 0 and setup area 1. An operation error will be generated if program start has been set in the event input.


• Setting Areas

Control operation is executed in setting area 0. In this state, you can perform operations that are permitted only during control or those that cause no problems even if control is in progress. These operations include reading PVs, writing SPs, and changing RUN/STOP status.

Setting area 0, however, prohibits operations that affect control, including writing data at the initial setting level. (Reading setting data is always allowed.)

In setting area 1, control operation is stopped. In this state, you can perform operations that are not allowed in setting area 0. These operations include writing data at the initial setting level.

At power-ON, the Digital Controller is set in setting area 0. To move to setting area 1, use the "move-to-setting area 1" command. To return to setting area 0, turn the power OFF and ON again, or use the "software reset" command.

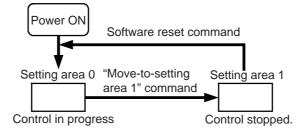

# 2-4 Response Code List

#### Normal Completion

Response code	Name	Description	Error detection priority
0000	Normal completion	No errors were found.	None

Error Occurred

Response code	Name	Description	Error detection priority
0401	Unsupported command	The service function for the relevant command is not supported.	1
1001	Command too long	The command is too long.	2
1002	Command too short	The command is too short.	3
1101	Area type error	Wrong variable type	4
1103	Start address out-of-range error	The read/write start address is out of range.	5
1104	End address out-of-range error	The write end address (write start address + number of elements) exceeds the final address of the variable area.	6
1003	Number of elements/data mismatch	The amount of data does not match the number of elements.	7
110B	Response too long	The response length exceeds the communications buffer size (when the number of elements is greater than the maximum number of elements for that service).	8
1100	Parameter error	<ul> <li>Bit position is not "00."</li> <li>The write data is out of the setting range.</li> <li>The command code or related information in the operation command is wrong.</li> </ul>	9
3003	Read-only error	Variable type "C0" was written to.	10
2203	Operation error	<ul> <li>The Communications Writing parameter is set to "OFF" (disabled).</li> <li>Attempted to write to a parameter in setup area 1 from setup area 0.</li> <li>Attempted to write to a protect parameter from other than the protect level.</li> <li>Writing was carried out during AT execution.</li> <li>Processing is not possible by operation command.</li> <li>Non-volatile memory error</li> </ul>	11

2

# 3

# Communications Data for CompoWay/F

This section lists the details of the communications data in the CompoWay/F communications protocol.

3-1	Variable Area (Setting Range) List	3-2
3-2	Status and Status 2	3-21

## 3-1 Variable Area (Setting Range) List

- For communications using a variable type not enclosed in parentheses in the following table, the set value is double-word data (8 digits). For communications using a variable type enclosed in parentheses, the set value is single-word data (4 digits).
- For example, variable type C0 is double-word data (8 digits), and variable type 80 is single-word data (4 digits).
- Items expressed in hexadecimal in the "Setting (monitor) value" column are the setting range for CompoWay/F communications. The values in parentheses are the actual setting range. When there is a section reference for a setting item, refer to that reference for details.

Variable type	Address	Parameter name	Setting (monitor) value	Level
C0 (80)	0000	PV	Temperature:       Use the specified range for each sensor.         Analog:       Scaling lower limit –5% FS to Scaling upper limit +5% FS	Operation
C0 (80)	0001	Status *1*2	Refer to 3-2 Status and Status 2 for details.	
C0 (80)	0002	Internal Set Point *1	SP lower limit to SP upper limit	
C0 (80)	0003	Heater Current 1 Value Monitor	H'00000000 to H'00000226 (0.0 to 55.0)	
C0 (80)	0004	MV Monitor (Heating)	Standard: H'FFFFFCE to H'0000041A (-5.0 to 105.0) Heating and cooling: H'00000000 to H'0000041A (0.0 to 105.0)	
C0 (80)	0005	MV Monitor (Cooling)	H'00000000 to H'0000041A (0.0 to 105.0)	
C0 (80)	0006	Heater Current 2 Value Monitor	H'00000000 to H'00000226 (0.0 to 55.0)	
C0 (80)	0007	Leakage Current 1 Monitor	H'00000000 to H'00000226 (0.0 to 55.0)	
C0 (80)	0008	Leakage Current 2 Monitor	H'00000000 to H'00000226 (0.0 to 55.0)	
C0 (80)	0009	Soak Time Remain	H'00000000 to H'0000270F (0 to 9999)	
C0 (80)	000A	Valve Opening Monitor	H'FFFFF9C to H'0000044C (-10.0 to 110.0)	
C0 (80)	000B	Remote SP Monitor	Remote SP lower limit –10%FS to Remote SP upper limit +10%FS	
C0 (80)	000C	Multi-SP No. Monitor	H'00000000 to H'00000007 (0 to 7)	
C0 (80)	000E	Decimal Point Monitor <sup>*1</sup>	H'00000000 to H'00000003 (0 to 3)	
C0 (80)	0011	Status 2 *1*2	Refer to 3-2 Status and Status 2.	1
C0 (80)	0012	Status *1*3	Refer to 3-2 Status and Status 2.	
C0 (80)	0013	Status 2 *1*3	Refer to 3-2 Status and Status 2.	<u> </u>

\*1 Not displayed on the Controller display.

\*2 When the variable type is 80 (word access), the rightmost 16 bits are read.

\*3 When the variable type is 80 (word access), the leftmost 16 bits are read.

Variable type	Address	Parameter name	Setting (monitor) value	Level
C1 (81)	0000	Operation/Adjustm	H'00000000 (0): No restrictions in operation and	Protect
		ent Protect	adjustment levels	
			H'00000001 (1): Move to adjustment level is	
			prohibited. H'00000002 (2): Display and change of only "PV"	
			and "PV/SP" parameters is allowed.	
			H'00000003 (3): Display of only "PV" and "PV/SP"	
			parameters is allowed.	
C1 (81)	0001	Initial	H'00000000 (0): Move to initial	
		Setting/Communic	setting/communications setting	
		ations Protect	level is allowed. (Move to advanced	
			function setting level is displayed.)	
			H'00000001 (1): Move to initial setting/communications setting	
			level is allowed. (Move to advanced	
			function setting level is not	
			displayed.)	
			H'0000002 (2): Move to initial	
			setting/communications setting	
			level is prohibited.	-
C1 (81)	0002	Setting Change	H'00000000 (0): OFF (Changing of setup on	
		Protect	Controller display is allowed.)	
			H'00000001 (1): ON (Changing of setup on Controller display is prohibited.)	
C1 (81)	0003	Set Point	SP lower limit to SP upper limit	Operation
C1 (81)	0004	Alarm Value 1	H'FFFFF831 to H'0000270F (–1999 to 9999)	operation
C1 (81)	0005	Alarm Value Upper	H'FFFFF831 to H'0000270F (-1999 to 9999)	-
• (• )		Limit 1		
C1 (81)	0006	Alarm Value Lower Limit 1	H'FFFFF831 to H'0000270F (-1999 to 9999)	
C1 (81)	0007	Alarm Value 2	H'FFFF831 to H'0000270F (-1999 to 9999)	-
C1 (81)	0008	Alarm Value Upper	H'FFFFF831 to H'0000270F (-1999 to 9999)	-
01 (01)	0000	Limit 2		
C1 (81)	0009	Alarm Value Lower	H'FFFFF831 to H'0000270F (-1999 to 9999)	
( )		Limit 2		
C1 (81)	000A	Alarm Value 3	H'FFFFF831 to H'0000270F (-1999 to 9999)	
C1 (81)	000B	Alarm Value Upper Limit 3	H'FFFFF831 to H'0000270F (-1999 to 9999)	
C1 (81)	000C	Alarm Value Lower	H'FFFF831 to H'0000270F (-1999 to 9999)	-
	0000	Limit 3		
C1 (81)	000D	Heater Burnout	H'00000000 to H'000001F4 (0.0 to 50.0)	Adjustment
• (• )		Detection 1		,,
C1 (81)	000E	SP 0	SP lower limit to SP upper limit	
C1 (81)	000F	SP 1	SP lower limit to SP upper limit	1
C1 (81)	0010	SP 2	SP lower limit to SP upper limit	1
C1 (81)	0011	SP 3	SP lower limit to SP upper limit	1
C1 (81)	0012	Process Value	H'FFFFF831 to H'0000270F (-1999 to 9999)	1
		Input Shift		
C1 (81)	0013	Process Value Slope Coefficient	H'00000001 to H'0000270F (0.001 to 9.999)	
C1 (81)	0015	Proportional Band	H'0000001 to H'0000270F (0.1 to 999.9)	1

Note: The alarm function can also be used in Digital Controllers without auxiliary output terminals. In this case, confirm alarm occurrences via the status data.

Variable type	Address	Parameter name	Setting (monitor) value	Level
C1 (81)	0016	Integral Time	Standard, heating/cooling, or close	Adjustment
			position-proportional control:	
			H'00000000 to H'0000270F	
			(0 to 9999: Integral/derivative time unit is 1 s.)	
			(0.0 to 999.9: Integral/derivative time unit is 0.1 s.)	
			Floating position-proportional control:	
			H'00000001 to H'0000270F	
			(1 to 9999: Integral/derivative time unit is 1 s.)	
			(0.1 to 999.9: Integral/derivative time unit is 0.1 s.)	
C1 (81)	0017	Derivative Time	H'00000000 to H'0000270F	
			(0 to 9999: Integral/derivative time unit is 1 s.)	
			(0.0 to 999.9: Integral/derivative time unit is 0.1 s.)	
C1 (81)	0019	Dead Band	H'FFFFF831 to H'0000270F	
			(-199.9 to 999.9 for temperature input)	
			(-19.99 to 99.99 for analog input)	
C1 (81)	001A	Manual Reset	H'00000000 to H'000003E8 (0.0 to 100.0)	
		Value		
C1 (81)	001B	Hysteresis	H'00000001 to H'0000270F	
		(Heating)	(0.1 to 999.9 for temperature input)	
			(0.01 to 99.99 for analog input)	
C1 (81)	001C	Hysteresis	H'00000001 to H'0000270F	
		(Cooling)	(0.1 to 999.9 for temperature input)	
			(0.01 to 99.99 for analog input)	
C1 (81)	001D	Heater Burnout Detection 2	H'00000000 to H'000001F4 (0.0 to 50.0)	
C1 (81)	001E	HS Alarm 1	H'00000000 to H'000001F4 (0.0 to 50.0)	
C1 (81)	001F	HS Alarm 2	H'00000000 to H'000001F4 (0.0 to 50.0)	
C1 (81)	0020	Soak Time	H'00000001 to H'0000270F (1 to 9999)	
C1 (81)	0021	Wait Band	H'00000000 (0): OFF	
• (• )			H'00000001 to H'0000270F	
			(0.1 to 999.9 for temperature input)	
			(0.01 to 99.99 for analog input)	
C1 (81)	0022	MV at Stop	Standard Models	
C1 (81)	0023	MV at PV Error	Standard control:	
01 (01)	0020		H'FFFFFCE to H'0000041A (-5.0 to 105.0)	
			Heating and cooling control:	
			H'FFFFBE6 to H'0000041A (-105.0 to 105.0)	
			Position-proportional Models	
			Close position-proportional control with the Direct	
			Setting of Position Proportional MV parameter set to	
			ON:	
			H'FFFFFCE to H'0000041A (-5.0 to 105.0)	
			Floating position-proportional control or the Direct	
			Setting of Position Proportional MV parameter set to	
			OFF:	
			(Not valid for manual MV.)	
			H'FFFFFFF to H'00000001 (-1 to 1)	

Variable type	Address	Parameter name	Setting (monitor) value	Level
C1 (81)	0024	Manual MV	Standard Models	Manual
			Standard control:	Control
			H'FFFFFCE to H'0000041A (-5.0 to 105.0)	
			Heating and cooling control:	
			H'FFFFBE6 to H'0000041A (-105.0 to 105.0)	
			Position-proportional Models	
			Close position-proportional control with the Direct	
			Setting of Position Proportional MV parameter set	
			to ON:	
			H'FFFFFCE to H'0000041A (-5.0 to 105.0)	
C1 (81)	0025	SP Ramp Set	H'0000000 (0): OFF	Adjustment
		Value	H'00000001 to H'0000270F (1 to 9999)	
C1 (81)	0026	MV Upper Limit	Standard control or close position-proportional control:	
			MV lower limit + 0.1 to H'0000041A	
			(MV lower limit + 0.1 to 105.0)	
			Heating and cooling control:	
			H'00000000 to H'0000041A (0.0 to 105.0)	
C1 (81)	0027	MV Lower Limit	Standard control or close position-proportional control:	
			H'FFFFFCE to MV upper limit – 0.1	
			(-5.0 to MV upper limit - 0.1)	
			Heating and cooling control:	
			H'FFFFBE6 to H'00000000 (-105.0 to 0.0)	
C1 (81)	0028	Move to Protect	H'FFFFF831 to H'0000270F (1999 to 9999)	Protect
		Level		
C1 (81)	0029	Password to Move	H'FFFFF831 to H'0000270F (-1999 to 9999)	
		to Protect Level	(Can only be set. The monitor value is always	
			H'0000000.)	
C1 (81)	002A	Parameter Mask	H'0000000 (0): OFF	
		Enable	H'0000001 (1): ON	
C1 (81)	002B	PF Key Protect	H'0000000 (0): OFF	1
			H'00000001 (1): ON	

Variable type	Address	Parameter name	Setting (monitor) value	Level
C1 (81)	002C	MV Change Rate Limit	H'00000000 to H'000003E8 (0.0 to 100.0)	Adjustment
C1 (81)	002D	Position Proportional Dead Band	H'00000001 to H'00000064 (0.1 to 10.0)	
C1 (81)	002E	Open/Close Hysteresis	H'00000001 to H'000000C8 (0.1 to 20.0)	
C1 (81)	002F	Remote SP Input Shift	H'FFFFF831 to H'0000270F (-1999 to 9999)	
C1 (81)	0030	Remote SP Slope Input Coefficient	H'00000001 to H'0000270F (0.001 to 9.999)	
C1 (81)	0031	Extraction of Square Root Low-cut Point	H'00000000 to H'000003E8 (0.0 to 100.0)	
C1 (81)	0032	Alarm Value 4	H'FFFFF831 to H'0000270F (-1999 to 9999)	
C1 (81)	0033	Alarm Value Upper Limit 4	H'FFFFF831 to H'0000270F (-1999 to 9999)	
C1 (81)	0034	Alarm Value Lower Limit 4	H'FFFFF831 to H'0000270F (-1999 to 9999)	
C1 (81)	0035	SP 4	SP lower limit to SP upper limit	
C1 (81)	0036	SP 5	SP lower limit to SP upper limit	
C1 (81)	0037	SP 6	SP lower limit to SP upper limit	
C1 (81)	0038	SP 7	SP lower limit to SP upper limit	
C1 (81)	0039	Proportional Band (Cooling)	H'00000001 to H'0000270F (0.1 to 999.9)	
C1 (81)	003A	Integral Time (Cooling)	H'00000000 to H'0000270F (0 to 9999: Integral/derivative time unit is 1 s.) (0.0 to 999.9: Integral/derivative time unit is 0.1 s.)	
C1 (81)	003B	Derivative Time (Cooling)	H'00000000 to H'0000270F (0 to 9999: Integral/derivative time unit is 1 s.) (0.0 to 999.9: Integral/derivative time unit is 0.1 s.)	

Variable type	Address	Parameter name	Setting (monitor) value	Level
C1 (81)	003C	SP Ramp Fall Value	H'FFFFFFFF (-1): Same (Same as SP Ramp Set Value.) H'00000000(0): OFF H'00000001 to H'0000270F (1 to 9999)	Adjustment
C1 (81)	003D	Work Bit 1 ON Delay	H'00000000 to H'0000270F (0 to 9999)	
C1 (81)	003E	Work Bit 1 OFF Delay	H'00000000 to H'0000270F (0 to 9999)	
C1 (81)	003F	Work Bit 2 ON Delay	H'00000000 to H'0000270F (0 to 9999)	
C1 (81)	0040	Work Bit 2 OFF Delay	H'00000000 to H'0000270F (0 to 9999)	
C1 (81)	0041	Work Bit 3 ON Delay	H'00000000 to H'0000270F (0 to 9999)	
C1 (81)	0042	Work Bit 3 OFF Delay	H'00000000 to H'0000270F (0 to 9999)	
C1 (81)	0043	Work Bit 4 ON Delay	H'00000000 to H'0000270F (0 to 9999)	
C1 (81)	0044	Work Bit 4 OFF Delay	H'00000000 to H'0000270F (0 to 9999)	
C1 (81)	0045	Work Bit 5 ON Delay	H'00000000 to H'0000270F (0 to 9999)	
C1 (81)	0046	Work Bit 5 OFF Delay	H'00000000 to H'0000270F (0 to 9999)	
C1 (81)	0047	Work Bit 6 ON Delay	H'00000000 to H'0000270F (0 to 9999)	
C1 (81)	0048	Work Bit 6 OFF Delay	H'00000000 to H'0000270F (0 to 9999)	
C1 (81)	0049	Work Bit 7 ON Delay	H'00000000 to H'0000270F (0 to 9999)	
C1 (81)	004A	Work Bit 7 OFF Delay	H'00000000 to H'0000270F (0 to 9999)	
C1 (81)	004B	Work Bit 8 ON Delay	H'00000000 to H'0000270F (0 to 9999)	
C1 (81)	004C	Work Bit 8 OFF Delay	H'00000000 to H'0000270F (0 to 9999)	
C1 (81)	004D	Changed Parameters Only	H'00000000(0): OFF H'00000001(1): ON	Protect

3

type	Address	name Input Type	Se H'00000000 (0):	tting (monitor) value	Level
C3 (83) C	0000	Input Type	H'00000000(0)		
				Pt (-200 to 850°C/-300 to 1500°F)	Initial
			H'00000001 (1):	Pt (-199.9 to 500.0°C/-199.9 to	setting
				900.0°F)	
			H'00000002 (2): H'00000003 (3):	Pt (0.0 to 100.0°C/0.0 to 210.0°F) JPt (-199.9 to 500.0°C/-199.9 to	
			п 0000003 (3).	900.0°F)	
			H'00000004 (4):	JPt (0.0 to 100.0°C/0.0 to 210.0°F)	
			H'00000005 (5):	K (–200 to 1300°C/–300 to 2300°F)	
			H'00000006 (6):	K (–20.0 to 500.0°C/0.0 to 900.0°F)	
			H'0000007 (7):	J (-100 to 850°C/-100 to 1500°F)	
			H'0000008 (8):	J (-20.0 to 400.0°C/0.0 to 750.0°F)	
			H'0000009 (9):	T (-200 to 400°C/-300 to 700°F)	
			H'0000000A (10):	T (-199.9 to 400.0°C/-199.9 to	
			H'0000000B (11):	700.0°F) E (–200 to 600°C/–300 to 1100°F)	
			H'0000000C (12):	L (-100 to 850°C/-100 to 1500°F)	
			H'0000000D (13):	U (–200 to 400°C/–300 to 700°F)	
			H'0000000E (14):	U (–199.9 to 400.0°C/–199.9 to	
				700.0°F)	
			H'0000000F (15):	N (-200 to 1300°C/-300 to 2300°F)	
			H'00000010 (16):	R (0 to 1700°C/0 to 3000°F)	
			H'00000011 (17):	S (0 to 1700°C/0 to 3000°F)	
			H'00000012 (18):	B (100 to 1800°C/300 to 3200°F)	
			H'00000013 (19):	W (0 to 2300°C/0 to 3200°F)	
			H'00000014 (20):	PL II (0 to 1300°C/0 to 2300°F)	
			H'00000015 (21):	Infrared temperature sensor (K 140°F/60°C)	
			H'00000016 (22):	Infrared temperature sensor (K 240°F/120°C)	
			H'00000017 (23):	Infrared temperature sensor (K 280°F/140°C)	
			H'00000018 (24):	Infrared temperature sensor (K 440°F/220°C)	
			H'00000019 (25):	4 to 20 mA	
			H'0000001A (26):	0 to 20 mA	
			H'0000001B (27):	1 to 5 V	
			H'0000001C (28):	0 to 5 V	
<u>C2 (82)</u>	0001	Cooling Linner	H'0000001D (29):	0 to 10 V	_
C3 (83) 0	0001	Scaling Upper Limit	1 to 9,999)	1 to H'0000270F (Scaling lower limit +	
C3 (83) 0	0002	Scaling Lower		ing upper limit – 1 (–1999 to Scaling	1
		Limit	upper limit – 1)		4
. ,	0003	Decimal Point	H'00000000 to 0000	0003 (0 to 3)	4
	0004	Temperature Unit	H'00000000 (0): °C H'00000001 (1): °F		
C3 (83) 0	0005	SP Upper Limit	The range of values Temperature input:	(without decimal point) is as follows: SP lower limit + 1 to Input range upper limit	
			Analog input:	SP lower limit + 1 to Scaling upper limit	
C3 (83) 0	0006	SP Lower Limit	-	(without decimal point) is as follows:	
			Temperature input:	Input range lower limit to SP upper limit – 1	
			Analog input:	Scaling lower limit to SP upper limit – 1	

Setting (monitor) value

Alarm function OFF Upper and lower-limit alarm

Upper-limit alarm

Lower-limit alarm

standby sequence

standby sequence

standby sequence

H'0000000E (14): SP absolute-value upper-limit alarm H'000000F (15): SP absolute-value lower-limit alarm H'00000010 (16): MV absolute-value upper-limit alarm

H'00000012 (18): RSP absolute-value upper-limit alarm H'00000013 (19): RSP absolute-value lower-limit alarm

Note: Same settings as the Alarm 1 Type. However, the LBA (loop burnout alarm) cannot be set.

Note: Same settings as the Alarm 1 Type. However, the LBA (loop burnout alarm) cannot be set.

sequence

sequence

H'0000000C (12): LBA (Loop Burnout Alarm) H'000000D (13): PV change rate alarm

Note: Valid only with a remote SP input.

H'00000000 to H'00000013 (0 to 19)

H'00000000 to H'00000013 (0 to 19)

Upper and lower-limit range alarm

Upper and lower-limit alarm with

Upper-limit alarm with standby

Lower-limit alarm with standby

Absolute-value upper-limit alarm

Absolute-value lower-limit alarm

Absolute-value upper-limit alarm with

Absolute-value lower-limit alarm with

MV absolute-value lower-limit alarm

H'00000000 (0): ON/OFF

H'0000000 (0): Standard

H'00000000 (0): OFF H'0000001 (1): ON

H'FFFFFFE (-2): 0.1 s

H'FFFFFFF (-1): 0.2 s H'0000000 (0): 0.5 s

H'FFFFFFE (-2): 0.1 s

H'FFFFFFF (-1): 0.2 s H'0000000 (0): 0.5 s

H'0000000 (0):

H'0000001 (1): H'0000002 (2):

H'0000003 (3):

H'0000004 (4):

H'0000005 (5):

H'0000006 (6):

H'0000007 (7):

H'0000008 (8):

H'0000009 (9):

H'0000000A (10):

H'0000000B (11):

H'00000011 (17):

H'0000001 (1): 2 PID control

H'0000001 (1): Heating and cooling

H'0000001 to H'0000063 (1 to 99)

H'00000001 to H'00000063 (1 to 99)

H'00000000 (0): Reverse operation

H'0000001 (1): Direct operation

Level	
Initial	
setting	
	1

Variable
Area
(Setting
Range)
List

Ϋ́

E5⊡C Digital Temperature Controllers Communications Manual (H175)	

Alarm 2 Type

Alarm 3 Type

Variable

type

C3 (83)

000E

000F

Address

0007

0008

0009

000A

000B

000C

000D

Parameter

name

PID ON/OFF

Standard or

ST

Heating/Cooling

**Control Period** 

**Control Period** 

Direct/Reverse

Alarm 1 Type

(Heating)

(Cooling)

Operation

Variable type	Address	Parameter name	Setting (monitor) value	Level
C3 (83)	0010	Communications	H'00000000 to H'00000063 (0 to 99)	Commu
		Unit No. <sup>*1</sup>		nications
C3 (83)	0011	Communications	H'0000003 (3): 9.6	setting
		Baud Rate <sup>*1</sup>	H'00000004 (4): 19.2	
			H'00000005 (5): 38.4	
			H'0000006 (6): 57.6	
C3 (83)	0012	Communications	H'0000007 (7): 7	
		Data Length <sup>*1</sup>	H'0000008 (8): 8	
C3 (83)	0013	Communications	H'00000001 (1): 1	
		Stop Bits <sup>*1</sup>	H'0000002 (2): 2	
C3 (83)	0014	Communications	H'00000000 (0): None	
		Parity <sup>*1</sup>	H'00000001 (1): Even	
		-	H'0000002 (2): Odd	

\*1 After communications parameters have been changed, reset the Digital Controller to enable them.

Note: The alarm function can also be used in Digital Controllers without auxiliary output terminals. In this case, confirm alarm occurrences via the status data.

Variable type	Address	Parameter name	Setting (monitor) value	Level
C3 (83)	0016	Event Input	H'00000000 (0): None	Initial
		Assignment 1	H'00000001 (1): RUN/STOP	setting
			H'0000002 (2): Auto/Manual Switch	
			H'0000003 (3): Program Start <sup>*1</sup>	
			H'00000004 (4): Direct/Reverse Operation	
			H'00000005 (5): SP Mode Switch	
			Note: Valid only with a remote SP input.	
			H'00000006 (6): 100% AT Execute/Cancel	
			H'00000007 (7): 40% AT Execute/Cancel	
			H'00000008 (8): Setting Change Enable/Disable	
			H'00000009 (9): Communications Writing	
			Enable/Disable	
			Note: Valid only with external communications.	
			H'0000000A (10): Alarm Latch Cancel	
			H'0000000B (11): Multi-SP No. Switch, Bit 0	
			H'0000000C (12): Multi-SP No. Switch, Bit 1	
0.0 (0.0)			H'000000D (13): Multi-SP No. Switch, Bit 2	
C3 (83)	0017	Event Input	H'00000000 to H'000000D (0 to 13)	
		Assignment 2	Note: Same as for Event Input Assignment 1.	
C3 (83)	0018	Event Input	H'00000000 to H'0000000D (0 to 13)	
		Assignment 3	Note: Same as for Event Input Assignment 1.	
C3 (83)	0019	Event Input	H'00000000 to H'0000000D (0 to 13)	
		Assignment 4	Note: Same as for Event Input Assignment 1.	
C3 (83)	001A	Number of	H'00000001 (1): OFF	Advanced
		Multi-SP Points	H'0000002 to H'0000008 (1 to 8)	function
C3 (83)	001B	SP Ramp Time	H'00000000 (0): EU/second	setting
		Unit	H'00000001 (1): EU/minute	
00 (00)	0045	0, 1, 0	H'0000002 (2): EU/hour	
C3 (83)	001D	Standby Sequence	H'0000000 (0): Condition A	
0.0 (0.0)		Reset	H'00000001 (1): Condition B	
C3 (83)	001E	Auxiliary Output 1	H'00000000 (0): Close in alarm	
0.0 (5.5)		Open in Alarm	H'00000001 (1): Open in alarm	
C3 (83)	001F	Alarm 1 Hysteresis	H'00000001 to H'0000270F	Initial
			(0.1 to 999.9 for temperature input)	setting
			(0.01 to 99.99 for analog input)	

\*1 PRST (program start) can be set even when the program pattern is set to OFF, but the function will be disabled.

Variable type	Address	Parameter name	Setting (monitor) value	Level
C3 (83)	0020	Auxiliary Output 2	H'00000000 (0): Close in alarm	Advanced
		Open in Alarm	H'00000001 (1): Open in alarm	function
				setting
C3 (83)	0021	Alarm 2 Hysteresis	H'00000001 to H'0000270F	Initial
			(0.1 to 999.9 for temperature input)	setting
			(0.01 to 99.99 for analog input)	
C3 (83)	0022	Auxiliary Output 3	H'00000000 (0): Close in alarm	Advanced
		Open in Alarm	H'00000001 (1): Open in alarm	function
C2 (02)	0023	Alarm 2 Hystoresia	H'00000001 to H'0000270F	setting Initial
C3 (83)	0023	Alarm 3 Hysteresis		setting
			(0.1 to 999.9 for temperature input)	setting
00 (00)	0004		(0.01 to 99.99 for analog input)	A
C3 (83)	0024	HB ON/OFF	H'00000000 (0): OFF	Advanced
00 (00)	0005		H'00000001 (1): ON	function
C3 (83)	0025	Heater Burnout	H'00000000 (0): OFF	setting
00 (00)	0000	Latch	H'00000001 (1): ON	
C3 (83)	0026	Heater Burnout	H'00000001 to H'000001F4 (0.1 to 50.0)	
C2 (92)	0027	Hysteresis		
C3 (83)		ST Stable Range	H'00000001 to H'0000270F (0.1 to 999.9)	
C3 (83)	0028	α	H'00000000 to H'00000064 (0.00 to 1.00)	
C3 (83)	002B	Input Digital Filter	H'00000000 to H'0000270F (0.0 to 999.9)	
C3 (83)	002C	PV/SP No. 2	H'00000000 (0): Nothing displayed.	
		Display Selection	H'00000001 (1): PV/SP	
			H'0000002 (2): PV	
			H'0000003 (3): PV/SP (character display)	
			H'00000004 (4): PV/SP/MV H'00000005 (5): PV/SP/Multi-SP No.	
			H'00000006 (6): PV/SP/Soak time remain	
			H'00000007 (7): PV/SP/Internal SP (ramp SP)	
			H'00000008 (8): PV/SP/Alarm value 1	
C3 (83)	002D	MV Display	H'00000000 (0): OFF	
00 (00)	0020	NIV Display	H'00000001 (1): ON	
C3 (83)	002E	Automatic Display	H'00000000 (0): OFF	
00 (00)	0022	Return Time	H'00000001 to H'00000063 (1 to 99)	
C3 (83)	002F	Alarm 1 Latch	H'00000000 (0): OFF	
00 (00)	002.		H'00000001 (1): ON	
C3 (83)	0030	Alarm 2 Latch	H'00000000 (0): OFF	
()			H'00000001 (1): ON	
C3 (83)	0031	Alarm 3 Latch	H'00000000 (0): OFF	
( )			H'00000001 (1): ON	
C3 (83)	0032	Move to Protect	H'00000001 to H'0000001E (1 to 30)	
()		Level Time		
C3 (83)	0033	Integrated Alarm	H'00000000 to H'000000FF (0 to 255)	
()		Assignment		
C3 (83)	0034	Cold Junction	H'00000000 (0): OFF	
()		Compensation	H'00000001 (1): ON	
		Method		
		1		

Note: The alarm function can also be used in Digital Controllers without auxiliary output terminals. In this case, confirm alarm occurrences via the status data.

Variable type	Address	Parameter name	Setting (monitor) value	Level
C3 (83)	0038	Alarm 1 ON Delay	H'00000000 to H'000003E7 (0 to 999)	Advanced
C3 (83)	0039	Alarm 2 ON Delay	H'00000000 to H'000003E7 (0 to 999)	function
C3 (83)	003A	Alarm 3 ON Delay	H'00000000 to H'000003E7 (0 to 999)	setting
C3 (83)	003B	Alarm 1 OFF Delay	H'00000000 to H'000003E7 (0 to 999)	
C3 (83)	003C	Alarm 2 OFF Delay	H'00000000 to H'000003E7 (0 to 999)	
C3 (83)	003D	Alarm 3 OFF Delay	H'00000000 to H'000003E7 (0 to 999)	
C3 (83)	003E	Transfer Output Type	H'0000000 (0): OFF H'00000001 (1): Set point H'00000002 (2): Set point during SP ramp H'00000003 (3): PV H'00000004 (4): MV (heating) H'00000005 (5): MV (cooling) H'00000006 (6): Valve opening	Initial setting
			* Only for Position-proportional Models.	
C3 (83)	003F	Transfer Output Upper Limit	H'FFFF831 to H'0000270F (-1999 to 9999) <sup>*1</sup>	
C3 (83)	0040	Transfer Output Lower Limit	H'FFFF831 to H'0000270F (-1999 to 9999) <sup>*1</sup>	
C3 (83)	0041	Control Output 1 Signal	H'00000000 (0): 4 to 20 mA H'00000001 (1): 0 to 20 mA	
C3 (83)	0043	MV at Stop and Error Addition	H'00000000 (0): OFF H'00000001 (1): ON	Advanced function
C3 (83)	0044	Auto/Manual	H'00000000 (0): OFF	setting
00 (00)	0044	Select Addition	H'00000001 (1): ON	eetg
C3 (83)	0045	RT	H'00000000 (0): OFF H'00000001 (1): ON Note: Valid only with temperature input.	
C3 (83)	0046	HS Alarm Use	H'00000000 (0): OFF H'00000001 (1): ON	
C3 (83)	0047	HS Alarm Latch	H'0000000 (0): OFF H'00000001 (1): ON	
C3 (83)	0048	HS Alarm Hysteresis	H'0000001 to H'000001F4 (0.1 to 50.0)	
C3 (83)	0049	LBA Detection Time	H'00000000 to H'0000270F (0 to 9999)	
C3 (83)	004A	LBA Level	H'00000001 to H'0000270F (0.1 to 999.9 for temperature input) (0.01 to 99.99 for analog input)	
C3 (83)	004B	LBA Band	H'00000000 to H'0000270F (0.0 to 999.9 for temperature input) (0.00 to 99.99 for analog input)	

\*1 The setting (monitor) range depends on the transfer output type setting. (Refer to Section 5 Parameters in the E5\_C Digital Temperature Controllers User's Manual (Cat. No. H174).)

Variable type	Address	Parameter name	Setting (monitor) value	Level
C3 (83)	004C	Protocol Setting <sup>*1</sup>	H'0000000 (0): CompoWay/F H'00000001 (1): Modbus H'00000002 (2): Component communications H'00000003 (3): Host Link (FINS) H'00000004 (4): MC protocol (Format 4)	Communic ations setting
C3 (83)	004D	Send Data Wait Time <sup>*1</sup>	H'00000000 to H'00000063 (0 to 99)	
C3 (83)	004E	Control Output 1 Assignment	Control output 1 is a relay output or voltage output (for driving SSR): H'0000000 (0): Not assigned. H'0000002 (2): Control output (heating) H'0000003 (3): Alarm 1 H'0000003 (3): Alarm 2 H'0000005 (5): Alarm 3 H'0000006 (6): Alarm 4 H'0000007 (7): Heater alarm H'0000008 (8): HB alarm H'0000008 (8): HB alarm H'0000000B (11): RSP input error H'0000000B (11): RSP input error H'0000000C (12): Program end output <sup>*2</sup> H'0000000E (14): Integrated alarm H'0000000E (14): Integrated alarm H'0000000F (15): Work bit 1 H'0000000F (15): Work bit 2 H'00000011 (17): Work bit 3 H'0000012 (18): Work bit 4 H'00000012 (18): Work bit 5 H'00000013 (19): Work bit 5 H'00000014 (20): Work bit 6 H'0000015 (21): Work bit 7 H'00000016 (22): Work bit 7 H'00000016 (22): Work bit 8 When control output 1 is a current output: H'0000001 (1): Control output (heating) H'0000001 (1): Control output (cooling)	Advanced function setting
C3 (83)	004F	Control Output 2 Assignment	<ul> <li>Control output 2 is a relay output or voltage output (for driving SSR):</li> <li>H'00000000 to H'00000016 (0 to 22)</li> <li>* Same as for the Control Output 1 Assignment parameter.</li> <li>When control output 2 is a current output:</li> <li>H'00000000 to H'00000002 (0 to 2)</li> <li>* Same as for the Control Output 1 Assignment parameter.</li> </ul>	

\*1 After communications parameters have been changed, reset the Digital Controller to enable them.

\*2 P.END (program end output) can be set even when the program pattern is set to OFF, but the function will be disabled.

Variable type	Address	Parameter name	Setting (monitor) value	Level
C3 (83)	0050	Auxiliary Output 1	H'00000000 (0): Not assigned.	Advanced
		Assignment	H'00000001 (1): Control output (heating)	function
			H'00000002 (2): Control output (cooling)	setting
			H'0000003 (3): Alarm 1	
			H'0000004 (4): Alarm 2	
			H'0000005 (5): Alarm 3	
			H'00000006 (6): Alarm 4	
			H'0000007 (7): Heater alarm	
			H'0000008 (8): HB alarm	
			H'0000009 (9): HS alarm	
			H'000000A (10): Input error	
			H'000000B (11): RSP input error	
			H'0000000C (12): Program end output	
			H'000000D (13): RUN output	
			H'000000E (14): Integrated alarm	
			H'000000F (15): Work bit 1	
			H'00000010 (16): Work bit 2	
			H'00000011 (17): Work bit 3	
			H'00000012 (18): Work bit 4	
			H'00000013 (19): Work bit 5	
			H'00000014 (20): Work bit 6	
			H'0000015 (21): Work bit 7	
			H'00000016 (22): Work bit 8	
C3 (83)	0051	Auxiliary Output 2	H'00000000 to H'00000016 (0 to 22)	
		Assignment	Note: Same as for the Auxiliary Output 1 Assignment	
			parameter.	
C3 (83)	0053	Program Pattern	H'0000000 (0): OFF	Initial
			H'00000001 (1): STOP	setting
			H'0000002 (2): CONT	
C3 (83)	0054	Soak Time Unit	H'0000000 (0): Minutes	Advanced
			H'0000001 (1): Hours	function
C3 (83)	0055	Alarm SP	H'00000000 (0): Set point during SP ramp	setting
( )		Selection	H'00000001 (1): Set point	-
C3 (83)	0056	Auxiliary Output 3	H'00000000 to H'00000016 (0 to 22)	
~~~/		Assignment	Note: Same as for the Auxiliary Output 1 Assignment	
			parameter.	
C3 (83)	0057	Close/Floating	H'00000000 (0): Floating	Initial
. ,		J J	H'0000001 (1): Close	
C3 (83)	0058	Travel Time	H'00000001 to H'000003E7 (1 to 999)	setting

Variable type	Address	Parameter name	Setting (monitor) value	Level
C3 (83)	0059	PV Dead Band	H'00000000 to H'0000270F (0 to 9999)	Advanced
C3 (83)	005B	Manual MV Limit	H'00000000 (0): OFF	function
		Enable	H'0000001 (1): ON	setting
C3 (83)	005C	Direct Setting of	H'00000000 (0): OFF	ootting
		Position	H'0000001 (1): ON	
		Proportional MV		
C3 (83)	005D	AT Calculated Gain	H'00000001 to H'00000064 (0.1 to 10.0)	I
C3 (83)	005E	AT Hysteresis	H'00000001 to H'0000270F	I
			(0.1 to 999.9 for temperature input)	
			(0.01 to 9.99 for analog input)	
C3 (83)	005F	Limit Cycle MV	H'00000032 to H'000001F4 (5.0 to 50.0)	I
		Amplitude		
C3 (83)	0060	Remote SP Enable	H'00000000 (0): OFF	I
			H'0000001 (1): ON	
C3 (83)	0061	Remote SP Upper	Input range lower limit to Input range upper limit for	I
		limit	temperature input	
			Scaling lower limit to Scaling upper limit for analog input	
C3 (83)	0062	Remote SP Lower	Input range lower limit to Input range upper limit for	Advanced
		limit	temperature input	function
			Scaling lower limit to Scaling upper limit for analog input	setting
C3 (83)	0063	SP Tracking	H'00000000 (0): OFF	
			H'0000001 (1): ON	
C3 (83)	0067	PV Rate of Change	H'00000001 to H'000003E7 (1 to 999)	
		Calculation Period		
C3 (83)	0068	Heating/Cooling	H'00000000 (0): Same (Same as for heating.)	
		Tuning Method	H'00000001 (1): Linear	
			H'0000002 (2): Air cooling	
			H'00000003 (3): Water cooling	
C3 (83)	006C	Extraction of	H'00000000 (0): OFF	Initial
		Square Root	H'0000001 (1): ON	setting
		Enable		

Variable type	Address	Parameter name	Setting (monitor) value	Level
C3 (83) C3 (83) C3 (83)	006D 006E	PF Setting Monitor/Setting Item 1	H'0000000 (0): Disabled. H'0000000 (1): Run H'0000002 (2): Stop H'0000003 (3): RUN/STOP H'0000004 (4): 100% AT execute H'0000005 (5): 40% AT execute H'0000006 (6): Alarm latch cancel H'00000006 (6): Alarm latch cancel H'00000007 (7): Auto/manual switch H'00000008 (8): Monitor/setting item H'00000008 (8): Monitor/setting item H'00000009 (9): Digit shift key H'00000000 (0): Disabled H'000000001 (1): PV/SP/Multi-SP H'00000002 (2): PV/SP/MV	Advanced function setting
			H 00000002 (2). PV/SP/NV H'00000003 (3): PV/SP/soak time remain H'00000004 (4): Proportional band H'00000005 (5): Integral time H'00000006 (6): Derivative time H'00000007 (7): Alarm value 1 H'00000008 (8): Alarm value upper limit 1 H'000000009 (9): Alarm value lower limit 1 H'000000008 (10): Alarm value 2 H'00000000B (11): Alarm value upper limit 2 H'00000000B (11): Alarm value lower limit 2 H'00000000C (12): Alarm value lower limit 2 H'00000000E (14): Alarm value upper limit 3 H'00000000F (15): Alarm value lower limit 3 H'0000000F (15): Alarm value lower limit 3 H'000000010 (16): Alarm value upper limit 4 H'00000011 (17): Alarm value upper limit 4 H'00000012 (18): Alarm value lower limit 4 H'00000013 (19): PV/SP/Internal set point H'00000015 (21): Proportional band (cooling) H'00000016 (22): Integral time (cooling)	
C3 (83)	006F	Monitor/Setting Item 2	H'000000017 (23): Derivative time (cooling) H'00000000 to H'00000017 (0 to 23) Note: Same as for Monitor/Setting Item 1.	_
C3 (83)	0070	Monitor/Setting Item 3	H'00000000 to H'00000017 (0 to 23) Note: Same as for Monitor/Setting Item 1.	-
C3 (83)	0071	Monitor/Setting Item 4	H'00000000 to H'00000017 (0 to 23) Note: Same as for Monitor/Setting Item 1.	
C3 (83)	0072	Monitor/Setting Item 5	H'00000000 to H'00000017 (0 to 23) Note: Same as for Monitor/Setting Item 1.	

Variable type	Address	Parameter name	Setting (monitor) value	Level
C3 (83)	0073	PV/SP No. 1 Display Selection	H'000000000 (0): Nothing displayed. H'000000001 (1): PV/SP H'000000002 (2): PV H'000000003 (3): PV/SP (character display) H'000000004 (4): PV/SP/MV H'000000005 (5): PV/SP/Multi-SP No. H'000000006 (6): PV/SP/Soak time remain	Advanced function setting
			H'000000007 (7): PV/SP/Internal SP (ramp SP) H'000000008 (8): PV/SP/Alarm value 1	
C3 (83)	0074	MV Display Selection	H'00000000 (0): MV (heating) H'00000001 (1): MV (cooling)	
C3 (83)	0075	PV Decimal Point Display	H'00000000 (0): OFF H'00000001 (1): ON	
C3 (83)	0076	PV Status Display Function	H'00000000 (0): OFF H'00000001 (1): Manual H'00000002 (2): Stop H'00000003 (3): Alarm 1 H'00000004 (4): Alarm 2 H'00000005 (5): Alarm 3 H'000000006 (6): Alarm 4 H'000000006 (6): Alarm 1 to 4 OR status H'000000008 (8): Heater alarm	*
C3 (83)	0077	SV Status Display Function	H'00000000 to H'00000008 (0 to 8) Note: Same as for PV Status Display Function	
C3 (83)	0083	Display Refresh Period	H'0000000 (0): OFF H'00000001 (1): 0.25 H'00000002 (2): 0.5 H'00000003 (3): 1.0	•
C3 (83)	0084	Alarm 4 Type	H'00000000 to H'00000013 (0 to 19) Note: Same settings as the Alarm 1 Type. However, the LBA (loop burnout alarm) cannot be set.	Initial setting
C3 (83)	0085	Event Input Assignment 5	H'00000000 to H'0000000D (0 to 13) Note: Same as for Event Input Assignment 1.	•
C3 (83)	0086	Event Input Assignment 6	H'00000000 to H'0000000D (0 to 13) Note: Same as for Event Input Assignment 1.	•
C3 (83)	0087	Auxiliary Output 4 Open in Alarm	H'00000000 (0): Close in alarm H'00000001 (1): Open in alarm	Advanced function setting
C3 (83)	0088	Alarm 4 Hysteresis	H'00000001 to H'0000270F (0.1 to 999.9 for temperature input) (0.01 to 99.99 for analog input)	Initial setting
C3 (83)	0089	Moving Average Count	H'00000000 (0): OFF H'00000001 (1): 2 times H'00000002 (2): 4 times H'00000003 (3): 8 times H'00000004 (4): 16 times H'00000005 (5): 32 times	Advanced function setting
C3 (83)	008A	Alarm 4 Latch	H'00000000 (0): OFF H'00000001 (1): ON	
C3 (83)	008B	Alarm 4 ON delay	H'00000000 to H'000003E7 (0 to 999)	1
C3 (83) C3 (83)	008C 008D	Alarm 4 OFF delay Control Output 2	H'00000000 to H'000003E7 (0 to 999) H'00000000 (0): 4 to 20 mA	Initial
C3 (83)	008E	Signal Transfer Output Signal	H'00000001 (1): 0 to 20 mA H'00000000 (0): 4 to 20 mA H'00000001 (1): 1 to 5 V	setting


Variable type	Address	Parameter name	Setting (monitor) value	Level
C3 (83)	008F	Auxiliary Output 4 Assignment	H'00000000 to H'0000016 (0 to 22) Note: Same as for the Auxiliary Output 1 Assignment parameter.	Advanced function setting
C3 (83)	0090	Remote SP Input	H'00000000 (0): 4 to 20 mA H'00000001 (1): 0 to 20 mA H'00000002 (2): 1 to 5 V H'00000003 (3): 0 to 5 V H'00000004 (4): 0 to 10 V	
C3 (83)	0091	Integral/Derivative Time Unit	H'00000000 (0): 1 s H'00000001 (1): 0.1 s	
C3 (83)	0092	Manual Output Method	H'00000000 (0): HOLD H'00000001 (1): INIT	
C3 (83)	0093	Manual MV Initial Value	Standard control or close position-proportional control: H'FFFFFCE to H'0000041A (–5.0 to 105.0) Heating and cooling control: H'FFFFFBE6 to H'0000041A (–105.0 to 105.0)	
C3 (83)	0094	Minimum Output ON/OFF Band	H'00000000 to H'000001F4 (0 to 50.0)	
C3 (83)	0095	Display Brightness	H'00000001 to H'00000003 (1 to 3)	1
C3 (83)	0096	Highest Communications Unit No.	H'00000000 to H'00000063 (0 to 99)	Communi cations setting
C3 (83)	0097	Area First Address	H'0000000 (0: DM or D data registers) H'0000001 (1: EM0 or W link registers) H'0000003 (3: EM2 or ZR file registers) H'0000004 (4: EM3) H'0000005 (5: EM4) H'0000006 (6: EM5) H'0000007 (7: EM6) H'0000008 (8: EM7) H'0000008 (8: EM7) H'0000008 (11: EMA) H'0000000 (12: EMB) H'0000000 (12: EMB) H'0000000 (13: EMC) H'0000000 (14: EMD) H'0000001 (15: EME) H'0000001 (16: EMF) H'0000001 (16: EMF) H'0000001 (17: EM10) H'00000013 (19: EM12) H'00000014 (20: EM13) H'00000015 (21: EM14) H'00000016 (22: EM15) H'00000018 (24: EM17) H'00000018 (24: EM17) H'0000019 (25: EM18) * Information after "or" is applicable when the Protocol Setting parameter is set to MCP4.) Also, all set val- ues of 4 and higher specify D data registers.	
C3 (83)	0098	Upper Word First Address	H'00000000 to H'0000270F (0 to 9999)	
C3 (83)	009A	Lower Word Receive Data Wait Time	H'00000064 to H'0000270F (100 to 9999)	


Variable type	Address	Parameter name	Setting (monitor) value	Level
C3 (83)	009B	Communications	H'00000000 to H'00000063 (0 to 99)	Communi
		Node Number		cations
C3 (83)	009C	Upload Setting 1	H'00000000 to H'00000060 (0 to 98)	setting
C3 (83)	009D	Upload Setting 2	H'00000000 to H'00000060 (0 to 98)	
C3 (83)	009E	Upload Setting 3	H'00000000 to H'00000060 (0 to 98)	
C3 (83)	009F	Upload Setting 4	H'00000000 to H'00000060 (0 to 98)	
C3 (83)	00A0	Upload Setting 5	H'00000000 to H'00000060 (0 to 98)	
C3 (83)	00A1	Upload Setting 6	H'00000000 to H'00000060 (0 to 98)	
C3 (83)	00A2	Upload Setting 7	H'00000000 to H'00000060 (0 to 98)	
C3 (83)	00A3	Upload Setting 8	H'00000000 to H'0000060 (0 to 98)	
C3 (83)	00A4	Upload Setting 9	H'00000000 to H'00000060 (0 to 98)	
C3 (83)	00A5	Upload Setting 10	H'00000000 to H'00000060 (0 to 98)	
C3 (83)	00A6	Upload Setting 11	H'00000000 to H'00000060 (0 to 98)	
C3 (83)	00A7	Upload Setting 12	H'00000000 to H'00000060 (0 to 98)	
C3 (83)	00A8	Upload Setting 13	H'00000000 to H'00000060 (0 to 98)	
C3 (83)	00A9	Download Setting 1	H'0000001E to H'00000060 (30 to 98)	
C3 (83)	00AA	Download Setting 2	H'0000001E to H'00000060 (30 to 98)	
C3 (83)	00AB	Download Setting 3	H'0000001E to H'00000060 (30 to 98)	
C3 (83)	00AC	Download Setting 4	H'0000001E to H'00000060 (30 to 98)	
C3 (83)	00AD	Download Setting 5	H'0000001E to H'00000060 (30 to 98)	
C3 (83)	00AE	Download Setting 6	H'0000001E to H'00000060 (30 to 98)	
C3 (83)	00AF	Download Setting 7	H'0000001E to H'00000060 (30 to 98)	
C3 (83)	00B0	Download Setting 8	H'0000001E to H'00000060 (30 to 98)	
C3 (83)	00B1	Download Setting 9	H'0000001E to H'00000060 (30 to 98)	
C3 (83)	00B2	Download Setting 10	H'0000001E to H'00000060 (30 to 98)	
C3 (83)	00B3	Download Setting 11	H'0000001E to H'00000060 (30 to 98)	
C3 (83)	00B4	Download Setting 12	H'0000001E to H'00000060 (30 to 98)	
C3 (83)	00B5	Download Setting 13	H'0000001E to H'00000060 (30 to 98)	
C3 (83)	00B6	SP Slope	H'00000001 to H'0000270F (0.001 to 9.999)	
C3 (83)	00B7	SP Offset	H'FFFFF831 to H'0000270F	
			(-199.9 to 999.9: Input type = Temperature input)	
			(-1999 to 9999: Input type = Analog input)	

## 3-2 Status and Status 2


The figure below shows the structure of the status data.

#### Status Structure

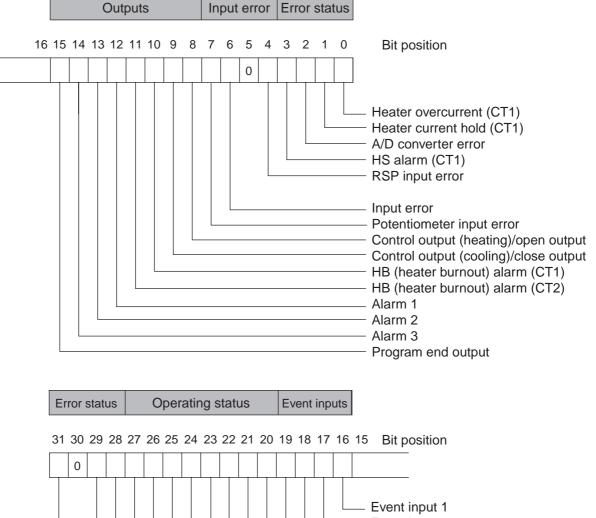

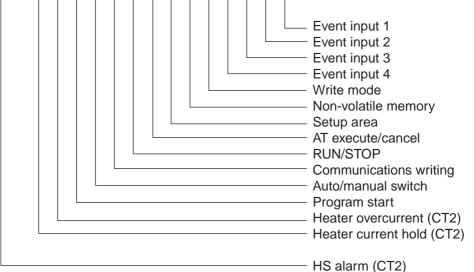

3

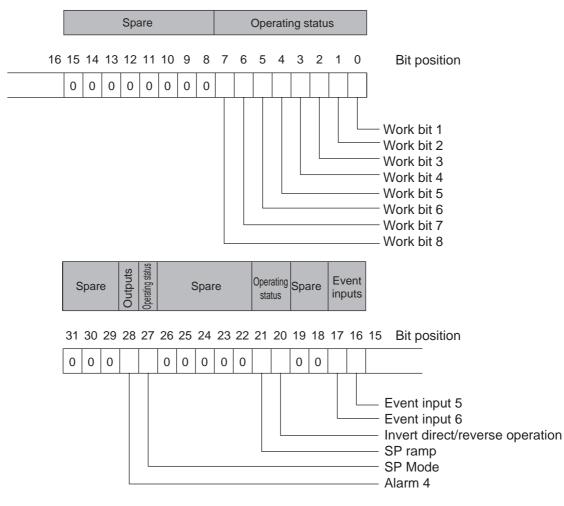

#### • Status 2 Structure

#### • Status Details

Bit position		Ctatura	Bit Description		
Bit pos	sition	Status	0	1	
Status	0	Heater overcurrent (CT1)	Not generated	Generated	
(lower	1	Heater current hold (CT1)*	Update	Hold	
word)	2	A/D converter error	Not generated	Generated	
	3	HS alarm (CT1)	OFF	ON	
	4	RSP input error	Not generated	Generated	
	5	Spare	OFF		
	6	Input error	Not generated	Generated	
	7	Potentiometer input error	Not generated	Generated	
	8	Control output (heating)/open output	OFF	ON	
	9	Control output (cooling)/close output	OFF	ON	
	10	HB (heater burnout) alarm (CT1)	OFF	ON	
	11	HB (heater burnout) alarm (CT2)	OFF	ON	
	12	Alarm 1	OFF	ON	
	13	Alarm 2	OFF	ON	
	14	Alarm 3	OFF	ON	
	15	Program end output	OFF	ON	
Status	16	Event input 1	OFF	ON	
(upper	17	Event input 2	OFF	ON	
word)	18	Event input 3	OFF	ON	
	19	Event input 4	OFF	ON	
	20	Write mode	Backup mode	RAM write mode	
	21	Non-volatile memory	RAM = Non-volatile	RAM ≠ Non-volatile	
			memory	memory	
	22	Setup area	Setup area 0	Setup area 1	
	23	AT execute/cancel	AT canceled	AT execution in	
				progress	
	24	RUN/STOP	Run	Stop	
	25	Communications writing	OFF (disabled)	ON (enabled)	
	26	Auto/manual switch	Automatic mode	Manual mode	
	27	Program start	Reset	Start	
	28	Heater overcurrent (CT2)	Not generated	Generated	
	29	Heater current hold (CT2)	Update	Hold	
	30	Spare	OFF		
	31	HS alarm (CT2)	OFF	ON	

Note1 "Spare" bits are always OFF.

2 When read in setup area 1, the status of the bits will be as follows:

- Overcurrent:
- Last value held
- A/D converter error: Last value held Last value held • Input error:
  - Cleared
- · HB and HS outputs:
- Program end output:
  - Cleared Last value held
- Current hold: · Heating and cooling outputs: Cleared
- Alarm outputs: Cleared
- \* When the control output ON time is less than 30 ms for a control period of 0.1 s or 0.2 s or when it is less than 100 ms for any other control period, the bit is set to "1" and the heater current is held at the last current value.

#### • Status 2 Details

Bit position		Otatua	Bit	Bit Description		
Вітро	sition	Status	0	1		
Status	0	Work bit 1	OFF	ON		
(lower	1	Work bit 2	OFF	ON		
word)	2	Work bit 3	OFF	ON		
	3	Work bit 4	OFF	ON		
	4	Work bit 5	OFF	ON		
	5	Work bit 6	OFF	ON		
	6	Work bit 7	OFF	ON		
	7	Work bit 8	OFF	ON		
	8	Spare	OFF			
	9	Spare	OFF			
	10	Spare	OFF			
	11	Spare	OFF			
	12	Spare	OFF			
	13	Spare	OFF			
	14	Spare	OFF			
	15	Spare	OFF			
Status	16	Event input 5	OFF	ON		
(upper	17	Event input 6	OFF	ON		
word)	18	Spare	OFF			
	19	Spare	OFF			
	20	Invert direct/reverse operation	Not invert	Invert		
	21	SP ramp	OFF	During SP ramp		
	22	Spare	OFF			
	23	Spare	OFF			
	24	Spare	OFF			
	25	Spare	OFF			
	26	Spare	OFF			
	27	SP Mode	Local SP Mode	Remote SP Mode		
	28	Alarm 4	OFF	ON		
	29	Spare	OFF			
	30	Spare	OFF			
	31	Spare	OFF			

Note1 "Spare" bits are always OFF.

2 When read in setup area 1, the status of the bits will be as follows:

• Work bits 1 to 8: Cleared

• SP ramp: Last value held

# Modbus Communications Procedure

Read this section if you are to communicate using the Modbus format.

4-1	Data Format					
		Command Frame				
		Response Frame				
	4-1-3	Error Codes	4-5			
4-2	Funct	ion List	4-6			
4-3	Variab	le Area	4-7			
4-4		ed Description of the Functions				
		Variable Read, Multiple				
	4-4-2	Variable Write, Multiple				
	4-4-3	Variable Write, Single/Operation Command				
	4-4-4	Echoback Test	4-15			

 
### 4-1 Data Format

The data format complies with the Modbus (RTU) communications protocol, so commands from the host and responses from the E5 $\Box$ C are contained in data blocks called frames. The structure of the command and response frames is described below.

In the following explanations, hexadecimal values are expressed by adding the prefix H' before the number, e.g., H'02. Numbers and alphabetic characters without the H' prefix are ASCII characters.

#### 4-1-1 Command Frame

When using RTU mode, start with a silent interval of at least 3.5 character times and end with a silent interval of at least 3.5 character times.

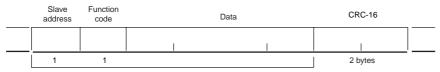

CRC-16 calculation range

	Silent interval of 3.5 character times minimum.		
Slave address         Specify the unit number.           The unit number can be set between H'00 to H'63 hexadecimal (0 to 9 Specify H'00 for a broadcast transmission. No responses will be return broadcast transmissions.			
Function code         The function code is a 1-byte hexadecimal code that indicates the type of consent from the host device.			
Data	This is the text data associated with the specified function code. Specify the required data, such as the variable address or setting data. (Set in hexadecimal.)		
CRC-16	Cyclic Redundancy Check This check code is calculated with the data from the slave address to the end of the data. The check code is 2-byte hexadecimal.		
	Silent interval of 3.5 character times minimum.		

#### • CRC-16 Calculation Example

Messages are processed one byte at a time in the work memory (a 16-bit register known as the CRC register).

 
- (1) The CRC register is initialized to H'FFFF.
- (2) An XOR operation is performed on the content of the CRC register and the first byte of the message, and the result is returned to the CRC register.
- (3) The MSB is packed with zeroes and the CRC register is shifted 1 bit to the right.
- (4) If the bit shifted from the LSB is 0, step 3 is repeated (next bit-shift processing). If the bit shifted from the LSB is 1, an XOR is performed on the content of the CRC register and H'A001, and the result is returned to the CRC register.
- (5) Steps 3 and 4 are repeated until 8 bits are shifted.
- (6) CRC processing continues to the end of the message, as XOR operations are performed on the content of the CRC register and the next byte of the message, step 3 is repeated, and the result is returned to the CRC register.
- (7) The result of the CRC calculation (value in the CRC register) is appended to the last byte of the message.
- Example of Appending the Calculation Result When the calculated CRC value is H'1234, the CRC value is appended to the command frame as follows.

Slave address	Function code	Data	CRC-16
			Low High H'34 H'12
1	1		2 bytes

CRC-16 calculation range

#### 4-1-2 Response Frame

#### • Normal Response Frame

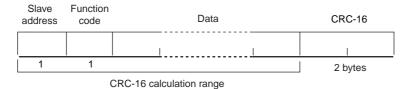

#### • Error Response Frame



CRC-16 calculation range

Slave address	The number specified in the command frame is entered as-is. This is the unit number of the Unit returning the response.	
Function code	This is the received function code with the hexadecimal value of H'80 added to indicate that the response is an error response. Example: Received function code = H'03 Function code in response frame when an error occurred = H'83	
Error code	This code indicates the kind of error that occurred.	
CRC-16	Cyclic Redundancy Check This check code is calculated with the data from the slave address to the end of the data. The check code is 2-byte hexadecimal.	

#### 4-1-3 Error Codes

End code	Name	Description	Error detection priority
H'01	Function code error	An unsupported function code was received.	1
H'02	Variable address error	The specified variable area address is out-of-range.	2
H'03	Variable data error	The amount of data does not match the number of elements. The byte count is not 2 times the number of elements. The response length exceeds the size of the communications buffer. The command code or related information in the operation command is wrong or the write data is not in the setting range.	3
H'04	Operation error	<ul> <li>The write data contents are not allowed in the present operation mode.</li> <li>The Communications Writing parameter is set to "OFF" (disabled).</li> <li>Attempted to write to a parameter in setup area 1 from setup area 0.</li> <li>Attempted to write to a protect parameter from other than the protect level.</li> <li>AT execution is in progress.</li> <li>The command cannot be processed.</li> </ul>	4

#### No Response

In the following cases, the received command will not be processed and a response will not be returned.

Consequently, a timeout error will occur at the host device.

- The slave address in the received command does not match the communications unit number.
- A parity error, framing error, or overrun error occurred due to a problem such as a transfer error.
- A CRC-16 code error occurred in the received command frame.
- There was a time interval of more than 3.5 character times between data packets that make up the command frame.

Furthermore, the specified function's processing will be performed but no response will be returned for broadcast functions (slave address = H'00).

## 4-2 Function List

The following table lists the function codes.

#### **Function Code List**

 
Function code	Name	Process
03 (H'03)	Read variable	This function reads from the variable area.
	(multiple)	It is possible to read two or more consecutive variables.
16 (H'10)	Write variable This function writes to the variable area.	
	(multiple)	It is possible to write two or more consecutive variables.
		It is also possible to broadcast this function (broadcast
		transmission).
06 (H'06)	Write variable	This function writes to the variable area and writes operation
	(Single/operation	commands.
	command)	It is also possible to write to a single parameter by specifying
		the address in 2-byte mode. (This is not supported in 4-byte mode.)
		It is also possible to broadcast this function (broadcast
		transmission.)
08 (H'08)	Echoback Test	This function performs an echoback test.

### 4-3 Variable Area

The variable area is the region of memory used to exchange data with the E5<sup>C</sup> through communications.

Operations such as reading the process value and reading/writing parameters are performed on the variable area.

On the other hand, operation commands do not use the variable area.

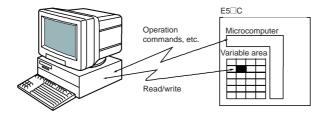

When accessing the variable area, the position of a variable in the variable area is specified with a word identifier, area number, and address in the area.

#### Addresses

An address is appended to each of the variable types. Express addresses in 2-byte hexadecimal and append them for the specified access size.

#### • Number of Elements

The number of elements is expressed in 2-byte hexadecimal. The setting range for the number of elements varies according to the command.

#### Four-byte Mode

One element uses 2 bytes of data, so specify two-element units. Reading and writing in 4-byte units is executed by specifying an even address and specifying the number of elements in multiples of 2.

#### **Two-byte Mode**

One element uses 2 bytes of data, so specify one-element units. Reading and writing in 2-byte data units is executed by specifying 1-element units.

#### Set Values

The values read from the variable area or written to the variable area are expressed in hexadecimal, ignoring the decimal point position. (Negative values are expressed in 2's complement format.) Example: D'105.0  $\rightarrow$  H'0000041A

The variables are 4-digit or 8-digit hexadecimal values. Negative values are expressed in 2's complement format. The values are hexadecimal values with no decimal point indication.

For example, if the E5 $\Box$ C's process value is read in 4-byte mode when the process value is 105.0, the read value will be H'0000041A (105.0  $\rightarrow$  1050  $\rightarrow$  H'0000041A).

## **4-4 Detailed Description of the Functions**

#### 4-4-1 Variable Read, Multiple

To read from the variable area, set the required data in the command frame, as shown in the following diagram.

#### **Command Frame**

Slave address	Function code	Read start address	Number of Elements	CRC-16
	H'03			
1	1	2	2	2 bytes

Name	Description
Slave address	Specify the E5 C's unit number.
	The unit number can be set between H'01 and H'63 hexadecimal (1 to 99 decimal).
Function code	The Read Variable Area function's function code is H'03.
Read start address	Specify the address containing the data to be read.
	Refer to Section 5 Communications Data for Modbus for details on addresses.
Number of elements	4-byte Mode
	Specify 2 times the number of setting data items as the number of elements to be
	read. The setting range for the number of elements is H'0002 to H'006A (2 to 106).
	When H'006A is set, 53 items of setting data can be read.
	Example: When reading 2 items of setting data, set the number of elements to
	H'0004.
	2-byte Mode
	Specify the number of setting data items to be read as the number of elements.
	The setting range for the number of elements is H'0001 to H'006A (1 to 106).
	When H'006A is set, 106 items of setting data can be read.
	Example: When reading two items of setting data, set the number of elements to
	H'0002.
CRC-16	This check code is calculated with the data from the slave address to the end of the
	data.
	For details on the CRC-16 calculation, refer to CRC-16 Calculation Example in 4-1-1
	Command Frame on page 4-2.

Slave address	Function code	Byte count	Read data (for the number of elements)	CRC-16			
	H'03		I		]		
1	1	1	0 to 212 (2 × 106)	2			
Ν	lame		De	scription			
Slave add	lress	The va	lue from the command frame is	entered as-is.			
Function of	code	This is	This is the received function code.				
		When	When the function ended normally, the function code is left as-is. When an error				
		occurr	occurred, the hexadecimal value of H'80 is added to the function code to indicate				
		that th	that the response is an error response.				
		Examp	Example: Received function code = H'03				
			Function code in response frame when an error occurred = H'83				
Byte coun	ıt	Contai	Contains the number of bytes of read data.				
Read data		Contai	Contains the number of setting data items that were read.				
CRC-16		This cl	This check code is calculated with the data from the slave address to the end of the				
		data.	data.				
		For de	For details on the CRC-16 calculation, refer to CRC-16 Calculation Example in 4-1-1				
		Comm	Command Frame on page 4-2.				

#### **Response Frame**

#### **Response Code**

Function code	Error code	Error name	Cause
H'83	H'02	Variable address	The read start address is incorrect.
		error	
	H'03	Variable data error	The number of elements exceeds the
			allowed range.
H'03		Normal completion	No errors were found.

#### **Reading Undisplayed Parameters**

It is possible to read the parameters that are not displayed due to display settings as well as the parameters that are never displayed in the Controller.

• Example Command and Response

The following example shows the command and response when reading the process value (slave address: H'01).

Process Value in 4-byte Mode

Address: H'0000; Read data: H'000003E8 (100.0 °C)

Command:	01 03	00 00	00 02	C4 0B(CRC-16)
Response:	01 03	04 00	0 00 03 E8	FA 8D(CRC-16)

Process Value in 2-byte Mode

Address: H'2000; Read data: H'03E8 (100.0 °C)

Command:	01 03	20 00	00 01	8FCA(CRC-16)
Response:	01 03	02 03	8 E8 B	8 FA(CRC-16)

#### 4-4-2 Variable Write, Multiple

To write data to the variable area, set the required data in the command frame, as shown in the following diagram.

#### **Command Frame**

Slave address	Function code	Write start address	Number of Elements	Byte count	Write data (for the number of elements)	CRC-16
	H'10					
1	1	2	2	1	0 to 208 (2 × 104)	2

Name	Description						
Slave address	Specify the E5 <sup>C</sup> 's unit number. The unit number can be set between H'01 and H'63 hexadecimal (1 to 99 decima						
Function code	The Write Variable Area function's function code is H'10.						
Write start address	Specify the starting address where the setting data will be written.						
	Refer to Section 5 Communications Data for Modbus for details on addresses						
Number of elements	nts 4-byte Mode						
	Specify 2 times the number of setting data items as the number of elements to be written.						
	The setting range for the number of elements is H'0002 to H'0068 (2 to 104).						
	When H'0068 is set, 52 items of setting data can be read.						
	Example: When writing 2 items of setting data, set the number of elements to						
	H'0004.						
	2-byte Mode						
	Specify the number of setting data items to be written as the number of elements. The setting range for the number of elements is H'0001 to H'0068 (1 to 104).						
	When H'0068 is set, 104 items of setting data can be read.						
	Example: When reading two items of setting data, set the number of elements to						
	H'0002.						
Byte count	Specify the number of bytes of write data.						
CRC-16	This check code is calculated with the data from the slave address to the end of the						
	data.						
	For details on the CRC-16 calculation, refer to CRC-16 Calculation Example in 4-1-1						
	Command Frame on page 4-2.						

Slave address	Function code	Write start address	Number of Elements	CRC-16				
	H' 10				]			
1	1	2	2	2 bytes				
Ν	lame		Descri	ption				
Slave add	dress	The value from the	ne command frame i	s entered as-is.				
Function	code	This is the receiv	ed function code.					
		When the functio	When the function ended normally, the function code is left as-is. When					
		an error occurred	n error occurred, the hexadecimal value of H'80 is added to the function					
		code to indicate t	code to indicate that the response is an error response.					
		Example: Receiv	ved function code =	H'10				
		Functi	on code in response	frame when an error o	occurred =			
		H'90						
Write star	rt address	This is the receiv	ed write start addres	SS.				
Number of	of elements	This is the receiv	This is the received number of elements.					
CRC-16		This check code	This check code is calculated with the data from the slave address to the					
		end of the data.	end of the data.					
		For details on the	For details on the CRC-16 calculation, refer to CRC-16 Calculation					
		Example in 4-1-1	Example in 4-1-1 Command Frame on page 4-2.					

#### • Response Frame

#### **Response Code**

Function code	Error code	Error name	Cause
H'90	H'02	Variable address	The write start address is incorrect.
		error	
	H'03	Variable data error	The amount of data does not match the number of elements.
			<ul> <li>The byte count is not 2 times the number</li> </ul>
			of elements.
			• The write data is out of the setting range.
	H'04	Operation error	The Controller cannot write the data in its
			present operating status.
			The write data contents are not allowed in
			the present operation mode.
			• The Communications Writing parameter is set to "OFF" (disabled).
			• Attempted to write to a parameter in setup area 1 from setup area 0.
			<ul> <li>Attempted to write to a protect parameter</li> </ul>
			from other than the protect level.
			AT execution is in progress.
H'10		Normal completion	No errors were found.

#### Writing Undisplayed Parameters

It is possible to write the parameters that are not displayed due to display settings as well as the parameters that are never displayed in the Controller.

• Example Command and Response

The following example shows the command/response when writing the Alarm Value Upper Limit 1 and Alarm Value Lower Limit 1 parameters.

(In this case, the slave address is H'01.)

 
Four-byte Mode

Alarm Value Upper Limit 1

• Address: H'010A; Write data: H'000003E8 (when 1000)

Alarm Value Lower Limit 1

• Address: H'010C; Write data: H'FFFFFC18 (when -1000)

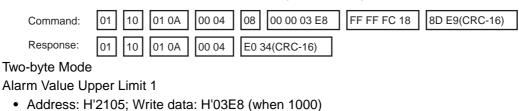

Alarm Value Lower Limit 1

• Address: H'2106; Write data: H' FC18 (when -1000)

Command:	01 10 21 05 00 02	04 03 E8 FC 18	66 BB(CRC-16)
Response:	01 10 21 05 00 02	5B F5(CRC-16)	

#### 4-4-3 Variable Write, Single/Operation Command

This function performs operations such as writing to the variable area (single) and operation commands (communications writing, RUN/STOP, multi-SP, AT execute/cancel, write mode, save RAM data, software reset, move to setup area 1, move to protect level, auto/manual switch, initialize settings, alarm latch cancel, invert direct/reverse operation, program start, and SP mode.)

Writing is enabled in only the 2-byte mode.





#### **Response Frame**

Slave address	Function code	Write variable address	Write data	CRC-16
	H'06			
1	1	2	2	2 bytes

#### (1) Write variable address

Specify the address of the setting data that is to be written. For details on addresses, refer to Section 5 Modbus Communications Procedure.

For an operation command, specify 0000 or FFFF.

Command code	Command content	Related information
00	Communications writing	00: OFF (disabled)
		01: ON (enabled)
01	RUN/STOP	00: Run
		01: Stop
02	Multi-SP	00: Set point 0
		01: Set point 1
		02: Set point 2
		03: Set point 3
		04: Set point 4
		05: Set point 5
		06: Set point 6
		07: Set point 7
03 AT execute/cancel		00: AT cancel
		01: 100% AT execute
		02: 40% AT execute
04	Write mode	00: Backup
		01: RAM write mode
05	Save RAM data	00
06	Software reset	00
07	Move to setup area 1	00
08	Move to protect level	00
09	Auto/manual switch	00: Automatic mode
		01: Manual mode
0B	Parameter initialization	00
0C	Alarm latch cancel	00: Alarm 1 latch cancel
		01: Alarm 2 latch cancel
		02: Alarm 3 latch cancel
		03: HB alarm latch cancel
		04: HS alarm latch cancel
		05: Alarm 4 latch cancel
		0F: All alarm latch cancel
0D	SP Mode	00: Local SP Mode
		01: Remote SP Mode
0E	Invert direct/reverse operation	00: Not invert
		01: Invert
11	Program start	00: Reset
	-	01: Start

#### (2) Command Code and Related Information

#### (3) Response Code

• Normal Completion

Function code	Error code	Name	Description
H'06		Normal	No errors were found.
		completion	

• Error Occurred

Function code	Error code	Name	Description
H'86	H'02	Variable	The write variable address is incorrect.
		address error	
	H'03	Variable data	The write data is incorrect.
		error	<ul> <li>The write data is out of the setting range.</li> </ul>
			<ul> <li>Command code or related information are incorrect.</li> </ul>
	H'04	Operation	The Controller cannot write the data in its
		error	present operating status.
			<ul> <li>The Communications Writing parameter is set to "OFF" (disabled). The command is received regardless of the Communications Writing parameter setting (ON/OFF).</li> <li>Attempted to write to a parameter in setup area 1 from setup area 0.</li> <li>Attempted to write to a protect parameter from other than the protect level.</li> <li>AT execution is in progress.</li> <li>The command cannot be processed. For</li> </ul>
			details, refer to (5) Operation Commands and Precautions following this table.
Noto: For dataila		<u> </u>	A 4.2 Verieble Muite Multiple For details on AT

Note: For details on variable writing, refer to 4-4-2 Variable Write, Multiple. For details on AT, refer to the E5 C Digital Temperature Controllers User's Manual Basic Type (Cat. No. H174).

#### (4) Example Command and Response

The following example shows the command/response for a Stop command. (In this case, the slave address is H'01.)

Stop command (command code: 01; related information: 01)

• Address: H'0000 (fixed)

Write data: H'0101 (Run/Stop, Stop command)

 
Command:	01 0	)6	00 00	01 01	49 9A(CRC-16)
Response:	01 0	)6	00 00	01 01	49 9A(CRC-16)

#### (5) Operation Commands and Precautions

This information is the same as that for CompoWay/F. Refer to page 2-17.

#### 4-4-4 Echoback Test

#### **Command Frame**

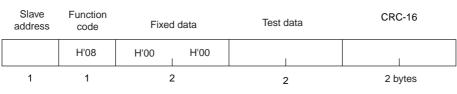

#### **Response Frame**

Slave address	Function code	Fixed	data	Test data	CRC-16
	H'08	H'00	H'00		
1	1	2	2	2	2 bytes

Note: When the command is executed normally, the response returns the same data sent in the command.

#### (1) Test Data

Enter any 2-byte hexadecimal data.

#### (2) Response Code

Function code	Error code	Name	Description
H'88	H'03	Variable data error	A different value (not H'00, H'00) was
			returned.
H'08		Normal completion	No errors were found.

#### (3) Example Command and Response

The following example shows the command/response for an Echoback Test command. (In this case, the test data is H'1234.)

(In this case, the slave address is H'01.)

Command:	01 08	00 00	12 34	ED 7C(CRC-16)
Response:	01 08	00 00	12 34	ED 7C(CRC-16)

# **Communications Data for Modbus**

This section lists the details of the communications data in the Modbus communications protocol.

5-1	Variable Area (Setting Range) List 5-2	2
5-2	Status	5

## 5-1 Variable Area (Setting Range) List

#### • Four-byte Mode

One element uses 4 bytes of data (H'00000000 to H'FFFFFFF), so specify two-element units. Reading and writing in 4-byte units is executed by specifying an even address and specifying the number of elements in multiples of 2.

• Two-byte Mode

One element uses 2 bytes of data (H'0000 to H'FFFF), so specify one-element units. Reading and writing in 2-byte data units is executed by specifying 1-element units.

The following table lists the variable area. Items expressed in hexadecimal in the "Setting (monitor) value" column are the setting range in the Modbus specifications. Values in parentheses "()" are the actual setting range.

When there is a section reference for a setting item, refer to that reference for details.

Address				
Four-byte mode	Two-byte mode	Parameter name	Setting (monitor) value	Level
0000	2000	PV	Temperature: Use the specified range for each sensor. Analog: Scaling lower limit – 5% FS to Scaling upper limit + 5% FS	Operation
0002	2001	Status <sup>*1*2</sup>	Refer to 5-2 Status for details.	
0004	2002	Internal Set Point <sup>*1</sup>	SP lower limit to SP upper limit	7
0006	2003	Heater Current 1 Value Monitor	H'0000000 to H'00000226 (0.0 to 55.0)	
0008	2004	MV Monitor (Heating)	Standard:         H'FFFFFCE to H'0000041A (-5.0 to 105.0)           Heating and cooling:         H'00000000 to H'0000041A (0.0 to 105.0)	
000A	2005	MV Monitor (Cooling)	H'00000000 to H'0000041A (0.0 to 105.0)	]
0106	2103	Set Point	SP lower limit to SP upper limit	]
0108	2104	Alarm Value 1	H'FFFFF831 to H'0000270F (-1999 to 9999)	]
010A	2105	Alarm Value Upper Limit 1	H'FFFFF831 to H'0000270F (-1999 to 9999)	
010C	2106	Alarm Value Lower Limit	H'FFFFF831 to H'0000270F (-1999 to 9999)	
010E	2107	Alarm Value 2	H'FFFFF831 to H'0000270F (-1999 to 9999)	
0110	2108	Alarm Value Upper Limit 2	H'FFFFF831 to H'0000270F (-1999 to 9999)	
0112	2109	Alarm Value Lower Limit 2	H'FFFFF831 to H'0000270F (-1999 to 9999)	
0404	2402	PV	Temperature: Use the specified range for each sensor. Analog: Scaling lower limit – 5% FS to Scaling upper limit + 5% FS	
0406	2403	Internal Set Point <sup>*1</sup>	SP lower limit to SP upper limit	
0408	2404	Multi-SP No. Monitor	H'00000000 to H'00000007 (0 to 7)	1
040C	2406	Status <sup>*1*2</sup>	Refer to 5-2 Status for details.	1
040E	2407	Status <sup>*3</sup>	Refer to 5-2 Status for details.	1
0410	2408	Status 2*1*2	Refer to 5-2 Status for details.	1
0412	2409	Status 2*1*3	Refer to 5-2 Status for details.	1
0420	2410	Decimal Point Monitor	H'00000000 to H'00000003 (0 to 3)	1

<sup>\*</sup>1 Not displayed on the Controller display.

\*2 In 2-byte mode, the rightmost 16 bits are read.

\*3 In 2-byte mode, the leftmost 16 bits are read.

Address				
Four-byte mode	Two-byte mode	Parameter name	Setting (monitor) value	Level
0500	2500	Operation/Adjustment Protect	H'00000000 (0):       No restrictions in operation and adjustment levels         H'00000001 (1):       Move to adjustment level is prohibited.         H'00000002 (2):       Display and change of only "PV" and "PV/SP" parameters is allowed.         H'00000003 (3):       Display of only "PV" and "PV/SP" parameters is allowed.	Protect
0502	2501	Initial Setting/Communications Protect	<ul> <li>H'0000000 (0): Move to initial setting/communications setting level is allowed. (Move to advanced function setting level is displayed.)</li> <li>H'00000001 (1): Move to initial setting/communications setting level is allowed. (Move to advanced function setting level is allowed. (Move to advanced function setting level is not displayed.)</li> <li>H'00000002 (2): Move to initial setting/communications setting level is prohibited.</li> </ul>	
0504	2502	Setting Change Protect	<ul> <li>H'0000000 (0): OFF (Changing of setup on controller display is allowed.)</li> <li>H'00000001 (1): ON (Changing of setup on controller display is prohibited.)</li> </ul>	
0506	2503	PF Key Protect	H'00000000 (0): OFF H'00000001 (1): ON	-
0508	2504	Move to Protect Level	H'FFFF831 to H'0000270F (-1999 to 9999)	
050A	2505	Password to Move to Protect Level	H'FFFFF831 to H'0000270F (-1999 to 9999) (Can only be set. The monitor value is always H'00000000.)	
050C	2506	Parameter Mask Enable	H'00000000 (0): OFF H'00000001 (1): ON	
050E	2507	Changed Parameters Only	H'00000000 (0): OFF H'00000001 (1): ON	
0600	2600	Manual MV	Standard Models Standard control: H'FFFFFCE to H'0000041A (-5.0 to 105.0) Heating and cooling control: H'FFFFBE6 to H'0000041A (-105.0 to 105.0) Position-proportional Models Close position-proportional control with the Direct Setting of Position Proportional MV parameter set to ON: H'FFFFFCE to H'0000041A (-5.0 to 105.0)	Manual control
0602	2601	Set Point	SP lower limit to SP upper limit	Operation
0604	2602	Remote SP Monitor	Remote SP lower limit –10% FS to Remote SP upper limit +10% FS	
0608	2604	Heater Current 1 Value Monitor	H'00000000 to H'00000226 (0.0 to 55.0)	
060A	2605	MV Monitor (Heating)	Standard control:         H'FFFFFCE to H'0000041A (-5.0 to 105.0)           Heating and cooling control:         H'00000000 to H'0000041A (0.0 to 105.0)	
060C	2606	MV Monitor (Cooling)	H'00000000 to H'0000041A (0.0 to 105.0)	1
060E	2607	Valve Opening Monitor	H'FFFFF9C to H'0000044C (-10.0 to 110.0)	1

Address		Denemater	Cotting (magnitud) and a	Loval
our-byte mode	Two-byte mode	Parameter name	Setting (monitor) value	Level
0702	2701	Proportional Band (Cooling)	H'00000001 to H'0000270F (0.1 to 999.9)	Adjustment
0704	2702	Integral Time (Cooling)	H'00000000 to H'0000270F (0 to 9999: Integral/derivative time unit is 1 s.) (0.0 to 999.9: Integral/derivative time unit is 0.1 s.)	
0706	2703	Derivative Time (Cooling)	H'00000000 to H'0000270F (0 to 9999: Integral/derivative time unit is 1 s.) (0.0 to 999.9: Integral/derivative time unit is 0.1 s.)	
0708	2704	Dead Band	H'FFFFF831 to H'0000270F (-199.9 to 999.9 for temperature input) (-19.99 to 99.99 for analog input)	
070A	2705	Manual Reset Value	H'00000000 to H'000003E8 (0.0 to 100.0)	
070C	2706	Hysteresis (Heating)	H'00000001 to H'0000270F (0.1 to 999.9 for temperature input) (0.01 to 99.99 for analog input)	
070E	2707	Hysteresis (Cooling)	H'00000001 to H'0000270F (0.1 to 999.9 for temperature input) (0.01 to 99.99 for analog input)	
0710	2708	Control Period (Heating)	H'FFFFFFFE (-2): 0.1 s H'FFFFFFFF (-1): 0.2 s H'00000000 (0): 0.5 s H'00000001 to H'00000063 (1 to 99)	Initial settin
0712	2709	Control Period (Cooling)	H'FFFFFFFE (-2): 0.1 s H'FFFFFFFF (-1): 0.2 s H'00000000 (0): 0.5 s H'00000001 to H'00000063 (1 to 99)	
0714	270A	Position Proportional Dead Band	H'00000001 to H'00000064 (0.1 to 10.0)	Adjustment
0716	270B	Open/Close Hysteresis	H'00000001 to H'000000C8 (0.1 to 20.0)	
0718	270C	SP Ramp Time Unit	H'00000000 (0): EU/second H'00000001 (1): EU/minute H'00000002 (2): EU/hour	Advanced function setting
071A	270D	SP Ramp Set Value	H'00000000 (0): OFF H'00000001 to H'0000270F (1 to 9999)	Adjustment
071C	270E	SP Ramp Fall Value	H'FFFFFFFF (–1): Same (Same as SP Ramp Set Value.) H'00000000 (0): OFF H'00000001 to H'0000270F (1 to 9999)	
071E	270F	MV at Stop	Standard Models	
0722	2711	MV at PV Error	Standard control: H'FFFFFCE to H'0000041A (-5.0 to 105.0) Heating and cooling control: H'FFFFBE6 to H'0000041A (-105.0 to 105.0) Position-proportional Models Close position-proportional control with the Direct Setting of Position Proportional MV parameter set to ON:	
			H'FFFFFCE to H'0000041A (-5.0 to 105.0) Floating position-proportional control or the Direct Setting of Position Proportional MV parameter set to OFF: H'FFFFFFF to H'00000001 (-1 to 1)	
0726	2713	MV Change Rate Limit	H'00000000 to H'000003E8 (0.0 to 100.0)	
0730	2718	PV Input Slope Coefficient	H'00000001 to H'0000270F (0.001 to 9.999)	
0734	271A	Heater Current 1 Value Monitor	H'00000000 to H'00000226 (0.0 to 55.0)	Operation
0736	271B	Heater Burnout Detection 1	H'00000000 to H'000001F4 (0.0 to 50.0)	Adjustment
0738	271C	Leakage Current 1 Monitor	H'00000000 to H'00000226 (0.0 to 55.0)	Operation
073A	271D	HS Alarm 1	H'00000000 to H'000001F4 (0.0 to 50.0)	Adjustment
0746	2723	Process Value Input Shift	H'FFFFF831 to H'0000270F (-1999 to 9999)	
0748	2724	Heater Current 2 Value Monitor	H'00000000 to H'00000226 (0.0 to 55.0)	Operation

Addı	ess			
Four-byte mode	Two-byte mode	Parameter name	Setting (monitor) value	Level
074A	2725	Heater Burnout Detection 2	H'00000000 to H'000001F4 (0.0 to 50.0)	Adjustment
074C	2726	Leakage Current 2 Monitor	H'00000000 to H'00000226 (0.0 to 55.0)	Operation
074E	2727	HS Alarm 2	H'00000000 to H'000001F4 (0.0 to 50.0)	Adjustment
0750	2728	Soak Time Remain	H'00000000 to H'0000270F (0 to 9999)	Operation
0752	2729	Soak Time	H'00000001 to H'0000270F (1 to 9999)	Adjustment
0754	272A	Wait Band	H'00000000 (0): OFF H'00000001 to H'0000270F (0.1 to 999.9 for Temperature input) (0.01 to 99.99 for Analog input)	
0756	272B	Remote SP Input Shift	H'FFFFF831 to H'0000270F (-1999 to 9999)	
0758	272C	Remote SP input Slope Coefficient	H'00000001 to H'0000270F (0.001 to 9.999)	
0800	2800	Input Digital Filter	H'00000000 to H'0000270F (0.0 to 999.9)	Advanced
0808	2804	Moving Average Count	H'00000000 (0): OFF H'00000001 (1): 2 times H'00000002 (2): 4 times H'00000003 (3): 8 times H'00000004 (4): 16 times H'00000005 (5): 32 times	function setting

Address				
Four-byte mode	Two-byte mode	Parameter name	Setting (monitor) value	Level
0810	2808	Extraction of Square Root Low-cut Point	H'00000000 to H'000003E8 (0.0 to 100.0)	Adjustment
0900	2900	SP 0	SP lower limit to SP upper limit	
0904	2902	Alarm Value 1	H'FFFF831 to H'0000270F (-1999 to 9999)	Operation
0906	2903	Alarm Value Upper Limit	H'FFFF831 to H'0000270F (-1999 to 9999)	
0908	2904	Alarm Value Lower Limit	H'FFFF831 to H'0000270F (-1999 to 9999)	
090A	2905	Alarm Value 2	H'FFFF831 to H'0000270F (-1999 to 9999)	
090C	2906	Alarm Value Upper Limit 2	H'FFFF831 to H'0000270F (-1999 to 9999)	
090E	2907	Alarm Value Lower Limit 2	H'FFFF831 to H'0000270F (-1999 to 9999)	
0910	2908	Alarm Value 3	H'FFFF831 to H'0000270F (-1999 to 9999)	1
0912	2909	Alarm Value Upper Limit 3	H'FFFF831 to H'0000270F (-1999 to 9999)	
0914	290A	Alarm Value Lower Limit 3	H'FFFF831 to H'0000270F (-1999 to 9999)	
0916	290B	Alarm Value 4	H'FFFF831 to H'0000270F (-1999 to 9999)	
0918	290C	Alarm Value Upper Limit 4	H'FFFF831 to H'0000270F (-1999 to 9999)	-
091A	290D	Alarm Value Lower Limit 4	H'FFFF831 to H'0000270F (-1999 to 9999)	
091C	290E	SP 1	SP lower limit to SP upper limit	Adjustment
0938	291C	SP 2	SP lower limit to SP upper limit	1
0954	292A	SP 3	SP lower limit to SP upper limit	
0970	2938	SP 4	SP lower limit to SP upper limit	
098C	2946	SP 5	SP lower limit to SP upper limit	
09A8	2954	SP 6	SP lower limit to SP upper limit	
09C4	2962	SP 7	SP lower limit to SP upper limit	
0A00	2A00	Proportional Band	H'00000001 to H'0000270F (0.1 to 999.9)	1
0A02	2A01	Integral Time	Standard, heating/cooling, or close position proportional control: H'00000000 to H'0000270F (0 to 9999: Integral/derivative time unit is 1 s.) (0.0 to 999.9: Integral/derivative time unit is 0.1 s.) Floating position-proportional control: H'00000001 to H'0000270F (1 to 9999: Integral/derivative time unit is 1 s.) (0.1 to 999.9: Integral/derivative time unit is 0.1 s.)	
0A04	2A02	Derivative Time	H'00000000 to H'0000270F (0 to 9999: Integral/derivative time unit is 1 s.) (0.0 to 999.9: Integral/derivative time unit is 0.1 s.)	
0A0A	2A05	MV Upper Limit	Standard control or close position-proportional control: MV lower limit + 0.1 to H'0000041A (MV lower limit + 0.1 to 105.0) Heating and cooling control: H'00000000 to H'0000041A (0.0 to 105.0)	
0A0C	2A06	MV Lower Limit	Standard control or close position-proportional control: H'FFFFFCE to MV upper limit -0.1 (-5.0 to MV upper limit -0.1) Heating and cooling control: H'FFFFBE6 to H'00000000 (-105.0 to 0.0)	

Note: The alarm function can also be used in Digital Controllers without auxiliary output terminals. In this case, confirm alarm occurrences via the status data.

Address					
Four-byte mode	Two-byte mode	Parameter name	Setting (monitor) value	Level	
0C00	2C00	Input Type	H'0000000 (0):Pt (-200 to $850^{\circ}$ C/-300 to $1500^{\circ}$ F)H'00000001 (1):Pt (-199.9 to $500.0^{\circ}$ C/-199.9 to $900.0^{\circ}$ F)H'00000002 (2):Pt (0.0 to $100.0^{\circ}$ C/0.0 to $210.0^{\circ}$ F)H'00000003 (3):JPt (-199.9 to $500.0^{\circ}$ C/-199.9 to $900.0^{\circ}$ F)H'00000004 (4):JPt (0.0 to $1300^{\circ}$ C/0.0 to $210.0^{\circ}$ F)H'00000005 (5):K (-200 to $1300^{\circ}$ C/-300 to $2300^{\circ}$ F)H'00000006 (6):K (-20.0 to $500.0^{\circ}$ C/0.0 to $900.0^{\circ}$ F)H'0000007 (7):J (-100 to $850^{\circ}$ C/-100 to $1500^{\circ}$ F)H'0000008 (8):J (-20.0 to $400.0^{\circ}$ C/0.0 to $750.0^{\circ}$ F)H'0000008 (10):T (-199.9 to $400.0^{\circ}$ C/-199.9 to $700.0^{\circ}$ F)H'0000000 (10):T (-199.9 to $400.0^{\circ}$ C/-199.9 to $700.0^{\circ}$ F)H'0000000 (12):L (-100 to $850^{\circ}$ C/-100 to $1500^{\circ}$ F)H'0000000 (12):L (-100 to $850^{\circ}$ C/-300 to $700.0^{\circ}$ F)H'0000000 (12):L (-100 to $400^{\circ}$ C/-300 to $2300^{\circ}$ F)H'0000000 (13):U (-200 to $400^{\circ}$ C/-300 to $2300^{\circ}$ F)H'0000000 (14):U (-199.9 to $400.0^{\circ}$ C/-300 to $2300^{\circ}$ F)H'0000001 (16):R (0 to $1700^{\circ}$ C/0 to $3000^{\circ}$ F)H'0000001 (16):R (0 to $1700^{\circ}$ C/0 to $3200^{\circ}$ F)H'00000012 (18):B (100 to $1800^{\circ}$ C/300 to $3200^{\circ}$ F)H'00000014 (20):PLII (0 to $1,300^{\circ}$ C/0 to $3,200^{\circ}$ F)H'00000015 (21):Infrared temperature sensor (K $140^{\circ}$ F/220^{\circ}C)H'00000016 (22):Infrared temperature sensor (K $440^{\circ}$ F/220^{\circ}C)H'00000017 (23):Infrared temperature sensor (K $440^{\circ}$ F/220^{\circ}C)H'00000018 (24):Infra	Initial setting	
0C02 0C12	2C01 2C09	Temperature Unit Scaling Lower Limit	H'00000000 (0): °C H'00000001 (1): °F H'FFFFF831 to scaling upper limit –1	-	
0C16	2C0B	Scaling Upper Limit	(-1999 to scaling upper limit -1) Scaling lower limit + 1 to H'0000270F (Scaling lower limit + 1 to 9999)		
0C18	2C0C	Decimal Point	H'0000000 to 00000003 (0 to 3)	-	
0C1A	2C0D	Remote SP Upper limit	Input range lower limit to Input range upper limit for temperature input Scaling lower limit to Scaling upper limit for analog input	Advanced function	
0C1C		Remote SP Lower limit	Input range lower limit to Input range upper limit for temperature input Scaling lower limit to Scaling upper limit for analog input	setting	
0C1E	2C0F	PV Decimal Point Display	H'0000000 (0): OFF H'00000001 (1): ON		
0D06	2D03	Control Output 1 Signal	H'00000000 (0): 4 to 20 mA H'00000001 (1): 0 to 20 mA	Initial setting	
0D08	2D04	Control Output 2 Signal	H'0000000 (0): 4 to 20 mA H'00000001 (1): 0 to 20 mA		
0D1E	2D0F	SP Upper Limit	The range of values (without decimal point) is as follows: Temperature input: SP lower limit + 1 to Input range upper limit Analog input: SP lower limit + 1 to Scaling upper limit		
0D20	2D10	SP Lower Limit	The range of values (without decimal point) is as follows: Temperature input: Input range lower limit to SP upper limit – 1 Analog input: Scaling lower limit to SP upper limit – 1		
0D22	2D11	Standard or Heat- ing/Cooling	H'00000000 (0): Standard H'00000001 (1): Heating and cooling	]	

Address					
Four-byte mode	Two-byte mode	Parameter name	Setting (monitor) value	Level	
0D24	2D12	Direct/Reverse Operation	H'00000000 (0): Reverse operation H'00000001 (1): Direct operation	Initial setting	
0D26	2D13	Close/Floating	H'0000000 (0): Floating H'00000001 (1): Close		
0D28	2D14	PID ON/OFF	H'0000000 (0): ON/OFF H'0000001 (1): 2 PID control		
0D2A	2D15	ST	H'0000000 (0): OFF H'00000001 (1): ON		
0D2C	2D16	Program Pattern	H'0000000 (0): OFF H'0000001 (1): STOP H'0000002 (2): CONT		
0D30	2D18	Remote SP Input	H'0000000 (0): 4 to 20 mA H'00000001 (1): 0 to 20 mA H'00000002 (2): 1 to 5 V H'00000003 (3): 0 to 5 V H'00000004 (4): 0 to 10 V	Advanced function setting	
0D32	2D19	Minimum Output ON/OFF Band	H'00000000 to H'000001F4 (0.0 to 50.0)		
0E00	2E00	Transfer Output Type	H'00000000 (0): OFF H'00000001 (1): Set point H'00000002 (2): Set point during SP ramp H'00000003 (3): PV H'00000004 (4): MV (heating) H'00000005 (5): MV (cooling) H'00000006 (6): Valve opening (*Only for Position-proportional Models.)	Initial setting	
0E02	2E01	Transfer Output Signal	H'00000000 (0): 4 to 20 mA H'00000001 (1): 1 to 5 V		
OEOC	2E06	Control Output 1 Assignment	Control output 1 is a relay output or voltage output (for driving SSR): H'0000000 (0): Not assigned. H'00000002 (2): Control output (heating) H'00000003 (3): Alarm 1 H'00000004 (4): Alarm 2 H'00000005 (5): Alarm 3 H'00000006 (6): Alarm 4 H'00000007 (7): Heater alarm H'00000008 (8): HB alarm H'00000008 (8): HB alarm H'00000008 (11): RSP input error H'0000000B (11): RSP input error H'0000000C (12): Program end output* H'0000000E (14): Integrated alarm H'0000000E (14): Integrated alarm H'0000000F (15): Work bit 1 H'0000000F (15): Work bit 2 H'0000001 (16): Work bit 2 H'0000001 (16): Work bit 3 H'00000012 (18): Work bit 5 H'00000013 (19): Work bit 5 H'00000014 (20): Work bit 7 H'00000015 (21): Work bit 7 H'00000016 (22): Work bit 8 When control output 1 is a current output: H'0000000 (0): Not assigned. H'00000002 (2): Control output (cooling)	Advanced function setting	
0E0E	2E07	Control Output 2 Assign- ment	Control output 2 is a relay output or voltage output (for driving SSR): H'00000000 to H'0000006 (0 to 22) Note: Same as for the Control Output 1 Assignment parameter. When control output 2 is a current output: H'00000000 to H'00000002 (0 to 2) Note: Same as for the Control Output 1 Assignment parameter.		

\* P.END (program end output) can be set even when the program pattern is set to OFF, but the function will be disabled.

Address				
Four-byte mode	Two-byte mode	Parameter name	Setting (monitor) value	Level
0E14	2E0A	Event Input Assignment 1	H'0000000 (0): None H'0000000 (1): RUN/STOP H'00000002 (2): Auto/Manual Switch H'00000003 (3): Program Start <sup>*1</sup> H'00000004 (4): Direct/Reverse Operation H'00000005 (5): SP Mode Switch Note: Valid only with a remote SP input. H'0000006 (6): 100% AT Execute/Cancel H'00000006 (6): 100% AT Execute/Cancel H'00000008 (8): Setting Change Enable/Disable H'00000008 (8): Setting Change Enable/Disable H'00000008 (8): Setting Change Enable/Disable Note: Valid only with external communications. H'00000004 (10): Alarm Latch Cancel H'0000000B (11): Multi-SP No. Switch, Bit 0 H'0000000C (12): Multi-SP No. Switch, Bit 1	Initial setting
0E16	2E0B	Event Input Assignment 2	H'0000000D (13): Multi-SP No. Switch, Bit 2 H'00000000 to H'0000000D (0 to 13) Note: Same as for Event Input Assignment 1.	_
0E18	2E0C	Event Input Assignment 3	H'00000000 to H'0000000D (0 to 13) Note: Same as for Event Input Assignment 1.	_
0E1A	2E0D	Event Input Assignment 4	H'00000000 to H'0000000D (0 to 13) Note: Same as for Event Input Assignment 1.	
0E1C	2E0E	Event Input Assignment 5	H'00000000 to H'0000000D (0 to 13) Note: Same as for Event Input Assignment 1.	
0E1E	2E0F	Event Input Assignment 6	H'00000000 to H'0000000D (0 to 13) Note: Same as for Event Input Assignment 1.	
0E20	2E10	Auxiliary Output 1 Assignment	H'0000000 (0): Not assigned. H'00000001 (1): Control output (heating) H'00000002 (2): Control output (cooling) H'00000003 (3): Alarm 1 H'00000005 (5): Alarm 2 H'00000006 (6): Alarm 4 H'00000006 (6): Alarm 4 H'00000007 (7): Heater alarm H'00000008 (8): HB alarm H'00000008 (8): HB alarm H'00000008 (11): RSP input error H'00000008 (11): RSP input error H'00000006 (12): Program end output H'0000000C (12): Program end output H'0000000E (14): Integrated alarm H'0000000E (14): Integrated alarm H'0000000F (15): Work bit 1 H'0000001F (15): Work bit 2 H'0000001F (15): Work bit 5 H'00000012 (18): Work bit 5 H'00000012 (18): Work bit 5 H'00000014 (20): Work bit 6 H'00000015 (21): Work bit 7 H'00000016 (22): Work bit 8	Advanced function setting
0E22	2E11	Auxiliary Output 2 Assignment	H'00000000 to H'00000016 (0 to 22) Note: Same as for the Auxiliary Output 1 Assignment parameter.	
0E24	2E12	Auxiliary Output 3 Assignment	H'00000000 to H'00000016 (0 to 22) Note: Same as for the Auxiliary Output 1 Assignment parameter.	
0E26	2E13	Auxiliary Output 4 Assignment	H'00000000 to H'00000016 (0 to 22) Note: Same as for the Auxiliary Output 1 Assignment parameter.	
0E28	2E14	Transfer Output Upper Limit	H'FFFF831 to H'0000270F (-1999 to 9999) <sup>*2</sup>	Initial setting
0E2A	2E15	Transfer Output Lower Limit	H'FFFF831 to H'0000270F (-1999 to 9999) <sup>*2</sup>	

\*1 PRST (program start) can be set even when the program pattern is set to OFF, but the function will be disabled.

\*2 The setting (monitor) range depends on the transfer output type setting. Refer to Section 6 Parameters in the E5 Digital Temperature Controller User's Manual (Cat. No. H174).

\*3 P.END (program end output) can be set even when the program pattern is set to OFF, but the function will be disabled.

Add	ress			
our-byte mode	Two-byte mode	Parameter name	Setting (monitor) value	Level
0E48	2E24	Extraction of Square Root Enable	H'00000000 (0): OFF H'00000001 (1): ON	Initial setting
0E60	2E30	Travel Time	H'00000001 to H'000003E7 (1 to 999)	
0F00	2F00	Alarm 1 Type	H'0000000 (0): Alarm function OFF H'00000001 (1): Upper and lower-limit alarm H'00000002 (2): Upper-limit alarm H'00000003 (3): Lower-limit alarm H'00000004 (4): Upper and lower-limit range alarm H'00000005 (5): Upper and lower-limit alarm with standby sequence H'00000006 (6): Upper-limit alarm with standby sequence H'00000006 (6): Upper-limit alarm with standby sequence H'00000007 (7): Lower-limit alarm with standby sequence H'00000008 (8): Absolute-value upper-limit alarm H'00000008 (8): Absolute-value upper-limit alarm H'00000008 (10): Absolute-value upper-limit alarm H'0000000B (11): Absolute-value lower-limit alarm with standby sequence H'0000000B (11): Absolute-value lower-limit alarm with standby sequence H'0000000C (12): LBA (Loop Burnout Alarm)	
0F02	2F01	Alarm 1 Latch	H'000000D (13): PV change rate alarm H'0000000E (14): SP absolute-value upper-limit alarm H'0000000F (15): SP absolute-value lower-limit alarm H'0000010 (16): MV absolute-value upper-limit alarm H'00000011 (17): MV absolute-value lower-limit alarm H'00000012 (18): RSP absolute-value upper-limit alarm * H'00000013 (19): RSP absolute-value lower-limit alarm * Valid only with a remote SP input. H'00000000 (0): OFF	Advanced
0504	0500	Alares 4 Unit for size	H'00000001 (1): ON	function setting
0F04	2F02	Alarm 1 Hysteresis	H'00000001 to H'0000270F (0.1 to 999.9 for temperature input) (0.01 to 99.99 for analog input)	Initial setting
0F06	2F03	Alarm 2 Type	H'00000000 to H'00000013 (0 to 19) Note: Same settings as the Alarm 1 Type. However, the LBA (loop burnout alarm) cannot be set.	
0F08	2F04	Alarm 2 Latch	H'0000000 (0): OFF H'00000001 (1): ON	Advanced function setting
0F0A	2F05	Alarm 2 Hysteresis	H'00000001 to H'0000270F (0.1 to 999.9 for temperature input) (0.01 to 99.99 for analog input)	Initial setting
0F0C	2F06	Alarm 3 Type	H'00000000 to H'00000013 (0 to 19) Note: Same settings as the Alarm 1 Type. However, the LBA (loop burnout alarm) cannot be set.	
0F0E	2F07	Alarm 3 Latch	H'0000000 (0): OFF H'00000001 (1): ON	Advanced function setting
0F10	2F08	Alarm 3 Hysteresis	H'00000001 to H'0000270F (0.1 to 999.9 for temperature input) (0.01 to 99.99 for analog input)	Initial setting
0F12	2F09	Alarm 4 Type	H'00000000 to H'0000013 (0 to 19) Note: Same settings as the Alarm 1 Type. However, the LBA (loop burnout alarm) cannot be set.	
0F14	2F0A	Alarm 4 Latch	H'00000000 (0): OFF H'00000001 (1): ON	Advanced function setting
0F16	2F0B	Alarm 4 Hysteresis	H'00000001 to H'0000270F (0.1 to 999.9 for temperature input) (0.01 to 99.99 for analog input)	Initial setting
0F18	2F0C	Standby Sequence Reset	H'00000000 (0): Condition A H'00000001 (1): Condition B	Advanced function
0F1A	2F0D	Auxiliary Output 1 Open in Alarm	H'00000000 (0): Close in alarm H'00000001 (1): Open in alarm	setting

Address				
Four-byte mode	Two-byte mode	Parameter name	Setting (monitor) value	Level
0F1C	2F0E	Auxiliary Output 2 Open in Alarm	H'00000000 (0): Close in alarm H'00000001 (1): Open in alarm	Advanced function
0F1E	2F0F	Auxiliary Output 3 Open in Alarm	H'00000000 (0): Close in alarm H'00000001 (1): Open in alarm	setting
0F20	2F10	Auxiliary Output 4 Open in Alarm	H'00000000 (0): Close in alarm H'00000001 (1): Open in alarm	
0F22	2F11	Alarm 1 ON delay	H'00000000 to H'000003E7 (0 to 999)	
0F24	2F12	Alarm 2 ON delay	H'00000000 to H'000003E7 (0 to 999)	
0F26	2F13	Alarm 3 ON delay	H'00000000 to H'000003E7 (0 to 999)	
0F28	2F14	Alarm 4 ON delay	H'00000000 to H'000003E7 (0 to 999)	
0F2A	2F15	Alarm 1 OFF delay	H'00000000 to H'000003E7 (0 to 999)	
0F2C	2F16	Alarm 2 OFF delay	H'00000000 to H'000003E7 (0 to 999)	
0F2E	2F17	Alarm 3 OFF delay	H'00000000 to H'000003E7 (0 to 999)	
0F30	2F18	Alarm 4 OFF delay	H'00000000 to H'000003E7 (0 to 999)	
1000	3000	PV/SP No. 1 Display Selection	H'0000000 (0):Nothing displayed. H'00000001 (1):PV/SP H'00000002 (2):PV H'00000003 (3):PV/SP (character display) H'00000004 (4):PV/SP/MV H'00000005 (5):PV/SP/Multi-SP No. H'00000006 (6):PV/SP/Soak time remain H'00000006 (8):PV/SP/Ramp SP H'00000008 (8):PV/SP/Alarm value 1	
1002	3001	MV Display Selection	H'00000000 (0): MV (heating) H'00000001 (1): MV (cooling)	
1006	3003	Automatic Display Return Time	H'00000000 (0): OFF H'00000001 to H'00000063 (1 to 99)	
1008	3004	Display Refresh Period	H'0000000 (0):OFF H'00000001 (1): 0.25 H'00000002 (2): 0.5 H'00000003 (3): 1.0	
1010	3008	PV/SP No. 2 Display Selection	H'00000000 to H'00000008 (0 to 8) Note: Same as PV/SP No. 1 Display Selection.	
1014	300A	Display Brightness	H'00000001 to H'00000003 (1 to 3)	
1016	300B	MV Display	H'00000000 (0): OFF H'00000001 (1): ON	
1018	300C	Move to Protect Level Time	H'00000001 to H'0000001E (1 to 30)	
101E	300F	Auto/Manual Select Addition	H'00000000 (0): OFF H'00000001 (1): ON	
1022	3011	PV Status Display Function	H'0000000 (0): OFF H'00000001 (1): Manual H'00000002 (2): Stop H'00000003 (3): Alarm 1 H'00000004 (4): Alarm 2 H'00000005 (5): Alarm 3 H'00000006 (6): Alarm 4 H'00000007 (7): Alarm 1 to 4 OR status H'00000008 (8): Heater alarm	
1024	3012	SV Status Display Function	H'00000000 to H'00000008 (0 to 8) Note: Same as for PV Status Display Function.	

Address				
Four-byte mode	Two-byte mode	Parameter name	Setting (monitor) value	Level
1100	3100	Protocol Setting (See note.)	H'00000000 (0): CompoWay/F H'00000001 (1): Modbus	Communicat ions setting
1102	3101	Communications Unit No.	H'00000000 to H'00000063 (0 to 99)	
1104	3102	Communications Baud Rate *	H'0000003 (3): 9.6 H'00000004 (4): 19.2 H'00000005 (5): 38.4 H'00000006 (6): 57.6	
1106	3103	Communications Data Length *	H'00000007 (7): 7 H'00000008 (8): 8	
1108	3104	Communications Stop Bits *	H'00000001 (1): 1 H'00000002 (2): 2	
110A	3105	Communications Parity *	H'0000000 (0): None H'00000001 (1): Even H'00000002 (2): Odd	
110C	3106	Send Data Wait Time *	H'00000000 to H'00000063 (0 to 99)	
1200	3200	PF Setting	H'0000000 (0): Disabled H'00000001 (1): Run H'00000002 (2): Stop H'00000003 (3): RUN/STOP H'00000004 (4): 100% AT execute/cancel H'00000005 (5): 40% AT execute/cancel H'00000006 (6): Alarm latch cancel H'00000006 (6): Alarm latch cancel H'00000007 (7): Auto/manual switch H'00000008 (8): Monitor/setting item H'00000009 (9): Digit shift key	Advanced function setting
1204	3202	Monitor/Setting Item 1	H'0000000 (0): Disabled H'00000001 (1): PV/SP/multi-SP H'00000002 (2): PV/SP/MV H'00000003 (3): PV/SP/soak time remain H'00000004 (4): Proportional band H'00000005 (5): Integral time H'00000006 (6): Derivative time H'00000007 (7): Alarm value 1 H'00000008 (8): Alarm value upper limit 1 H'00000008 (8): Alarm value upper limit 1 H'00000009 (9): Alarm value lower limit 1 H'00000008 (11): Alarm value 2 H'0000000B (11): Alarm value upper limit 2 H'0000000C (12): Alarm value lower limit 2 H'0000000D (13): Alarm value lower limit 3 H'0000000F (15): Alarm value upper limit 3 H'0000000F (15): Alarm value upper limit 3 H'00000010 (16): Alarm value upper limit 4 H'00000011 (17): Alarm value upper limit 4 H'00000012 (18): Alarm value lower limit 4 H'00000013 (19): PV/SP/Internal set point H'00000015 (21): Proportional Band (Cooling) H'00000016 (22): Integral Time (Cooling) H'00000017 (23): Derivative Time (Cooling)	
1206	3203	Monitor/Setting Item 2	H'00000000 to H'00000017 (0 to 23) Note: Same as for Monitor/Setting Item 1.	
1208	3204	Monitor/Setting Item 3	H'00000000 to H'00000017 (0 to 23) Note: Same as for Monitor/Setting Item 1.	
120A	3205	Monitor/Setting Item 4	H'00000000 to H'00000017 (0 to 23) Note: Same as for Monitor/Setting Item 1.	
120C	3206	Monitor/Setting Item 5	H'00000000 to H'00000017 (0 to 23) Note: Same as for Monitor/Setting Item 1.	

\* After communications parameters have been changed, reset the Digital Controller to enable them.

Address				
Four-byte mode	Two-byte mode	Parameter name	Setting (monitor) value	Level
1302	3301	SP Tracking	H'0000000 (0): OFF H'00000001 (1): ON	Advanced function
1308	3304	PV Dead Band	H'00000000 to H'0000270F (0 to 9999)	setting
130A	3305	Cold Junction Compensation Method	H'0000000 (0): OFF H'00000001 (1): ON	
1312	3309	Integral/Derivative Time Unit	H'00000000 (0): 1 s H'00000001 (1): 0.1 s	
1314	330A	α	H'00000000 to H'00000064 (0.00 to 1.00)	
1318	330C	Manual Output Method	H'0000000 (0): HOLD H'0000001 (1): INIT	
131A	330D	Manual MV Initial Value	Standard control or close position-proportional control: H'FFFFFCE to H'0000041A (–5.0 to 105.0) Heating and cooling control: H'FFFFBE6 to H'0000041A (–105.0 to 105.0)	
131E	330F	AT Calculated Gain	H'00000001 to H'00000064 (0.1 to 10.0)	
1320	3310	AT Hysteresis	H'00000001 to H'0000270F (0.1 to 999.9 for temperature input) H'00000001 to H'000003E7 (0.01 to 9.99 for analog input)	
1322	3311	Limit Cycle MV Amplitude	H'00000032 to H'000001F4 (5.0 to 50.0)	
1328	3314	Heater Burnout Latch	H'00000000 (0): OFF H'00000001 (1): ON	
132A	3315	Heater Burnout Hysteresis	H'00000001 to H'000001F4 (0.1 to 50.0)	
132C	3316	HS Alarm Latch	H'00000000 (0): OFF H'00000001 (1): ON	
132E	3317	HS Alarm Hysteresis	H'00000001 to H'000001F4 (0.1 to 50.0)	
1336	331B	Number of Multi-SP Points	H'00000001 (1): OFF H'00000002 to H'00000008 (1 to 8)	
1338	331C	HB ON/OFF	H'0000000 (0): OFF H'00000001 (1): ON	
133C	331E	Integrated Alarm Assignment	H'00000000 to H'000000FF (0 to 255)	
1340	3320	MV at Stop and Error Addition	H'0000000 (0): OFF H'00000001 (1): ON	
1342	3321	ST Stable Range	H'00000001 to H'0000270F (0.1 to 999.9)	
1344	3322	RT	H'00000000 (0): OFF H'00000001 (1): ON Note: Valid only with temperature input.	
1346	3323	HS Alarm Use	H'0000000 (0): OFF H'00000001 (1): ON	
1348	3324	LBA Detection Time	H'00000000 to H'0000270F (0 to 9999)	
134A	3325	LBA Level	H'00000001 to H'0000270F (0.1 to 999.9 for temperature input) (0.01 to 99.99 for analog input)	
134C	3326	LBA Band	H'0000000 to H'0000270F (0.0 to 999.9 for temperature input) (0.00 to 99.99 for analog input)	
134E	3327	Soak Time Unit	H'0000000 (0): Minutes H'00000001 (1): Hours	
1350	3328	Alarm SP Selection	H'00000000 (0): Set point during SP ramp H'00000001 (1): Set point	
1352	3329	Remote SP Enable	H'00000000 (0): OFF H'00000001 (1): ON	
1356	332B	Manual MV Limit Enable	H'0000000 (0): OFF H'00000001 (1): ON	
1358	332C	Direct Setting of Position Proportional MV	H'0000000 (0): OFF H'00000001 (1): ON	
135A	332D	PV Rate of Change Calculation Period	H'00000001 to H'000003E7 (1 to 999)	

Address				
Four-byte mode	Two-byte mode	Parameter name	Setting (monitor) value	Level
135C	332E	Heating/Cooling Tuning Method	H'00000000 (0): Same as heating control. H'00000001 (1): Linear H'00000002 (2): Air cooling H'00000003 (3): Water cooling	Advanced function setting

\* The logic of the Modbus Write Variable operation command is not affected.

## 5-2 Status

The status data for Modbus is the same as that for CompoWay/F. Refer to page 4-11.

# Programless Communications Ver.1.1

This section describes programless communications for the E5<sup>C</sup>.


6-1	Programless Communications				
	6-1-1				
	6-1-2	Features			
	6-1-3	Operation for Programless Communications			
	6-1-4	Timing of Turning Power ON and OFF			
	6-1-5	Connectable PLCs	6-5		
6-2	E5⊡C	Setup	6-6		
	6-2-1	Protocol Setting	6-6		
	6-2-2	Communications Unit No. and Communications Baud Rate			
	6-2-3	Send Data Wait Time			
	6-2-4	Highest Communications Unit No.			
	6-2-5	Areas and First Address of Linked Data			
	6-2-6	Receive Data Wait Time			
	6-2-7	Communications Node Number			
	6-2-8	Upload Settings and Download Settings			
	6-2-9	Copying Parameter Settings			
	6-2-10	Communications Writing			
	6-2-11	Communications Monitor Parameter			
6-3	Controlling Programless Communications				
	6-3-1	Controlling Programless Communications with the Request Flag			
	6-3-2	Response Flag	6-18		
	6-3-3	Range of Operation for Programless Communications			
	6-3-4	Operation Command Codes			
	6-3-5	Confirming Operation of Programless Communications			
	6-3-6	Write Mode			
	6-3-7	Troubleshooting			
6-4	Conne	ecting to CP-series PLCs	6-21		
	6-4-1	Configuration and Procedure			
	6-4-2	Switch Settings and Wiring			
	6-4-3	PLC Setup			
	6-4-4	E5 C Controller Setup			
	6-4-5	Checking Operation	6-27		
6-5	Connecting to CJ-series PLCs				
	6-5-1	Configuration and Procedure			
	6-5-2	Switch Settings and Wiring			
	6-5-3	PLC Setup			
	6-5-4	E5 C Controller Setup	6-36		
	6-5-5	Checking Operation			

6-6	Conne	cting to MELSEC Q-series PLCs6	-37
	6-6-1	Configuration and Procedure6	3-37
	6-6-2	Wiring	3-38
	6-6-3	PLC Setup	3-38
	6-6-4	E5 C Controller Setup6	3-43
	6-6-5	Checking Operation6	3-44

# 6-1 **Programless Communications**


# 6-1-1 Introduction

With programless communications you can read and write  $E5\square C$  parameters or start and stop the  $E5\square C$  from a Programmable Controller (PLC). Communications with the PLC are performed automatically by the  $E5\square C$ , so there is no need to program communications.

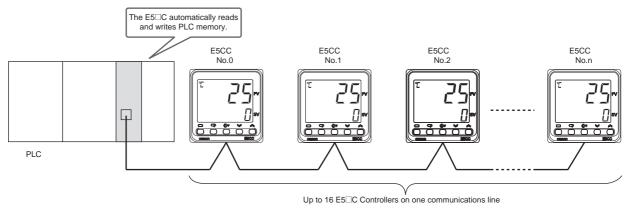

#### 6-1-2 Features

- You can connect to an OMRON CS/CJ-series or CP-series PLC or to a Mitsubishi Q-series or L-series PLC.
- Up to 13 E5 C parameters can be assigned for reading and up to 13 E5 C parameters can be assigned for writing in PLC memory. Each E5 C Controller is allocated 30 words of PLC memory. (A total of 480 words are allocated if 16 E5 C Controllers are connected.)
- You can set the PLC memory area and addresses to use for programless communications.
- You can copy settings between E5 C Controllers to greatly reduce setup work and setting mistakes.

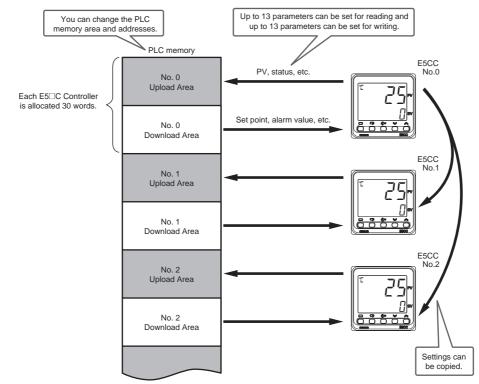

#### 6-1-3 Operation for Programless Communications

Programless communications are performed in the following order of communications unit numbers.

0 (master)  $\rightarrow$  1  $\rightarrow$  2  $\rightarrow$  ...  $\rightarrow$  Highest communications unit number  $\rightarrow$  0  $\rightarrow$  1...

The master (the Controller with communications unit number 0) starts programless communications approximately five seconds after the power supply to it is turned ON. (Communications are not performed until the power supply to the master is turned ON.) When the master starts communications, the slaves (the Controllers with a communications unit number other than 0) also start communications. After communications have started, they will continue for the remaining E5 $\Box$ C Controllers even if one or more of them (including the master) stop. However, the communications cycle will increase while waiting for communications from the stopped E5 $\Box$ C Controllers.

#### 6-1-4 Timing of Turning Power ON and OFF

#### • Turning ON Power

Turn ON the power supply to the E5 $\Box$ C Controllers either after the PLC or at the same time as the PLC. The following may occur if the power supply is turned ON to the PLC after programless communications have started.

- The PLC may detect a communications error.
- The Response Flag may change to *EEEE* once at startup.

#### • Turning OFF Power to Mitsubishi PLCs

To turn OFF the power supply while communications with the PLC are active, change the E5 $\Box$ C Controller to the initial setting level first, and then turn OFF the power supply. If you turn OFF the power supply to an E5 $\Box$ C Controller during programless communications, the PLC may detect a communications error.

#### Restarting only the E5 C Controllers

Use the following procedure to restart the E5 C Controllers.

**1** Move all of the E5<sup>C</sup> C Controllers to the initial setting level.

2 Cycle the power supply in order to the slaves (the Controllers with a communications unit number other than 0) and then to the master (the Controller with a communications unit number of 0), or change the slaves and then the master back to the operation level.

Note: If the above procedure is not followed and the PLC detects an error, clear the error from the program in the PLC.

## 6-1-5 Connectable PLCs

The PLCs that can be connected are given below.

# SYSMAC CS/CJ-series and CP-series PLCs

Name	Model number	Communica	ations ports
Name	iniodel number	Port 1	Port 2
Serial Communications Units	CJ1W-SCU21-V1	RS-232C	RS-232C
	CJ1W-SCU22		
	CJ1W-SCU41-V1	RS-422A/485	
	CJ1W-SCU42	(Cannot be used.)	
	CS1W-SCU21-V1	RS-232C	
Serial Communications Board	CS1W-SCB21-V1	RS-232C	RS-232C
	CS1W-SCB41-V1		RS-422A/485
			(Cannot be used.)
CPU Units	CS1/CJ1M CPU Units	RS-232C	
	CJ2 CPU Units	RS-232C or option	board slot
	CP-series CPU Units	RS-232C	Option board slot
Serial Communications Option Boards *	CP1W-CIF11	RS-422A/485	•
	CP1W-CIF12		

Note: The CJ1W-CIF11 RS-422A Converter is required to use an RS-232C port.


 $^{\ast}$   $\,$  The Option Board is mounted in the option board slot that is given above.

# **MELSEC Q-series and L-series PLCs**

Name	Model number	Communications ports	
Name		Port 1	Port 2
Q Corresponding Serial Communication	0.171C24N	RS-232C	RS-422/485
Module		(Cannot be used.)	
	QJ71C24N-R4	RS-422/485	
L Corresponding Serial Communication	1 174 004	RS-232C	
Module	LJ71C24	(Cannot be used.)	

# 6-2 E5 C Setup

The parameters that are used for programless communications are shown with a gray background in the following diagram. All of these parameters are displayed if you set the Protocol Setting parameter to  $F_{LNS}$  or MEP4. (Some of the parameters are always displayed.) The parameters in the communications setting level are described first, followed by those in the adjustment level.

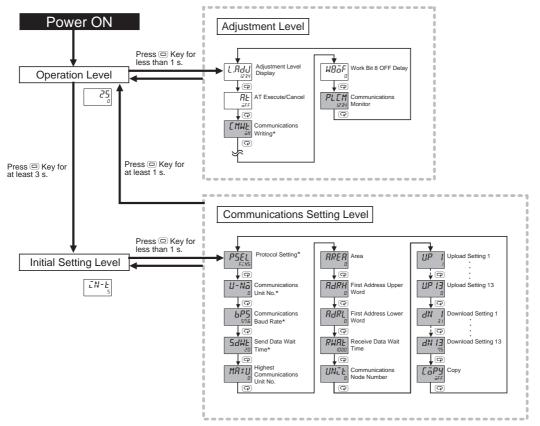

\* These parameters are displayed regardless of the setting of the Protocol Setting parameter.

Note: The Communications Data Length, Communications Stop Bits, and Communications Parity parameters in the communications setting level are not displayed.

#### 6-2-1 Protocol Setting

Set the Protocol Setting parameter to FLN5 to connect to an OMRON PLC and to MEP4 to connect to a Mitsubishi PLC. Set the Protocol Setting parameter to EMP to use component communications. Refer to *6-1-5 Connectable PLCs* for lists of the PLCs that can be connected.

Refer to 7-1 Component Communications for information on component communications.

Communications Setting Level Display condition: None

Parameter name	Displayed characters	Setting range	Default
Protocol Setting	PSEL	EWF: CompoWay/F Mad: ModbusRTU EMP: Component communications FEN5: Host Link (FINS) MEPH: MC protocol (format 4)	EWF

## 6-2-2 Communications Unit No. and Communications Baud Rate

Always assign communications unit numbers in order starting from 0. Do not skip any numbers. Communications unit number 0 is for the master. The numbers from 1 on are for the slaves. We recommend a communications baud rate setting of 57.6. Set the same communications baud rate for all of the E5 $\Box$ C Controllers and the PLC. (Setting the PLC is required only for programless communications.)

Communications Setting Level

Display condition: None

Parameter name	Displayed characters	Setting range	Default
Communications Unit	U-Nā	0: Master	1
No.		1 to 15: Slaves	
<b>Communications Baud</b>	6PS	9.6: 9600bps	9.6
Rate		19.2: 19200bps	
		38.4: 38400bps	
		57.6: 57600bps	

#### 6-2-3 Send Data Wait Time


This is the time that the E5 $\Box$ C will wait from the time that it receives a response from the PLC (or, for component communications, from an E5 $\Box$ C slave) until it sends the next command. We recommend a send data wait time setting of 1. Increase the set value of this parameter if the command is sent too soon to allow the PLC (or, for component communications, the E5 $\Box$ C slave) to receive it.

Communications Setting Level Display condition: None

Parameter name	Displayed characters	Setting range	Default
Send Data Wait Time	SdWŁ	0 to 99 ms	20 ms

#### 6-2-4 Highest Communications Unit No.

Set the Highest Communications Unit No. parameter to the highest communications unit number that is actually set on the connected E5<sup>C</sup> Controllers.

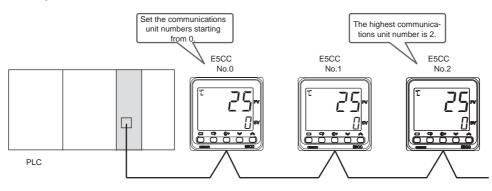

#### **Communications Setting Level**

Display condition: The Protocol Setting parameter must be set to  $F_{L}N5$  or MEP4The Protocol Setting parameter must be set to EMP and the Communications Unit No. parameter must be set to 0 (master).

Parameter name	Displayed characters	Setting range	Default
Highest Communications Unit No.	MAXU	0 to 99	0

## 6-2-5 Areas and First Address of Linked Data

Two areas are used in PLC memory by the E5 $\Box$ C, an upload area and a download area. The upload area is used to monitor the process value, status, and other information from the E5 $\Box$ C. The download area is used to write the set point, alarm values, and other values to the E5 $\Box$ C.

	Address	Data in PLC memory	
	XXXX	Response Flag	This flag indicates the completion of processing for the Request Flag.
Upload		Communications Status	The status that is given at this address is used in the PLC to check the operation of programless communications.
Area	+2	Monitor Value 1	Information from the E5 $\Box$ C, such as the PV or status, is set at
	+3	Monitor Value 2	these addresses. The parameters that are actually used are set in
			the upload settings.
	+14	Monitor Value 13	
	+15	Request Flag	This flag is used to control programless communications.
	+16	Operation	The operation command that corresponds to the code is sent.
Download		Command Code	
	+17	Set Value 1	The set values at these addresses are written to the E5 $\Box$ C, such
Area	+18	Set Value 2	as to the set point or alarm values. The parameters that are
			actually used are set in the download settings.
	+29	Set Value 13	

The Response Flag, Communications Status, Request Flag, and Operation Command Code all have special functions that cannot be changed. Refer to the following sections for application methods.

Request Flag: 6-3-1 Controlling Programless Communications with the Request Flag Response Flag: 6-3-2 Response Flag

Operation Command Code: 6-3-4 Operation Command Codes

Communications Status: 6-3-5 Confirming Operation of Programless Communications

The portion of PLC memory to use is set with the Area, First Address Upper Word, and First Address Lower Word parameters. The E5 $\Box$ C with communications unit number 0 uses the portion of memory that starts with the specified first address. The E5 $\Box$ C with communications unit number 1 uses the portion of memory that starts with the specified first address plus 30 words.

	Address	Data in PLC memory		E5⊡C
	XXXX	Response Flag		
	+1	Communications		
		Status	$\leftarrow$	
Each E5□C	+2	Monitor Value 1		
Controller is				Communications Unit Number 0
allocated 30	+15	Request Flag		Communications only Number 0
words.	+16	Operation		
		Command Code	$\rightarrow$	
	+17	Set Value 1		
	+30	Response Flag		
	+31	Communications	,	No.1
		Status	$\leftarrow$	INO. I
		••••		

Parameter name	Displayed characters	Setting range	Default
Parameter name Area	Displayed characters	0:         DM (D data registers)           1:         EM0 (W link registers)           2:         EM1 (R file registers)           3:         EM2 (ZR file registers)           4:         EM3           5:         EM4           6:         EM5           7:         EM6           8:         EM7           9:         EM8           10:         EM9           11:         EMA           12:         EMB           13:         EMC           14:         EMD           15:         EME           16:         EMF           17:         EM10           18:         EM11           19:         EM12           20:         EM13           21:         EM14           22:         EM15           23:         EM16           24:         EM17           25:         EM18	0
First Address Upper Word	RdRH	Information in parentheses is applicable when the Protocol Setting parameter is set to <i>MLPY</i> . Also, all set values of 4 and higher specify D data registers. 0 to 99	0
First Address Lower Word	RdRL	0 to 9999	0

Communications Setting Level Display condition: The Protocol Setting parameter must be set to FINS or MEP4.

Note: 1 The First Address Upper Word and First Address Lower Word parameters together specify the first address.

Example: If the first address is 123456, set the First Address Upper Word parameter to 12 and the First Address Lower Word parameter to 3456.

2 Set the same first address in all of the E5<sup>C</sup>C Controllers (e.g., set the same value as the value that is set for the E5<sup>C</sup>C with communications unit number 0).

# **Applicable PLC Memory Addresses**

Protocol setting	Area	Applicable address range*
Host Link (FINS)	DM	0 to 32767
	EM0 to EM18	
MC protocol (format 4)	D data registers	0 to 12287
	W link registers	0 to 8191 (1FFF hex)
	R file registers	0 to 32767
	ZR file registers	0 to 999999 (F423F hex)

Note: The address ranges depend on the type of PLC. Refer to the manual for your PLC and set the first address within an applicable range. The last address that is used by the E5 C is calculated as follows:

Last address: First address + (highest communication unit number + 1)  $\times$  30 – 1

Example: The following example is for three E5 $\Box$ C Controllers (highest communications unit number = 2). The first address is set to 100. Last address =  $100 + 3 \times 30 - 1 = 189$ 

## 6-2-6 Receive Data Wait Time

The receive data wait time is the time that the E5 $\Box$ C waits for a response from the PLC (or, for component communications, from an E5 $\Box$ C slave). You can normally use the default setting.

If you change the receive data wait time, the time at which programless communications start will change after the power supply is cycled. Use the following formula to calculate the start time.

Start time = Approx. 1 s + Receive data wait time  $\times$  4

Example: For the default setting of 1,000 ms, the start time is approximately 5 s.

**Communications Setting Level** 

Display condition: The Protocol Setting parameter must be set to FLN5 or MEP4.

The Protocol Setting parameter must be set to LMP and the Communications Unit No. parameter must be set to 0 (master).

Parameter name	Displayed characters	Setting range	Default
Receive Data Wait Time	RWAF	100 to 9999 ms	1000 ms

#### 6-2-7 Communications Node Number

Set the communications node number to the Host Link unit number for an OMRON PLC and to the station number for a Mitsubishi PLC.

You can normally use the default setting.

#### **Communications Setting Level**

Display condition: The Protocol Setting parameter must be set to FLN5 or MEP4.

Parameter name	Displayed characters	Setting range	Default
Communications Node Number	UNĒE	0 to 99	0

#### 6-2-8 Upload Settings and Download Settings

There are 13 upload settings and 13 download settings.

#### Communications Setting Level

Display condition: The Protocol Setting parameter must be set to FENS or MEP4.

Parameter name	Displayed characters	Setting range	Default		
Upload Setting 1	UP I	0 to 98	1	Communications Monitor	
Upload Setting 2	UP 2		2	Status (Upper Word)	
Upload Setting 3	UP 3		3	Status (Lower Word)	
Upload Setting 4	UР Ч		4	Status 2 (Upper Word)	
Upload Setting 5	UP S		6	Decimal Point Monitor	
Upload Setting 6	UP 6		7	Process Value	
Upload Setting 7	UPη		8	Internal Set Point	
Upload Setting 8	UP 8		11 Heater Current 1 Value		
				Monitor	
Upload Setting 9	UP 9		16	MV Monitor (Heating)	
Upload Setting 10	UP 10		0	Nothing assigned.	
Upload Setting 11	UPII		0	Nothing assigned.	
Upload Setting 12	UP 12		0	Nothing assigned.	
Upload Setting 13	UP 13		0	Nothing assigned.	

Parameter name	Displayed characters	Setting range	Default		
Download Setting 1	dN I	30 to 98	31	Set Point	
Download Setting 2	dN 2		61	Proportional Band	
Download Setting 3	AN 3		62	Integral Time	
Download Setting 4	dN 4		63	Derivative Time	
Download Setting 5	dN S		32	Alarm Value 1	
Download Setting 6	dN 6		33	Alarm Value Upper Limit 1	
Download Setting 7	dN 7		34 Alarm Value Lower Limit 1		
Download Setting 8	dN 8		35 Alarm Value 2		
Download Setting 9	dN 9		36 Alarm Value Upper Limit 2		
Download Setting 10	dN 10		37 Alarm Value Lower Limit 2		
Download Setting 11	dNII		45	Heater Burnout Detection 1	
Download Setting 12	9N 15	]	57	Process Value Input Shift	
Download Setting 13	dN 13	1	75	SP Ramp Set Value	

## • Example of Changing a Setting:

To set the Alarm Value 3 parameter for Download Setting 11, you would change the set value from 45 (Heater Burnout Detection 1) to 38 (Alarm Value 3).

		5 5			0
		Set value			
(;;	0	Nothing assigned.	gs	54	S
ing:	1	Communications Monitor	tti	55	S
sett	2	Status (Upper Word)	Se	56	S
ad	3	Status (Lower Word)	bad	57	F
Upload settings (Cannot be used for download settings.)	4	Status 2 (Upper Word)	Upload or Download Settings	58	F
NO	5	Status 2 (Lower Word)	No C	59	F
or o	6	Decimal Point Monitor	or	60	F
d fe	7	Process Value	ad	61	F
nse	8	Internal Set Point	Jplc	62	l
be	9	Multi-SP No. Monitor		63	C
Jot	10	Remote SP Monitor		64	F
anı	11	Heater Current 1 Value Monitor		65	l
0	12	Heater Current 2 Value Monitor		66	Γ
nge	13	Leakage Current 1 Monitor		67	Γ
setti	14	Leakage Current 2 Monitor		68	Ν
ad s	15	Soak Time Remain		69	ŀ
plo	16	MV Monitor (Heating)		70	ŀ
5	17	MV Monitor (Cooling)		71	S
	18	Valve Opening Monitor		72	۷
	19	Spare		73	Ν
				74	Ν
S	30	Nothing assigned.		75	S
ttinç	31	Set Point		76	S
Set	32	Alarm Value 1		77	Ν
ad	33	Alarm Value Upper Limit 1		78	Ν
/ulc	34	Alarm Value Lower Limit 1		79	Ν
õ	35	Alarm Value 2		80	E
Upload or Download Settings					F
ad	36	Alarm Value Upper Limit 2		81	۷
old	37	Alarm Value Lower Limit 2		82	۷
ر	38	Alarm Value 3		83	۷
	39	Alarm Value Upper Limit 3		84	۷
	40	Alarm Value Lower Limit 3		85	۷
	41	Alarm Value 4		86	۷
	42	Alarm Value Upper Limit 4		87	۷
	43	Alarm Value Lower Limit 4		88	۷
	44	Manual MV		89	۷
	45	Heater Burnout Detection 1		90	۷
	46	Heater Burnout Detection 2		91	۷
	47	HS Alarm 1		92	۷
	48	HS Alarm 2		93	۷
	49	SP 0		94	۷
	50	SP 1		95	۷
	51	SP 2		96	۷
	52	SP 3		97	F
	50			00	

You can use the settings in the following table for the upload settings and download settings.

Set value SP 5 SP 6 SP 7 Process Value Input Shift Process Value Slope Coefficient Remote SP Input Shift Remote SP Input Slope Coefficient Proportional Band Integral Time Derivative Time Proportional Band (Cooling) Integral Time (Cooling) Derivative Time (Cooling) Dead Band Manual Reset Value Hysteresis (Heating) Hysteresis (Cooling) Soak Time Wait Band MV at Stop MV at PV error SP Ramp Set Value SP Ramp Fall Value MV Upper Limit MV Lower Limit MV Change Rate Limit Extraction of Square Root Low-cut Point Work Bit 1 ON Delay Work Bit 1 OFF Delay Work Bit 2 ON Delay Work Bit 2 OFF Delay Work Bit 3 ON Delay Work Bit 3 OFF Delay Work Bit 4 ON Delay Work Bit 4 OFF Delay Work Bit 5 ON Delay Work Bit 5 OFF Delay Work Bit 6 ON Delay Work Bit 6 OFF Delay Work Bit 7 ON Delay Work Bit 7 OFF Delay Work Bit 8 ON Delay Work Bit 8 OFF Delay Position Proportional Dead Band 98 **Open/Close Hysteresis** 

Note: 1 If nothing is assigned for an upload setting, the corresponding address in the upload area will contain 0. If nothing is assigned for a download setting, nothing will be done in the download area.

2 If the same value is set for more than one download setting, only the download setting with the lower number will be valid. The other download setting will be treated as if nothing was assigned. All upload settings are valid even if the same value is set more than once.

53

SP 4

# 6-2-9 Copying Parameter Settings

You can copy the settings of all parameters except for the Communications Unit No. parameter from the master (i.e., the Controller with communications unit number 0) to one or more of the slaves (i.e., the Controllers with communications unit numbers other than 0). Copying parameters is possible only between Controllers with the same model number. You also cannot copy parameter settings to a Controller with a version that is older than the version of the master. All of the slaves are automatically reset after the copying operation is completed. Make sure that the system will not be adversely affected before you copy parameter settings.

Case in which copying	The model numbers and versions are the same.
is possible	Example:E5CC-RX2ASM-002(V1.1) $\rightarrow$ E5CC-RX2ASM-002(V1.1)
	The model numbers are different.
Cases in which copying	Example:E5CC- <b>R</b> X2ASM-002 → E5CC- <b>Q</b> X2ASM-002
is not possible	The version of the slave receiving the copy is older.
	Example: E5CC-RX2ASM-002(V1.1) $\rightarrow$ E5CC-RX2ASM-002(V1.0)

#### **Communications Setting Level**

Display condition: The Protocol Setting parameter must be set to *LMP*, *FLNS*, or *MLPY* and the Communications Unit No. parameter must be set to 0 (master).

Parameter name	Displayed characters	Setting range	Default
Сору	Сару	۵۶۶ (Copying failed: ٤0**)	ōFF
		<i>ALL</i>	
		1 to 15	

## **Copying Procedure Starting from the Initial Status**

- (1) Connect the master and slaves with RS-485 connections and turn ON the power supply.
- (2) Set the Communications Unit No. parameters of the slaves in order starting from 1 and then return to the operation level.
- (3) Set all of the parameters in the master except for those in the communications setting level.
- (4) Change the master to the communications setting level and change the communications settings as given below.

Change the Protocol Setting parameter, set the Communications Unit No. parameter to 0, set the Communications Baud Rate parameter to 57.6, set the Send Data Wait Time parameter to 1, and set the Highest Communications Unit No. parameter to the highest communications unit number that is set.

Change the other parameters in the communications setting level as required.

Do not return to the operation level while you are changing the parameter settings. If you mistakenly return to the communications setting level, return the Communications Baud Rate parameter to 9.6, return to the operation level, and then set the Communications Baud Rate parameter again.

#### (5) $L \bar{a} P Y$ and execute the copy operation.

If you select *RLL*, the parameters settings will be copied to all of the slaves. If you select a number, the parameters settings will be copied to the slave with the selected communications unit number.

Set value	Description
āFF (EŪ**)	Copying is not in progress. The display will automatically return to $\bar{a}FF$ when the copy operation is completed normally.
	If the copy operation fails, ** will be displayed instead of $\overline{a}FF$ . The asterisks will be replaced with the communications unit number of the slave where copying failed. This value will be maintained until the copy operation is completed normally or until you return to the operation level. Example: If copying failed at the slave with communications unit number 2, $E\overline{a}a$ will be displayed.
ALL	The parameter settings are copied to the slaves starting with the slave with communications unit number 1 and continuing on to the slave with the communications unit number that is set in the Highest Communications Unit No. parameter. When copying is started, the PV display on the slave will change to $\mathcal{L}\bar{a}P^{\mathcal{H}}$ . The copying operation is completed when all of the slaves are reset.
1 to 15	The parameter settings are copied to the slave with the specified communications unit number, and then all of the slaves are automatically reset.


Note: 1 You cannot cancel copying once the copying operation has been started. Even if you change the set value during the copying operation, the current processing will be continued.

2 If copying fails, the copying operation will be aborted and the parameter settings will not be copied to the remaining slaves.

For a Mitsubishi PLC, the ERR. indicator on the Serial Communications Module will light during the copying process, but this does not indicate an error. The ERR. indicator will go out when the PLC is restarted.

Refer to 6-4-4 E5 C Controller Setup for specific copying procedures.

#### Troubleshooting

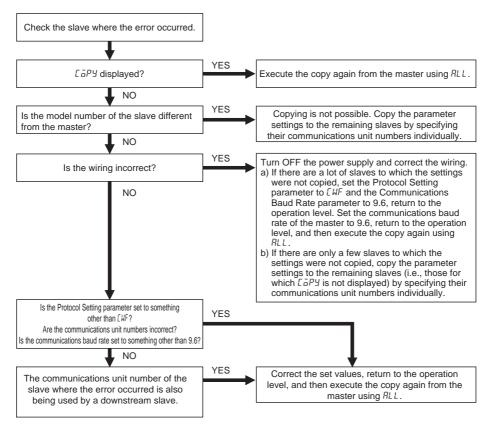

- Note: 1 If you cycle the power supply to the E5 C Controllers after the error occurs, perform procedure "a" given above.
  - 2 If you cannot solve the problem with the above flowchart or if the situation becomes too confusing, cycle the power supply to all of the E5 C Controllers and then perform procedure "a" given above to copy the parameter settings to all of the slaves.

# **Copying Procedure When Replacing a Controller**

- Replacing a Slave (i.e., a Controller with a Communications Unit Number Other Than 0)
  - (1) Replace the E5 $\Box$ C, wire it, and then turn ON the power supply.
  - (2) Change all of the E5 C Controllers to the initial setting level and stop programless communications. The above step is not required for component communications.
  - (3) Set the Communications Unit No. parameter and Communications Baud Rate parameter (57.6) in the new E5<sup>C</sup>C Controller and then return to the operation level.
  - (4) Copy the parameter set values from the master to the new E5<sup>C</sup>C Controller by specifying the number of the Controller.
  - (5) Return all of the slaves and the master in order to the operation level. This completes the replacement. The above step is not required for component communications.
- Replacing the Master (i.e., the Controller with a Communications Unit Number of 0)

To copy the parameter settings, one of the slaves will function as the master, which means that the No. 0 Upload Area and the No. 1 Upload Area will temporarily change in PLC memory. Turn OFF the power supply to the PLC or otherwise make sure that the system will not be adversely affected before you perform the following procedure.

- (1) Perform steps 1 and 2 in the above procedure.
- (2) Record the communications unit number and communications baud rate of the slave with communications unit number 1, and then temporarily change the communications unit number to 0 (master). Do not return to the operation level after you change the communications unit number.
- (3) Set the Communications Unit No. parameter and the Communications Baud Rate parameter of the new E5 C to the values that you recorded, and then change to the operation level.
- (4) Copy the parameter settings from the temporary master, specifying the communications unit number of the new E5 $\Box$ C.
- (5) Reverse the communications unit numbers of the temporary master and the new E5 $\Box$ C.
- (6) Return all of the slaves and the master in order to the operation level. This completes the replacement. The above step is not required for component communications.


#### 6-2-10 Communications Writing

Writing can be enabled and disabled from the PLC (or, for component communications, from the E5 $\Box$ C master). The Communications Writing parameter is normally left ON (enabled). However, if it is necessary to change set values from the display section of the E5 $\Box$ C in an emergency, temporarily change the setting to OFF (disabled). If you disable communications when writing is being performed from the PLC, an error will occur in the PLC. (An error code will be set in the Response Flag in PLC memory.) If

you cycle the power supply to the  $E5\square C$  or move to the initial setting level and then go back to the operation level, the Communications Writing parameter will automatically change to ON.

#### 6-2-11 Communications Monitor Parameter

This parameter displays the communications cycle time of the E5 $\Box$ C. If communications with the PLC are not possible, *L.ERR* is displayed and then the cycle time is displayed again when communications are restored.

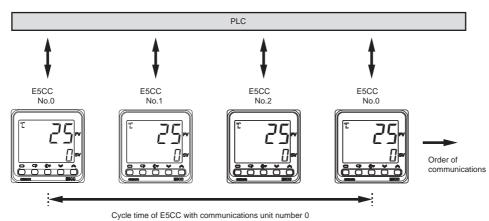

#### Adjustment Level

Display condition: The Protocol Setting parameter must be set to FENS or MEP4.

Parameter name	Displayed characters	Monitor range*	Default
Communications Monitor	PLEM	Normal operation: 0 to 9999 ms. If 9,999 ms is exceeded, دودو is displayed. Error: ٤.٤RR	

Note: If this parameter is monitored in PLC memory, the cycle time is given as 0 to FFFF hex (0 to 65,535 decimal). An error is indicated by FFFF hex.


# 6-3 Controlling Programless Communications

The section describes the methods that are used to control programless communications from the PLC.

## 6-3-1 Controlling Programless Communications with the Request Flag


There are the following three ways to control programless communications. The Request Flag in PLC memory is used to change the control method.

# 1. Updating Monitor Values (Disable Writing Request)

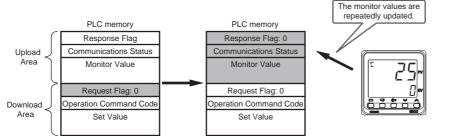


If you set the Request Flag to 0, the Response Flag will change to 0 and the monitor values will be updated.

# 2. Writing Set Values and Updating Monitor Values (Enable Writing Request)

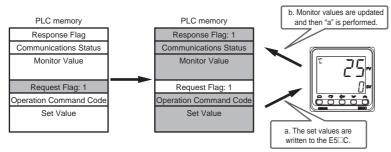

If you set the Request Flag to 1, the set values will be written to the E5 $\Box$ C and then the operation command will be written to the E5 $\Box$ C. Finally the Response Flag will change to 1 and the monitor values will be updated. The operation command is processed only the first time, but the set values are written each time. Therefore, you cannot change the parameters that are specified for download settings at the E5 $\Box$ C. To change parameters that are specified for download settings at the E5 $\Box$ C. To change parameters that are specified for download settings at the E5 $\Box$ C. To change parameters that are specified for download settings.

# 3. Initializing the Download Area

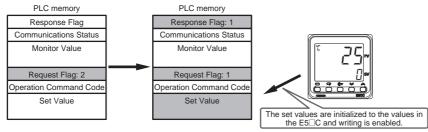

If you set the Request Flag to 2, the set values in the download area will be initialized to the values from the E5 $\Box$ C and then the Request Flag and Response Flag will change to 1. Finally, the operation described above for control method 2 is performed.

#### 6-3-2 Response Flag

The Response Flag changes as shown below for the values of the Request Flag.

Request Flag	Response Flag		
Request riag	Normal	Error	
0: Disable Writing	0 *	EEEE	
1: Enable Writing	1	EDD I to ED I3 BDDD or Operation Command Code	
2: Initialize Download Areas	1	EEEE	

<sup>\*</sup> If a communications error prevents reading data for the Request Flag, the Response Flag will change to *EEE*.

Response Flag at error	Cause of error
EEEE	There was no response or a communications error occurred when reading the download area.
E00 / to E0 /3 *1	The write data is out of the setting range.
	The Communications Writing parameter is set to OFF.
8000 (hex) or Operation	The operation command code is incorrect.
Command Code *2	• The current status of the E5 C prevents it from acknowledging the operation command.
	The Communications Writing parameter is set to OFF.

\*1 The Response Flag gives the number of the download setting where the error occurred. If more than one error occurs, the smallest number is given first. When the error is cleared, the next error number is given. Example: If errors occur for download settings 10 and 12, the Response Flag will be *E*<sup>1</sup>/<sub>0</sub>.

\*2 An OR of 8000 and the operation command code is given. If a setting range error occurs at the same time, indicating the operation command error will be given priority.

Example: If an error occurs for operation command code 1101, the Response Flag will be 9  $I_{2}^{0}$  I.

#### • Precautions for AT (Auto-tuning)

Do not change the set values in the download area from the start of auto-tuning until auto-tuning is completed or canceled. Programless communications cannot be used to change the set values of the  $E5\squareC$  after auto-tuning starts. Also, if the Request Flag is set to 1 (Enable Writing) at the completion of auto-tuning, the set values in the download area are initialized to the set values from the  $E5\squareC$ . This is to update the PID constants. (It occurs even if PID constants are not set in the download area.) To prevent initialization, change the Request Flag to 0 (Disable Writing) after auto-tuning starts. If you change the Request Flag to 1 (Enable Writing) after the completion of auto-tuning, the values in PLC memory will be written to the  $E5\squareC$ . If you change the Request Flag to 2 (Initialize Download Areas) after the completion of auto-tuning, the download area will be initialized with the set values from the  $E5\squareC$ .

#### Precautions for ST (Self-tuning)

If you use self-tuning and set PID constants in the download area, always leave the Request Flag set to 1 (Enable Writing).\* If you change the Request Flag from 0 (Disable Writing) to 1 (Enable Writing) during operation, the PID constants that were found with self-tuning will be overwritten with the values from PLC memory.

You can change the Request Flag to 2 (Initialize Download Areas) at the start of programless communications.

#### 6-3-3 Range of Operation for Programless Communications

Programless communications start operating after the power supply is turned ON or after the E5 $\Box$ C is reset. They stop operating when the initial setting level is entered.

Levels		Programless communications
Operation level, adjustment level, manual control level, monitor/setting item level, and protect level	Setting area 0	Operates
Initial setting level, communications setting level, advanced function setting level, and calibration level	Setting area 1	Stops

# 6-3-4 Operation Command Codes

Operation command	Operation command code	Switch
RUN/STOP	0100	RUN
	0101	STOP
Multi-SP	0200	SP 0
	0201	SP 1
	0202	SP 2
	0203	SP 3
	0204	SP 4
	0205	SP 5
	0206	SP 6
	0207	SP 7
AT Execute/Cancel	0300	AT Cancel
	0301	100% AT Execute
	0302	40% AT Execute
Write Mode	0400	Backup Mode
	0401	RAM Write Mode
Save RAM Data	0500	Save RAM Data
Software Reset	0600	Software Reset
Auto/Manual	0900	Automatic Mode
	0901	Manual Mode
Alarm Latch Cancel	0C00	Alarm 1 Latch Cancel
	0C01	Alarm 2 Latch Cancel
	0C02	Alarm 3 Latch Cancel
	0C03	Heater Burnout Latch Cancel
	0C04	HS Alarm Latch Cancel
	0C05	Alarm 4 Latch Cancel
	0C0F	All Latch Cancel
SP Mode	0D00	Local SP Mode
	0D01	Remote SP Mode
Invert Direct/Reverse	0E00	Do Not Invert
Operation	0E01	Invert
Program Start	1100	Reset
	1101	Start

The following table gives the operation command codes that can be set. For details on operation commands, refer to 2-3-8 Operation Command.

## 6-3-5 Confirming Operation of Programless Communications

You can check the operation of programless communications in the Communications Status in the upload area.

The value of the Communications Status changes between 0 and 1 each time the upload area is updated.

## 6-3-6 Write Mode

The E5 $\Box$ C normally writes the set values to non-volatile memory (i.e., in Backup Mode). If you frequently change set values with programless communications, use an operation command to change to RAM Write Mode.

In RAM Write Mode, however, the set values will be restored to the values in non-volatile memory every time the power supply is cycled. If you need to maintain the current set values before the power supply is turned OFF, use an operation command to save them to RAM before the power supply turns OFF.

ဓ-္မ မ

# 6-3-7 Troubleshooting

Possible problems that can occur with programless communications and corrective actions are given in the following table.

Status	Cause and corrective action	Page
The Response Flag changes to $E^{I}$ **.	The write value for the set value for download setting ** is	3-3 to 3-7
	out of range.	
	The Communications Writing parameter is set to OFF.	6-15
The Response Flag changes to 8***	The operation command code is incorrect.	6-19
(hex) or 9*** (hex).	The current status of the E5 C prevents it from	2-17 to 2-20
	acknowledging the operation command.	
	The Communications Writing parameter is set to OFF.	6-15
The Response Flag changes to	The power supply to the E5 C Controllers was turned ON	6-4
EEEE.	before the power supply to the PLC.	
	The PLC memory address is out of range.	6-8
	There may be noise interference. Shield the	6-22
	communications line or attach terminating resistance to the	6-33
	end of the communications line.	6-38
<ul> <li>The communications indicator on</li> </ul>	The Highest Communications Unit No. parameter is not set	6-7
the PLC flashes irregularly.	to the highest communications unit number that is actually	
<ul> <li>The value of the Communications</li> </ul>	set.	
Monitor parameter in the E5 $\Box$ C is	Communications unit numbers are not set consecutively	6-7
too long.	from 0 or the same communications unit number is set	
	more than once.	
	The setting of the Communications Baud Rate	
	parameter is not the same for all E5 C Controllers.	
	The E5 $\Box$ C was moved to the initial setting level (setting	6-18
	area 1).	
The communications indicator on	The power supply is not turned ON to the E5 C Controller	6-4
the PLC is not lit.	with communications unit number 0.	
The Communications Monitor	The wiring is not correct.	6-22
parameter in the E5 $\Box$ C is <i>E.ERR</i> .		6-33
		6-38
	The communications settings are not the same between	6-22
	the PLC and the E5 $\Box$ C.	6-33
		6-38
		6-25
	The E5 <sup>C</sup> was moved to the initial setting level (setting area 1).	6-18
	Check the cycle time of the PLC. If it is longer than the	6-10
	value set for the Receive Data Wait Time parameter,	
	change the set value of this parameter so that it is longer	
	than the cycle time.	
The ERR. indicator on the Serial	The power supply to the E5 C Controllers was not turned	6-4
Communications Module is lit (for a	ON or OFF at the proper time.	
Mitsubishi PLC).		


Note: For information on other problems, refer to A-2 Troubleshooting.

# 6-4 Connecting to CP-series PLCs

#### 6-4-1 Configuration and Procedure

The following configuration is used as an example in giving the setup and application procedures for programless communications.

- All of the E5CC Controllers must be the same model. (Copying parameter settings is not possible if the models are different.)
- D0000 to D0089 are used in the PLC memory. The default E5CC parameter allocations are used.
- A commercially available USB2.0, A/B cable is used.

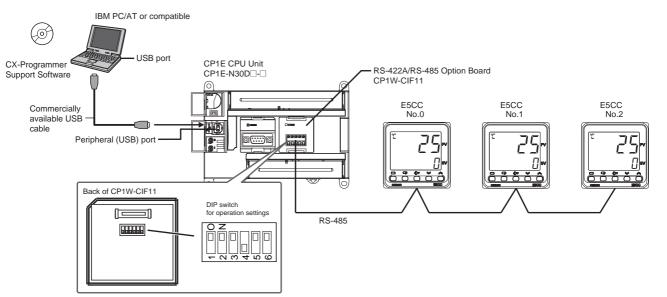

Note: Refer to the *CX-Programmer Operation Manual* (Cat. No. W446) for information on installing the CX-Programmer and USB driver.

The application procedure is given below.


START	
Set the switches and wire the system.	Set the switches on the CP1W-CIF11 and wire it to the E5CC Controllers.
<b>↓</b>	
Set up the PLC.	Use the CX-Programmer to set up communications on the CP1E to enable communicating with the E5CC Controllers.
<b>\</b>	
Set up the E5 C Controllers.	Set up programless communications in the E5CC Controllers.
<b>\</b>	
Check operation.	Use the CX-Programmer to confirm that programless communications are operating.
L	
END	

#### 6-4-2 Switch Settings and Wiring

Before you attach the CP1W-CIF11 to the CP1E, turn OFF pin 4 on the DIP switch for operation settings on the back of the CP1W-CIF11 and turn ON the rest of the pins.

Pin	OFF	ON	Setting
1	No terminating resistance	Terminating resistance on both ends	Terminating resistance selection
2	4-wire	2-wire	2-wire or 4-wire selection
3	4-wire	2-wire	Same as above.
4			Not used.
5	RS control disabled. (Signal always received.)	RS control enabled.	RS control selection for RD
6	RS control disabled. (Signal always sent.)	RS control enabled.	RS control selection for SD

Wire the CP1W-CIF11 to the E5CC Controllers as shown below.

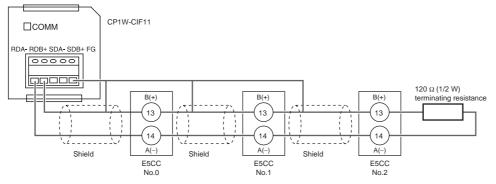

Note: 1 The maximum transmission distance is 50 m for the CP1W-CIF11 and 500 m for the CP1W-CIF21.
2 For wiring methods, refer to A-3-2 Recommended RS-422A/485 Wiring in the CP1E CPU Unit Hardware User's Manual (Cat. No. W479).

#### 6-4-3 PLC Setup

Set up communications on the CP1E to enable communicating with the E5CC Controllers. PLC operation will stop and the power supply will be cycled during the setup procedure. Make sure that this will not create any problems in the controlled system.

#### Connecting to the PLC

- (1) Connect the computer to the CP1E with a USB cable and then start the CX-Programmer.
- (2) Select PLC Auto Online Direct Online from the menu bar.

CX-Programmer	
File View PLC Tools Help	
Auto Online Munice	0-8 8-1
A X Q Q III S III III III III III III III I	-1/

(3) Select the USB connection Check Box and click the Connect Button.

Direct Online	
Goes online automatically. Select connection type and press [Connect] button.	
Connection Type Serial connection (also when using USB-Serial conversion cable) Serial port of PC COM1 Connects at baud rate 115,200 bps USB connection USB connection Connection will automatically be made to the PLC connect the PC via USB cable. Please select ""Serial connection" when using USB-Ser	
Connect Cancel	

(4) Select the *Transfer IO table and Special Unit Setup* Check Box and click the Yes Button.

CX-Programmer
Do you wish to transfer program from the PLC after onlined automatically?
↓ Transfer ID table and Special Unit Setup
Yes No

(5) After the data has been transferred, click the OK Button.



 
# **Communications Settings for the Serial Communications Option Board**

box will be displayed. Click the Yes Button.

 The PLC operating mode must be changed to PROGRAM mode to enable changing the communications settings in the PLC Setup.
 Select PLC – Operating Mode – Program from the menu bar. A confirmation dialog

📟 Untitled - CX-Programmer - [NewPLC1.NewProgram1.Section1 [Diagram]] File Edit View Instat PLC Program Simulation Tools Window Help 🙆 Work Online Ctrl+W 🗅 🗳 🔚 🔂 🖓 ١ q 12 Auto O<u>n</u>line • a X Q Q 8 oerating M Program ٢Ŀ F))1 🔼 🔊 🖓 🖓 🗗 😭 . Ctrl+2 Ctrl+3 建 建 9 🚃 Monitor Á 🛗 Compile <u>A</u>ll PLC Programs F7 🛄 Run Ctrl+4 Program Check Options... dram Name verogramu CX-Programmer v9.3 Make sure that there aren't any problems if the PLC is stopped. Do you wish to switch the PLC into program mode? Yes No

(2) Double-click Settings. The PLC Setup Window will be displayed.

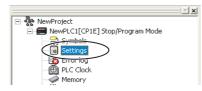

(3) Click the Serial Option Port Tab, select the *Custom* Option, and set the baud rate to 57,600. Leave the other settings at their default values.

Reverse Settings - NewPLC1
File Options Help
Startup/CPU Settings   Timings   Input constant   Built-in RS232C Port   Serial Option Port   Built-in Input   Puls 🕨
Communications Settings Link Words
Custom     Baud     Format     Mode       57600     7,2,E     Host Link (Defaut)     10(default)
Start Code       End Code       PC Link Mode         © Disable       © Received Bytes 256       © ALL         © Set       0x0000       © CR,LF         © Set End Code       0x0000       © Master
Response Timeout     Unit Number     Delay     NT/PC Link Max     PC Link Unit No.       *100 ms     (default 5000ms)     *10 ms     Image: State of the state of t

Note: If you change the unit number, refer to 6-2-7 Communications Node Number.

(4) Select Options – Transfer to PLC from the menu bar in the window that is shown above. The settings will be transferred. Close the window and cycle the power to the PLC. This completes the PLC setup procedure. You will use the CX-Programmer to check operation, so leave it online.

# 6-4-4 E5 C Controller Setup

This section describes the setup for programless communications (or components communications). Refer to 6-2 E5 $\Box$ C Setup for the procedure to display parameters. (Refer to 7-1-3 E5 $\Box$ C Setup for component communications as well.) Here we will assume that all parameters other than those for communications have already been set. Make sure that all of the E5 $\Box$ C Controllers are the same model. The parameter settings cannot be copied if the models are different.

- (1) Set the Communications Unit No. parameter (U-Nā) in the communications setting level to 1 for the No. 1 Controller and set it to 2 for the No. 2 Controller. Leave the other communications settings at their default values.
  The default communications unit number is 1, so the Communications Unit No. parameter for the No. 1 Controller does not need to be changed.
  Always set the communications unit numbers of the slaves in order from 1.
  To enable the changes to the settings, always return to the operation level.
- (2) Change the parameter settings in the communications setting level of the No. 0 Controller to the values that are given below.


Protocol Setting (P5EL): FiN5 (Set MEP4 for a Mitsubishi PLC or set EMP for component communications.)
Communications Unit No. (U-Na) : 0
Communications Baud Rate (bP5): 57.6
Send Data Wait Time (5dWE): 1
Highest Communications Unit No. (MRXU): 2

Do not return to the operation level even after you finish making the settings. Here we will assume that all parameters other than those for communications have already been set. If parameters other than those for communications need to be set, change them first and then change the communications settings last.

- (3) Perform the following procedure to copy the parameter settings in the No. 0 Controller to the No. 1 and No. 2 Controllers.
  - (a) Display the *LaPY* parameter in the communications setting level on the No. 0 Controller.
  - (b) Press the Up Key to select *RLL* and wait for three seconds. The completion of the copy operation must be confirmed, so do not move to any other levels or parameters. If you do change to any other levels or parameters, display the *LaPY* parameter again.
  - (c) The PV displays on the No. 1 and No. 2 Controllers will change to *LaPy* and then these Controllers will be reset.
  - (d) Confirm that the setting of the  $[\bar{a}PY]$  parameter on the No. 0 Controller changes to  $\bar{a}FF$  (i.e., copying completed), and then return the No. 0 Controller to the operation level.

(e) Programless communications should now be operating. Confirm that the COMM indicator on the CP1W-CIF11 is flashing.

If you are using the CJ1W-SCU21-V1, the SD1 and RD1 indicators will flash. If you are using the QJ71C24N-R4, the SD and RD indicators for channel 1 (CH1) will flash. If you are using component communications, change the SPs in the master and confirm that the SPs of the slaves change to the same values.

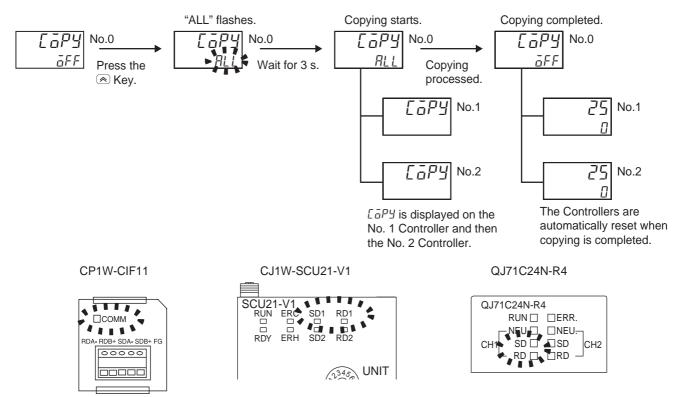

For a Mitsubishi PLC, the ERR. indicator on the Serial Communications Module will light during the copying process. Ignore it and check the operation. The ERR. indicator will go out when the PLC is restarted.

Note: Refer to 6-2-9 Copying Parameter Settings for details on the copying operation.

## 6-4-5 Checking Operation


The SP and RUN/STOP status of the E5 C Controllers will be changed to check operation. Make sure that this will not create any problems in the controlled system.

#### Checking E5CC Monitor Values

(1) The PLC operating mode must be changed to PROGRAM mode to enable changing values in PLC memory.


Perform step 1 in *Communications Settings for the Serial Communications Option Board* in *6-4-3 PLC Setup* to move to PROGRAM mode.

(2) Double-click Memory. The PLC Memory Window will be displayed.

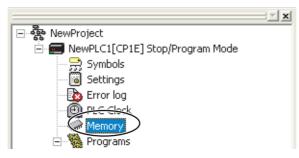

#### (3) We will monitor memory in the PLC Memory Window.

Double-click **D** to select the DM Area in the left pane and then select **Online** – **Monitor** from the menu bar. The Monitor Memory Areas Dialog Box will be displayed. Click the **Monitor** Button.

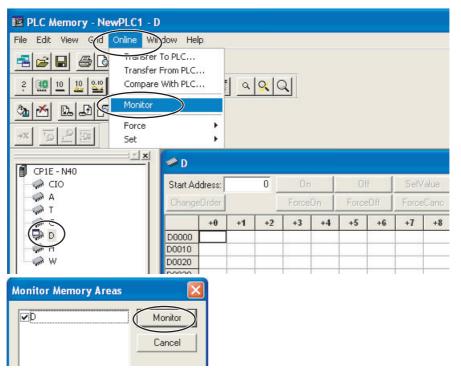

(4) We will change the values that are displayed for PLC memory to signed decimal values.

Select *View – Display – Signed Decimal* from the menu bar. You can select *View – Display – Hexadecimal* to return the display to hexadecimal values.

E PLC M	emory - NewPL	LC1 - D
File Edit	View Grd Onli	ine Window Help
2 🛄	Always On Top Toolbars Status Bar Data Area Wor	₹ <b>\</b> \
×× 10	Display Zoom In Zoom Out 100%	Binary     Binary     Ctrl+PgDn     Ctrl-PgUp     Signed Decimal
1 CP1E	Resize Column: Preferences	Text
- 🥐 c		+0

#### (5) We will check the E5CC monitor values.

The area where monitor values are checked is called the upload area.

D0000 to D0014 is the upload area for the No. 0 Controller, D0030 to D0044 is the upload area for the No. 1 Controller, and D0060 to D0074 is the upload area for the No. 2 Controller.

PLC Memory - NewPLC1 -	[D]										
🧼 File Edit View Grid Online	e Window	/ Help									
<b></b>	B										
2 🤐 10 10 🔐 16 a 🛓	2w 2		<u>م</u>	<u> </u>							
+x <u>₹0 2 m</u>											
<u>× ×</u>	Start Ad	ddress:		0	On	0	)ff.	SetVa	lue		
🗊 CP1E - N40	Chang	eOrder		F	orceOn	Ford	eOff	ForceC	anc		
- 🥋 A		+0	+1	+2	+3	+4	+5	+6	+7	+8	+9
T	D0000	D	0		0	0	0	0	0	0	0
	D0010	)	0	<sub>0</sub> No		0	2	0	0	0	0
D D	D0020	0	0	0	0	0	0	0	0	0	0
H H	D0030	U	0	0 No	1	0	0	0	0	0	0
	D0040 D0050		0	0	0	0	2	0	0	0	0
	D0050	0	-	0		0	0	0		0	-
	D0060	<u></u>	0	n No.		0	2	0	0	0	0
		0	0	0	0	0	0	0	0	0	0
		19	0	19	0	0	0	0	0	0	0

With the default settings, the following parameters are set for the upload areas. Check the values in the upload areas to see if they are the same as those that are given in the following table. (It is not necessary to check addresses for which "---" is given in the *Value* column.)

No.0	No.1	No.2	Parameter	Value
D0000	D0030	D0060	Response Flag (fixed)	0
D0001	D0031	D0061	Communications Status (fixed)	Alternates between 0 and 1.
D0002	D0032	D0062	Communications Monitor	
D0003	D0033	D0063	Status (Upper Word)	
D0004	D0034	D0064	Status (Lower Word)	
D0005	D0035	D0065	Status 2 (Upper Word)	
D0006	D0036	D0066	Decimal Point Monitor	
D0007	D0037	D0067	Process Value	Process Value *
D0008	D0038	D0068	Internal Set Point	
D0009	D0039	D0069	Heater Current 1 Value Monitor	
D0010	D0040	D0070	MV Monitor (Heating)	
D0011	D0041	D0071	Nothing assigned.	
			•••	
D0014	D0044	D0074	Nothing assigned.	

If the default settings are used and a sensor is not connected, the PV display on the E5CC will show an input error (5.*ERR*) and the process value in the upload area will be 1320 (528 hex).

# **Changing E5CC Settings**

#### (1) We will check the area that is used to change E5CC set values.

The area that is used to change the set value is called the download area.

D0015 to D0029 is the download area for the No. 0 Controller, D0045 to D0059 is the download area for the No. 1 Controller, and D0075 to D0089 is the download area for the No. 2 Controller.

🥪 File Edit View Grid Online	<ul> <li>Window</li> </ul>	Help	1								
		ncip									
<u></u>											
2 👥 10 10 🔐 16 a	2 2 4	w 5	a .	9	2						
→x <u>10 1 01</u> x+											
	Start Ad	dress:		0	On	0	lff.	SetVa	lue		
CP1E - N40     GO     CIO	Change	eOrder			ForceOn	Ford	eOff	ForceC	anc		
		+0	+1	+2	2 +3	+4	+5	+6	+7	+8	+9
T T	D0000	0	0	0	0	0	0	0	0	0	0
			0	0	0	0	2	0	ONO.	0	0
		0									
	D0020		0	0	0	0	0				0
C D H	D0020		0	0	0	0	0	0	0	0	0
∲r c 	D0020 D0030	0	-	1.32	-		-	0	0	0	
C D H	D0020 D0030	0	0	0	0	0	0	0		0	0
C D H	D0020 D0030 D0040 D0050	0	0	0	0	0	0	0	0	0	0
C D H	D0020 D0030 D0040 D0050 D0060		0	0	0	0	0 2 0	0	0 0 No.		0
с В D	D0020 D0030 D0040 D0050 D0060	0	0	0 0 0 0 0	0 0 0 0 0 0	0	0 2 0	0 0 0 0 0 0 0	0 0 No.		0

No.0	No.1	No.2	Parameter	Value (E5CC default settings)
D0015	D0045	D0075	Request Flag (fixed)	1 (0001 hex)
D0016	D0046	D0076	Operation Command Code (fixed)	0 (0000 hex)
D0017	D0047	D0077	Set Point	0 (0000 hex)
D0018	D0048	D0078	Proportional Band	80 (0050 hex)
D0019	D0049	D0079	Integral Time	233 (00E9 hex)
D0020	D0050	D0080	Derivative Time	40 (0028 hex)
D0021	D0051	D0081	Alarm Value 1	0 (0000 hex)
D0022	D0052	D0082	Alarm Value Upper Limit 1	0 (0000 hex)
D0023	D0053	D0083	Alarm Value Lower Limit 1	0 (0000 hex)
D0024	D0054	D0084	Alarm Value 2	0 (0000 hex)
D0025	D0055	D0085	Alarm Value Upper Limit 2	0 (0000 hex)
D0026	D0056	D0086	Alarm Value Lower Limit 2	0 (0000 hex)
D0027	D0057	D0087	Heater Burnout Detection 1	0 (0000 hex)
D0028	D0058	D0088	Process Value Input Shift	0 (0000 hex)
D0029	D0059	D0089	SP Ramp Set Value	0 (0000 hex)

With the default settings, the following parameters are set for the download areas.

(2) We will initialize the download areas with the set values from the E5CC Controllers. The download areas have not been initialized, so we will initialize them with the set values from the E5CC Controllers. Double-click D0015 (Request Flag) in the PLC Memory Window. The following dialog box is displayed. Enter 2 (Initialize Download Areas) and click the OK Button.

Set Value: Signed Decimal	
Value 2 Range	OK Cancel

#### (3) We will confirm that the download areas have been initialized.

When initialization is completed, D0000 (Response Flag) will change to 1 (Normal End) and D0015 (Request Flag) will automatically change to 1 (Enable Writing). Check the download area to see if it has been initialized to the values given in the above table. Confirm this for the No. 1 and No. 2 Controllers as well.

#### (4) We will change the set point for the No. 0 Controller.

Double-click **D0017** (Set Point) in the PLC Memory Window, enter 100 (64 hex) for the value, and then click the **OK** Button. Confirm that D0000 (Request Flag) remains at 1 (Enable Writing) and that the SV Display on the No. 0 Controller changes to 100. Confirm this for the No. 1 and No. 2 Controllers as well.

Set Value: Signed Decimal	
Value 100 Range	OK Cancel

# **Stopping the E5CC Controllers**

(1) We will change the values that are displayed for PLC memory to hexadecimal values. In the PLC Memory Window, select *View – Display – Hexadecimal* from the menu bar.

#### (2) We will stop the No. 0 Controller.

Change the RUN/STOP parameter (R-5) in the operation level of the E5CC to RUN (RUN). For a Controller with event inputs, the Event Input 2 Assignment parameter ( $E^{l'} - \overline{c}$ ) in the initial setting level is set to RUN/STOP ( $5E\overline{a}P$ ), so the RUN/STOP parameter will not be displayed. Change the Event Input 2 Assignment parameter to NONE ( $N\overline{a}N\overline{E}$ ), and then change the RUN/STOP parameter to RUN.

#### (3) We will switch the No. 0 Controller to STOP.

Confirm that **D0015** (Request Flag) in the PLC Memory Window is 0001 (Enable Writing), double-click **D0016** (Operation Command Code), enter 0101 hex (STOP), and then click the **OK** Button.

D0016 will change to 0000, D0000 (Response Flag) will remain at 0001 (Enable Writing), and "STOP" will be displayed on the No. 0 Controller.

Confirm this for the No. 1 and No. 2 Controllers as well.


For details on other operation command codes, refer to 6-3-4 Operation Command Codes.

# 6-5 Connecting to CJ-series PLCs

#### 6-5-1 Configuration and Procedure

The following configuration is used as an example in giving the setup and application procedures for programless communications.

- All of the E5CC Controllers must be the same model. (Copying parameter settings is not possible if the models are different.)
- D0000 to D0089 are used in the PLC memory. The default E5CC parameter allocations are used.
- A commercially available USB2.0, A/B cable is used.

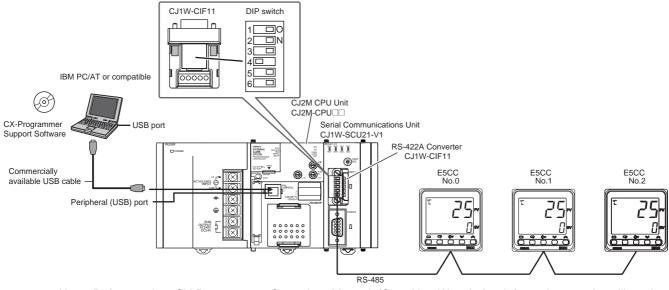

Note: Refer to the *CX-Programmer Operation Manual* (Cat. No. W446) for information on installing the CX-Programmer and USB driver.

START Set the switches and wire the system. Set the switches on the CJ1W-CIF11 and wire it to the E5CC Controllers. Set up the PLC. Use the CX-Programmer to set up communications on the CJ1W-SCU21-V1 to enable communicating with the E5CC Controllers. Set up the E5C Controllers. Set up programless communications in the E5CC Controllers. Use the CX-Programmer to confirm that programless communications are operating. END


The application procedure is given below.

# 6-5-2 Switch Settings and Wiring

Before you attach the CJ1W-CIF11 to the CJ1W-SCU21-V1, turn OFF pin 4 on the DIP switch on the back of the CJ1W-CIF11 and turn ON the rest of the pins.

Pin	OFF	ON	Setting
1	No terminating resistance	Terminating resistance on both ends	Terminating resistance selection
2	4-wire	2-wire	2-wire or 4-wire selection
3	4-wire	2-wire	Same as above.
4			Not used.
5	RS control disabled. (Signal always received.)	RS control enabled.	RS control selection for RD
6	RS control disabled. (Signal always sent.)	RS control enabled.	RS control selection for SD

Wire the CJ1W-CIF11 to the E5CC Controllers as shown below.

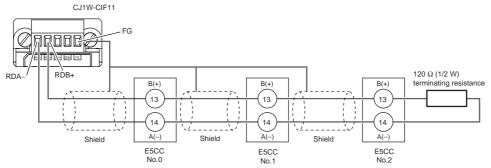

- Note: 1 The maximum transmission distance is 50 m.
  - 2 For wiring methods, refer to Appendix G CJ1W-CIF11 RS-422A Converter in the SYSMAC CJ/NSJ Series Operation Manual (Cat. No. W393).

# 6-5-3 PLC Setup

Set up communications on the CJ1W-SCU21-V1 to enable communicating with the E5CC Controllers. PLC operation will stop and the power supply will be cycled during the setup procedure. Make sure that this will not create any problems in the controlled system.


# **Connecting to the PLC**

Refer to Connecting to the PLC in 6-4-3 PLC Setup.


# **Communications Settings in the Serial Communications Unit (SCU)**

(1) The PLC operating mode must be changed to PROGRAM mode to enable changing the SCU communications settings.


Select *PLC – Operating Mode – Program* from the menu bar. A confirmation dialog box will be displayed. Click the **Yes** Button.

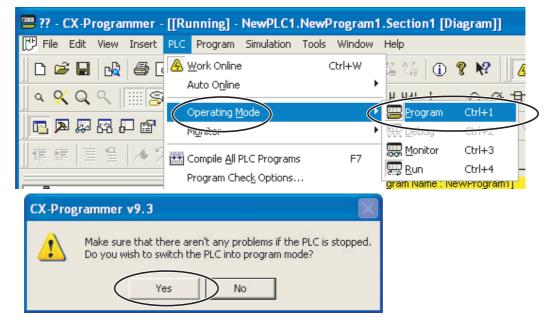

(2) Double-click IO Table and Unit Setup. The IO Table Window will be displayed.

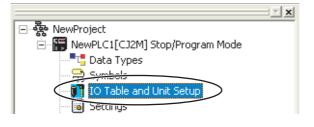

(3) Double-click CJ1W-SCU21-V1. The CJ1W-SCU21-V1 Setting Window will be displayed.

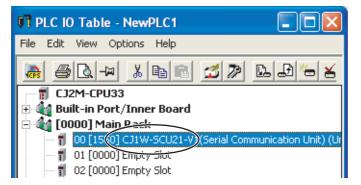

#### (4) We will change the communications settings for port 1.

Set *Port 1: Port settings* to *User settings*, set *Port 1: Baud rate* to *57600 bps*, and then click the **Transfer [PC to Unit]** Button. Use the defaults settings for the other parameters.

CJ1W-SCU21-V1 [View Parameters]					
	Displayed Parameter All Parameters	<u>•</u>			
ſ	Item	Set Value	Unit 🔼		
ľ	Port1: Port settings	User settings			
ľ	Port1: Serial communications mode	Host Link(default)			
	Port1: Data length	7 bits			
	Port1: Stop bits	2 bits			
	Port1: Parity	Even			
	Port1: Baud rate	57600bps 💌			
	Port1: Send delay	Default (0 me)			
	Port1: Send delay (user-specified)	0	ms		
	Port1: CTS control	No			
	Port1: 1:N/1:1 protocol setting	1:N protocol			
	Port1: Host Link compatible device mod	Default(Mode A)			
	Port1: Host Link unit number	0			
	Port1: No-Protocol Start code	0			
		0	~		
	Help	<default>Default[9600b <address>Word:D3020 <type>List</type></address></default>			
	Transfer[Unit to PC] Transfer[PC to Unit]	Compare	Restart		
	Set Defaults	(	DK Cancel		


Note: If you change the unit number, refer to 6-2-7 Communications Node Number.

Click the **Yes** Button. The settings will be transferred. After the data has been transferred, click the **OK** Button.

Edit Parameters 🛛 🕅	Edit Parameters
Downloads parameters to the unit. Are you sure you want to continue?	
	Transfer successful Close

6

Click the **Yes** Button to restart the Unit. Select **All ports** and then click the **OK** Button. A dialog box will be displayed when the Unit has been restarted. Click the **OK** Button. This completes the PLC setup procedure. You will use the CX-Programmer to check operation, so leave it online.

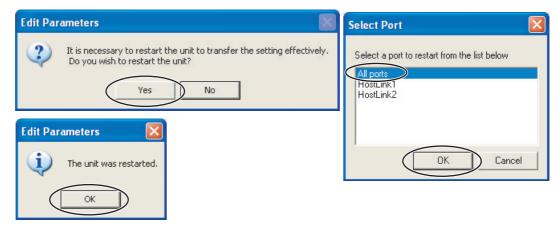

#### 6-5-4 E5 C Controller Setup

Set up programless communications. Perform the procedure that is given in 6-4-4 E5 C Controller Setup.

#### 6-5-5 Checking Operation

Perform the procedure that is given in 6-4-5 Checking Operation.


# 6-6 Connecting to MELSEC Q-series PLCs

#### 6-6-1 Configuration and Procedure

IBM PC/AT or compatible


The following configuration is used as an example in giving the setup and application procedures for programless communications.

- All of the E5CC Controllers must be the same model. (Copying parameter settings is not possible if the models are different.)
- D0 to D89 are used in the PLC memory. The default E5CC parameter allocations are used.
- A commercially available USB2.0, A/B cable is used.

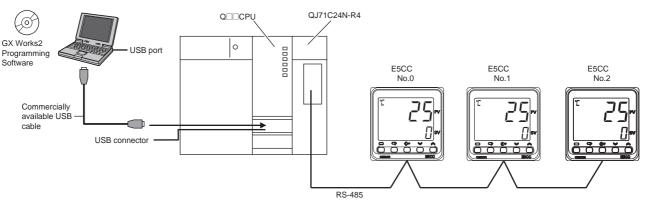


Note: Refer to the *GX Works2 Installation Instructions* (BCN-P5713) for information on installing the GX Works2 and to the *GX Works2 Version 1 Operating Manual (Common)* (SH-080779ENG) for information on installing the USB driver.

The application procedure is given below.

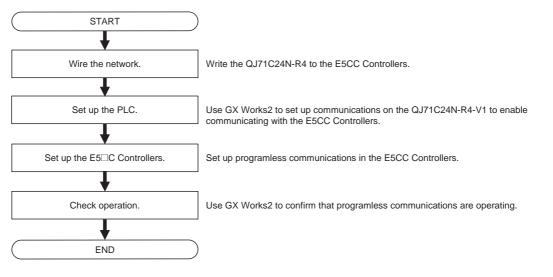

#### 6-6-2 Wiring

#### Wire the QJ71C24N-R4 to the E5CC Controllers as shown below.

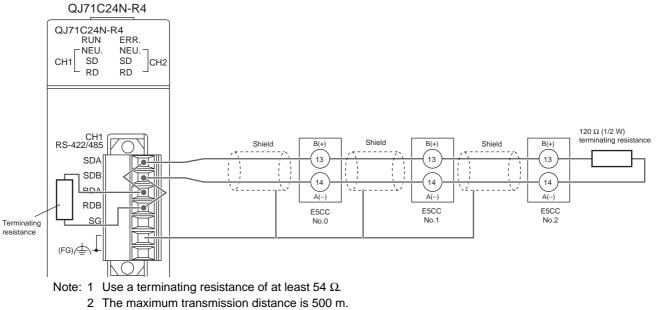

3 For wiring methods, refer to 3.3 RS-422/485 Interface Specifications and 4.4.2 Connecting the RS-422/485 Interface in the Q Corresponding Serial Communication Module Users Manual (Basic) (SH-080006).

#### 6-6-3 PLC Setup

Set up communications on the QJ71C24N-R4 to enable communicating with the E5CC Controllers. PLC operation will stop and the power supply will be cycled during the setup procedure. Make sure that this will not create any problems in the controlled system.

# **Connecting to the PLC**

- (1) Connect the computer to the Q-series CPU Module and then start GX Works2.
- (2) Select Online Read from PLC from the menu bar.

KELSOFT Series GX Works2 (Untitled Project)									
Project Edit	Eind/Replace	<u>⊂</u> ompile	Vew	Online	Debu	Diagnostics	Tool	<u>W</u> indow	Help
i 🗅 🖻 💾 i 🕴	0		<b>%</b>		ad from P	LC			
🔁 🎫 🗐 🎇 🖼 🐯 🔹 🗛 🖓 🖓 💆 Write to PLC									
Navigation	 			Ve	rify with P	ч.с			3
Project				Re	mo <u>t</u> e Ope	ration			1

(3) Select QCPU (Q mode), and then click the OK Button.

PLC Series Selection	
PLC Series:	OK Cancel

Transfer Set	tup Connectio	in1							×
PC side I/F	DD- Serial USB	CC IE Cont NET/10(H) Board	<u>CC-Link</u> Board	Ethernet Board	<u>CC IE Field</u> Board	Q Series Bus	NET(II) Board	PLC Board	<u> </u>
PLC side I/F		CC IE Cont NET/10(H) Module	CC-Link Module	Ethernet Module	<u>C24</u>	GOT	CC IE Field Master/Local Module	CC IE Field Communicatio Head Module	<u> </u>
Other Station				C		PLC	Mode QCPU (o	2 mode) ection Channel I	
Setting	No Specification	<u>(Sir</u>	Retry Times	<u>Other</u> (Co-e>	Station Station (istence Network)		PLC D	irect Coupled S Connection Test	etting
Network Communication Route	CC IE Cont NET/10(H)	CC IE Field	Ethernet	CC-Link	C24	াৰ্চা	PLC Type	iystem Image	
Co-existence							Phone Li	ne Connection	(C24)
Network Route	CC IE Cont NET/10(H)	CC IE Field	Ethernet	CC-Link	C24	i en		OK Cancel	
	Accessing H								
Target System		Targ	et PLC lot Specified		ystem	1			

(4) Click the OK Button.

### (5) Click the Execute Button.


onnection Channel List							
Serial Port PLC Module Connecti	on(USB)						system Image
🖳 🊺 🌆 🌆 🤉 R	ead C Write	C Verily	C	Delete			
👔 PLC Module 🛛 🗂 Intellio	ent Function Module	execution Target Da	sta( NO	/ ves	)		
Title							
Module Data	Parameter+Program	n Select All	Cancel All S	elections	-1		
			1.	10.000	1		
Module Name/Da	a Name	Title/Project Name	Target	Detail	Last Change	Target Memory	Size
- Q25HCPU Symbolic Information						Program Memory	
= PLC Data						Program Memory	
- Program(Program Fil	e)		2	Detail	0	in open and the most year	
MAIN					2012/03/09 09:51:52		2140 Bytes
E Parameter			9				
	iote Password/Switc			-	2012/03/09 09:51:52		630 Bytes
E Device Memory				Detail			
- Bevice Data							
		101 IV. 2011 IV. 201			and the second second		
	and the second second second second				adv Set ) Acqu	ire Symbolic Informat	ion Project Name
Necessary Setting( No 1	ietting / Already Set )	Set if it is neede	d( No Setting	/ Millo			
Writing Size	ietting / Already Set )	Set if it is neede	d( No Setting	Free V	olume Use Volu		
	ietting / Already Set )	Set if it is neede	d( No Setting			me 6,144Bytes	Refresh
Writing Size	ietting / Already Set )	Set if it is neede	d( No Setting		olume Use Volu		Refresh
Writing Size	ietting / Already Set )	Set if it is neede	d( No Setting		olume Use Volu		
Writing Size	ietting / Already Set )	Set if it is neede	d( No Setting		olume Use Volu	6,144Bytes	
Writing Size	ietting / Already Set )	Set if it is neede	d( No Setting		olume Use Volu	6,144Bytes	
Writing Size	ietting / Already Set )	Set if it is neede	d( No Setting		olume Use Volu	6,144Bytes	

(6) When the set values have been read, click the Close Button. Also close the above dialog box.

Read from PLC
5/5
100/100%
0000:QJ71C24N-R4 Read : Completed Parameter Read : Completed Boot File Read : Completed Remote Password Read : Completed Program (MAIN) Read : Completed Read from PLC : Completed W
When processing ends, close this window automatically.
Close

### **Communications Settings in the Serial Communication Module**

(1) Double-click Switch Setting. The Switch Setting Dialog Box for communications will be displayed.

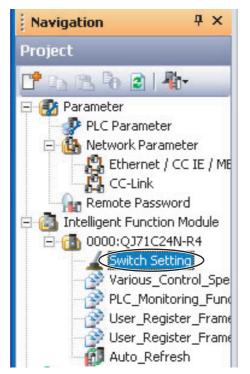

### (2) We will change the communications settings for CH1.

Change the following settings, and then click the **OK** Button. Use the defaults settings for the other parameters.

- Parity Bit: Exist
- Even/odd parity: Even
- Stop bit: 2
- Sum check code: Exist
- Online Change: Enable
- Setting modifications: Enable
- Communication rate setting: 57600 bps (This setting can be changed after you change the communication protocol setting.)
- Communication protocol setting: MC protocol (Format 4)

	Item	CH1	CH2
	Operation setting	Independent	Independent
	Data Bit	7	7
Transmission E Setting	Parity Bit	Exist	None
	Even/odd parity	Even	Odd
	Stop bit	2	1
	Sum check code	Exist	None
	Online Change	Enable	Disable
	Setting modifications	Enable	Disable
Communic	ation rate setting	57600bps 🔹	Auto Setting
Communicati	on protocol setting	MC protocol (Format 4)	MELSOFT Connection
Station numb	er setting (0 to 31)	0	
	rotocol setting	duct information 1012200000000 ch Setting of the PLC parameter.	

Note: If you change the station number setting, refer to 6-2-7 Communications Node Number

🗰 MELSOFT Series GX Works2 (	(Untitled Project)
Eroject Edit Find/Replace Com	npile View Online Debug Diagnostics Tool
: 🗅 🔁 💾 🕘 🕞	📮 🚼 🕞 🚝 Read from PLC
	tor 1 2 Write to PLC
Navigation 7 ×	Verify with PLC
Project	Remo <u>t</u> e Operation

(3) Select Online - Write to PLC. A dialog box to write the set values will be displayed.

6

### (4) We will write set values to the PLC.

Click the **Intelligent Function Module** Tab and select the check box for the Serial Communication Module in the *Valid* Column. Then click the **PLC Module** Tab, select the check box for the parameters in the Target Column, and then click the **Execute** Button.

Connection Channel List Sorial Port: PLC Module Connection(USB) PLC Module Connection(USB) PLC Module Connection(USB) PLC Module Connection Connection Module Execution Target Data( No / Yes ) Select All Carnel All Selections Module Name/Detail Setting Item Name Value Value Carnel All Selections	Nodule Civerview	e
Sorial Port PLC Module Connection(USB)   PLC Module Totelligent Function Module Exection Target Data( No / Yes )  Select All Cancel All Selections  Module Name/Detail Setting Item Name  Value Value Value Optical	flodule Overview	e
C Road      Write     Vority      Pt C Module     Totelligent Function Module     Exection Target Data( No / Yes )     Select All Carried All Selections.      Module Name/Detail Setting Item Name     Value     v	flodule Overview	
PLC Module Three Transmission Module Execution Target Data( No / Yes )     Select All Cancel All Selections     Module Name/Detail Setting Item Name     vaim reget Detail	Serial Communication/Modem	
Select All Cancel All Selections Module Name/Detail Setting Item Name value aget Detail	Serial Communication/Modem	
Module Name/Detail Setting Item Name vaim Sarget Detail	Serial Communication/Modem	
Module Name/Detail Setting Item Name vaim Sarget Detail	Serial Communication/Modem	
	Serial Communication/Modem	
	Interface Module	
	Model Name Q371C24N-R4	
	Start XY 000	00
	Installation Slot	0
	and the second s	_
	Title	
	-Parameter will be written to buffer	1
	memory/flash ROM.	-
line Data Operation		
Connection Channel List		
Serial Port PLC Module Connection(USB)	System Image	e
Title		
Fdit Data Parameter+Program Select All Cancel All Selections		
Module Name/Data Name Title Target Detail Last Change	Target Memory Size	
(Untitled Project)		
PLC Data	Program Memory/D	
	The second se	_
Program (Program File)		for
MAIN 2012/03/12 11:04:		vtes
	29 2140 By	
Constant Password/Switch Setting     Constant Password/Switch Setting     Global Device Comment	29 2140 By 28 630 By	
Control Contro Control Control Control Control Control Control Control Control Co	29 2140 By 28 630 By	
All N     2012/03/12 11:04:     Parameter     Pol C/Metwork/Remote Password/Switch Setting     Oldob Device Comment	29 2140 By 28 630 By 29	

### (5) We will write set values to the PLC.

Some dialog boxes will be displayed before and after the following dialog box. Click the **Yes** Button for of them, or click the **Yes to All** Button.

When the following dialog box is displayed, click the **Close** Button. Also close the dialog box to write set values, and then cycle the power supply to the PLC.

This completes the PLC setup procedure. You will use GX Works2 to check operation, so leave it online.

Write to PLC
5/5
100/100%
0000:QJ71C24N-R4 Write : Completed Parameter Write : Completed Boot File Write : Completed Remote Password Write : Completed Program (MAIN) Write : Completed Write to PLC : Completed
Close

# 6-6-4 E5 C Controller Setup


Set up programless communications. Perform the procedure that is given in 6-4-4 E5 C Controller Setup.

### 6-6-5 Checking Operation

The SP and RUN/STOP status of the E5 C Controllers will be changed to check operation. Make sure that this will not create any problems in the controlled system.

### Checking E5CC Monitor Values

(1) We will display PLC memory in a dialog box. Select Online – Monitor – Device/Buffer Memory Batch Monitor.

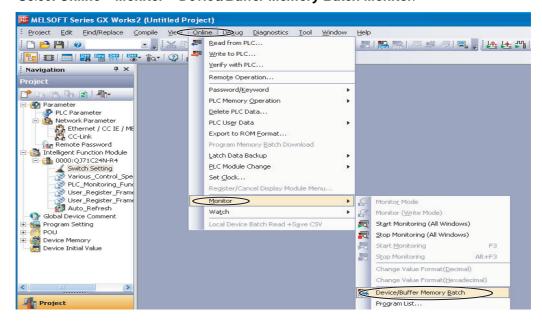

(2) We will monitor PLC memory in a dialog box.

Enter *D0* for in the *Device Name* Box and press the **Enter** Key on the computer's keyboard. Monitoring of D0 will be started.

Device/Buffer Memory Bat 🗵
🛱 Device/Buffer Memory Batch Monitor-1
Device Name     T     Device Name     T     Device Name     T     Device Name     T
Modify Value Display Format Open
Device F

(3) To make the value easier to check, we will change the values that are displayed to decimal values.

Click the **Display Format** Button in the above dialog box, select the *Word Multi-point* Option in the Monitor Format Area, select the *10 Points* Option in the Word Device Word Multi-point Format Area, and then click the **OK** Button.

Monitor Format		Display     16bit Integer     32bit Integer     Real Number(32Bit)			• DEC • HEX		Switch No. of Points Points of word device that display in 1 li Bit Device Bit and Word Format 10 Points  • 16 Points				
Bit Multi-point     Word Multi-point		<ul> <li>Real Number(32Bit)</li> <li>Real Number(64Bit)</li> <li>ASCII</li> </ul>		Bit)	Bit Order		Word Device Word Multi-point Format				
Disolau Evamo	loc l										
Display Examp	les +0	+16	+32	+48	+64	+80	+96	+112	+128	+144	
	-	+16 28737	+32 16974	+48 28736	+64	+80 28737	+96 16974	+112 28736	+128		
Device	+0									2873	
Device X0	+0	28737	16974	28736	16951	28737	16974	28736	16951	2873 2873	
Device X0 X0A0	+0 16951 16974	28737 28736	16974 16951	28736 28737	16951 16974	28737 28736	16974 16951	28736 28737	16951 16974	2873 2873 2873	
Device X0 X0A0 X140	+0 16951 16974 16951	28737 28736 28737	16974 16951 16974	28736 28737 28736	16951 16974 16951	28737 28736 28737	16974 16951 16974	28736 28737 28736	16951 16974 16951	2873 2873 2873	
Device X0 X0A0 X140 X1E0	+0 16951 16974 16951 16974	28737 28736 28737 28736	16974 16951 16974 16951	28736 28737 28736 28737	16951 16974 16951 16974	28737 28736 28737 28736	16974 16951 16974 16951	28736 28737 28736 28737	16951 16974 16951 16974	2873 2873 2873 2873 2873 +9	
Device X0 X0A0 X140 X1E0 Device	+0 16951 16974 16951 16974 +0	28737 28736 28737 28736 +1	16974 16951 16974 16951 +2	28736 28737 28736 28737 +3	16951 16974 16951 16974 +4	28737 28736 28737 28736 +5	16974 16951 16974 16951 +6	28736 28737 28736 28737 +7	16951 16974 16951 16974 +8	2873 2873 2873 2873 2873 +9 2873	
Device X0 X0A0 X140 X140 X1E0 Device D0	+0 16951 16974 16951 16974 +0 16951	28737 28736 28737 28736 +1 28737	16974 16951 16974 16951 +2 16974	28736 28737 28736 28737 +3 28736	16951 16974 16951 16974 +4 16951	28737 28736 28737 28736 +5 28737	16974 16951 16974 16951 +6 16974	28736 28737 28736 28737 +7 28736	16951 16974 16951 16974 +8 16951	+144 2873 2873 2873 2873 2873 2873 2873 2873	

#### (4) We will check the E5CC monitor values.

The area where monitor values are checked is called the upload area.

D0 to D14 is the upload area for the No. 0 Controller, D30 to D44 is the upload area for the No. 1 Controller, and D60 to D74 is the upload area for the No. 2 Controller.

Device										
Device Name     D0	-	T/C Set Va	lue Refe	rence Pro	gram				<u>R</u> ef	ferenc
C Buffer Memory Module Start				EX) <u>A</u> c	ldress					DEC
Device	+0	+1	+2	+3	+4	+5	+6	+7	+8	+9
Device D0	+0		170	+3 512	+4 28738	<b>+5</b> 4096	+6	+7 1320	+8	+9
		+1 No.0	170							+9
D0	0		173	512		4096	0	1320	0	+9
D0 D10	0	No.C	173	512 0	28738 0	4096 0	0	1320 0	0 0	+9
D0 D10 D20	0	No.0	173	512 0 0	28738 0 0	4096 0 0	0 0 0	1320 0 0	0 0 0	+9
D0 D10 D20 D30	0	No.C	173	512 0 0 512	28738 0 0	4096 0 0 4096	0 0 0 0 0	1320 0 0 1320	0 0 0	+9
D0 D10 D20 D30 D40	0 0 0 0	No.0	173 0 0 175 0 0	512 0 0 512 0	28738 0 28738 0	4096 0 0 4096	0 0 0 0	1320 0 0 1320 0	0 0 0 0	+9
D0 D10 D20 D30 D40 D50	0 0 0 0 0	No.0	173 0 0 175 0 0	512 0 512 0	28738 0 0 28738 0 0	4096 0 4096 0	0 0 0 0 0	1320 0 1320 0	0 0 0 0 0	+9
D0 D10 D20 D30 D40 D50 D60		No.0	173 0 0 175 0 0	512 0 512 0 0 512	28738 0 0 28738 0 0	4096 0 4096 0 0 4096	0 0 0 0 0 0	1320 0 1320 0 0 1320	0 0 0 0 0	+9

6

With the default settings, the following parameters are set for the upload areas. Check the values in the upload areas to see if they are the same as those that are given in the following table. (It is not necessary to check address for which "---" is given in the Value column.)

No.0	No.1	No.2	Parameter	Value
D0	D30	D60	Response Flag (fixed)	0
D01	D31	D61	Communications Status (fixed)	Alternates between 0 and 1.
D02	D32	D62	Communications Monitor	
			Parameter	
D03	D33	D63	Status (Upper Word)	
D04	D34	D64	Status (Lower Word)	
D05	D35	D65	Status 2 (Upper Word)	
D06	D36	D66	Decimal Point Monitor	
D07	D37	D67	Process Value	Process Value *
D08	D38	D68	Internal Set Point	
D09	D39	D69	Heater Current 1 Value Monitor	
D10	D40	D70	MV Monitor (Heating)	
D11	D41	D71	Not used.	
D14	D44	D74	Not used.	

\* If the default settings are used and a sensor is not connected, the PV display on the E5CC will show an input error (5.*ERR*) and the process value in the upload area will be 1320 (528 hex).

### • Changing E5CC Settings

### (1) We will check the area that is used to change E5CC set values.

The area that is used to change the set value is called the download area. D15 to D29 is the download area for the No. 0 Controller, D45 to D59 is the download area for the No. 1 Controller, and D75 to D89 is the download area for the No. 2 Controller.

	T/C Set ≒ormat	Value Refe		idress					erend DEC
	Format			- 1				-	DEC
	Format	Save Di	isplay Forr	nat					
-0	+1	+2	+3	+4	+5	+6	+7	+8	+9
	1			28738		0			
0	0	0	0	0	0	Ň		0	
0	1	175	512	28738	4096	0	1320	0	
0	0	0	0	0	0	0	0	0	
0	0	0	0	0	0	N		0	
0	0	174	512	28738	4096	0	1320	0	
0	0	0	0	0	0	- NL	<u>2</u>	0	
				0	0		~		
	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0	0 1 0 0 0 1 0 0 0 0 0 0 0 0 0 0 0 0	0         1         173           0         0         0           0         0         0           0         1         175           0         0         0         0           0         0         0         0           0         0         0         0           0         0         0         0           0         0         0         0           0         0         0         0	0         1         173         512           0         0         0         0           0         0         0         0           0         1         175         512           0         0         0         0         0           0         0         0         0         0           0         0         174         512           0         0         0         0         0           0         0         0         0         0           0         0         0         0         0           0         0         0         0         0	0         1         173         512         28738           0         0         0         0         0           0         1         175         512         28738           0         0         0         0         0         0           0         1         175         512         28738           0         0         0         0         0         0           0         0         174         512         28738           0         0         174         512         28738           0         0         0         0         0           0         0         0         0         0           0         0         0         0         0	0         1         173         512         28738         4096           0         0         0         0         0         0         0           0         0         0         0         0         0         0         0           0         1         175         512         28738         4096         0         0         0         0         0         0         0         0         0         0         0         0         0         0         0         0         0         0         0         0         0         0         0         0         0         0         0         0         0         0         0         0         0         0         0         0         0         0         0         0         0         0         0         0         0         0         0         0         0         0         0         0         0         0         0         0         0         0         0         0         0         0         0         0         0         0         0         0         0         0         0         0         0         0         0         0	0     1     173     512     28738     4096     0       0     0     0     0     0     0     0       0     1     175     512     28738     4096     0       0     0     0     0     0     0     0       0     0     0     0     0     0     0       0     0     0     0     0     0       0     0     174     512     28738     4096     0       0     0     0     0     0     0     0       0     0     0     0     0     0     0       0     0     0     0     0     0     0	0       1       173       512       28738       4096       0       1320         0       0       0       0       0       0       No.0       0         0       0       0       0       0       No.0       0       0       0         0       1       175       512       28738       4096       0       1320         0       0       0       0       0       0       0       0       0         0       0       0       0       0       0       0       0       0       0         0       0       174       512       28738       4096       0       1320       0         0       0       174       512       28738       4096       0       1320         0       0       0       0       0       0       1320       0       1320         0       0       0       0       0       0       No.2       0	0       1       173       512       28738       4096       0       1320       0         0       0       0       0       0       0       0       0       0       0       0       0       0       0       0       0       0       0       0       0       0       0       0       0       0       0       0       0       0       0       0       0       0       0       0       0       0       0       0       0       0       0       0       0       0       0       0       0       0       0       0       0       0       0       0       0       0       0       0       0       0       0       0       0       0       0       0       0       0       0       0       0       0       0       0       0       0       0       0       0       0       0       0       0       0       0       0       0       0       0       0       0       0       0       0       0       0       0       0       0       0       0       0       0       0       0       0       0

No.0	No.1	No.2	Parameter	Value (E5CC default settings)
D15	D45	D75	Request Flag (fixed)	1 (0001 hex)
D16	D46	D76	Operation Command Code (fixed)	0 (0000 hex)
D17	D47	D77	Set Point	0 (0000 hex)
D18	D48	D78	Proportional Band	80 (0050 hex)
D19	D49	D79	Integral Time	233 (00E9 hex)
D20	D50	D80	Derivative Time	40 (0028 hex)
D21	D51	D81	Alarm Value 1	0 (0000 hex)
D22	D52	D82	Alarm Value Upper Limit 1	0 (0000 hex)
D23	D53	D83	Alarm Value Lower Limit 1	0 (0000 hex)
D24	D54	D84	Alarm Value 2	0 (0000 hex)
D25	D55	D85	Alarm Value Upper Limit 2	0 (0000 hex)
D26	D56	D86	Alarm Value Lower Limit 2	0 (0000 hex)
D27	D57	D87	Heater Burnout Detection 1	0 (0000 hex)
D28	D58	D88	Process Value Input Shift	0 (0000 hex)
D29	D59	D89	SP Ramp Set Value	0 (0000 hex)

With the default settings, the following parameters are set for the download areas.

(2) We will initialize the download areas with the set values from the E5CC Controllers. The download areas have not been initialized, so we will initialize them with the set values from the E5CC Controllers.

Double-click **D15** (Request Flag) on the Device Memory Dialog Box. The following dialog box is displayed. Enter 2 (Initialize Download Areas), click the **Set** Button, and then click the **Close** Button.

D15			
Data Type	Word[Sig	ned]	<u> </u>
Value 🤇	2		Set
Execution F	sult		Close
	el	Data Type	Setting Value
Device/Lab			

### (3) We will confirm that the download areas have been initialized.

When initialization is completed, D0 (Response Flag) will change to 1 (Normal End) and D15 (Request Flag) will automatically change to 1 (Enable Writing). Check the download area to see if it has been initialized to the values given in the above table. Confirm this for the No. 1 and No. 2 Controllers as well.

### (4) We will change the set point for the No. 0 Controller.

Double-click **D17** (Set Point) in the Device Memory Dialog Box, enter 100 (64 hex) for the value, click the **Set** Button, and then click the **Close** Button. Confirm that D0 (Request Flag) remains at 1 (Enable Writing) and that the SV Display on the No. 0 Controller changes to 100.

Confirm this for the No. 1 and No. 2 Controllers as well.

Modify Value		
Device/Label Buffer Memory Device/Label		
D17		•
Data Type Word[Signed]		•
Value 100	DEC     HEX	Set
-Settable Range -32768 to 32767		
Execution Result <<		Close

### Stopping the E5CC Controllers

### (1) We will run the No. 0 Controller.

Change the RUN/STOP parameter (R-5) in the operation level of the E5CC to RUN (RUN). For a Controller with event inputs, the Event Input 2 Assignment parameter ( $E^{l'}-2$ ) in the initial setting level is set to RUN/STOP ( $5E\bar{a}P$ ), so the RUN/STOP parameter will not be displayed. Change the Event Input 2 Assignment parameter to NONE ( $N\bar{a}NE$ ), and then change the RUN/STOP parameter to RUN.

### (2) We will switch the No. 0 Controller to STOP.

In the Device Memory Dialog Box, make sure that D15 (Request Flag) is 1 (Enable Writing) and then double-click **D16** (Operation Command Code). Select the HEX Option, enter 0101 hex (STOP), click the **Set** Button, and then click the **Close** Button. D16 will change to 0, D0 (Response Flag) will remain at 1 (Enable Writing), and "STOP" will be displayed on the No. 0 Controller. Confirm this for the No. 1 and No. 2 Controllers as well. For details on other operation command codes, refer to 6-3-4 Operation Command Codes.

# **Component Communications**




This section describes component communications for the E5<sup>C</sup>.

7-1	Comp	oonent Communications	7-2
	7-1-1	Introduction	7-2
	7-1-2	Wiring	7-2
	7-1-3	E5□C Setup	7-3
7-2	Opera	ation for Component Communications	7-5
7-3	Troub	leshooting	7-6

# 7-1 Component Communications

### 7-1-1 Introduction


You can use component communications to connect two or more  $E5\square C$  Controllers via RS-485 and then change the set points or RUN/STOP status for all of the Controllers at the same time. If you change the set point or RUN/STOP status of the master (i.e., the Controller with a communications unit number of 0), the set points or RUN/STOP status of all of the slaves (i.e., the Controllers with communications unit numbers other than 0) that are connected via RS-485 will change automatically. When you change the set points, the set point from the master can be multiplied by a factor or offset at each slave. You can also copy the parameter settings in the master to the slaves.

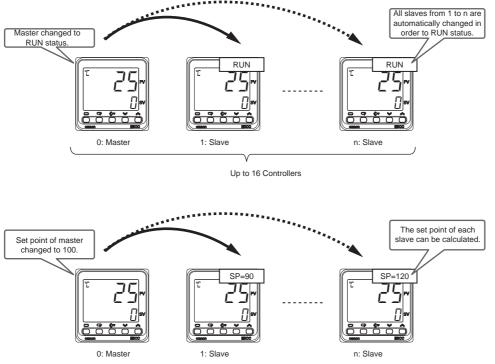

Note: To use component communications, the input type and, if an analog input is used, the decimal point position must be set to the same values for all of the E5□C Controllers. The operation will not work correctly if the position of the decimal point is different.

# 7-1-2 Wiring




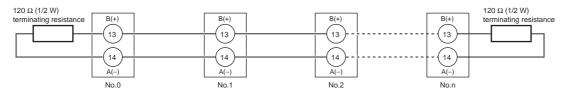 

### 7-1-3 E5 C Setup

The parameters that are used for component communications are shown with a gray background in the following diagram. All of these parameters are displayed if you set the Protocol Setting parameter to  $\mathcal{LMP}$ . (Some of the parameters are always displayed.)

This section describes the parameters that are used to calculate the set point. The other parameters are the same as for programless communications. Refer to 6-2 E5 $\square$ C Setup. To use component communications, the input type and, if an analog input is used, the decimal point position must be set to the same values for all of the E5 $\square$ C Controllers. The operation will not work correctly if the position of the decimal point is different.

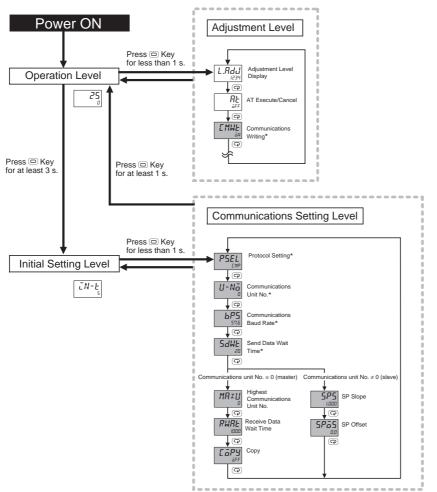

\* These parameters are displayed regardless of the setting of the Protocol Setting parameter.

Note: The Communications Data Length, Communications Stop Bits, and Communications Parity parameters in the communications setting level are not displayed.

7

# **SP** Calculations

The set point (SP) of a slave can be calculated from the set point of the master as shown below. The slave performs the calculation only during operation. The value is not written to the slave if it exceeds the set point limiter.

During operation: Slave SP = Master SP  $\times$  SP Slope + SP Offset When stopped: Slave SP = Master SP

**Communications Setting Level** 

Display condition: The Protocol Setting parameter must be set to LMP and the Communications Unit No. parameter must not be set to 0 (0 = master).

Parameter name	Displayed characters	Setting range	Unit	Default
SP Slope	SPS	0.001 to 9.999	None	1.000
SP Offset	SPāS	Temperature input: –199.9 to 999.9 Analog input: –1,999 to 9,999*	EU	0.0

\* The decimal point position depends on the Decimal Point parameter setting.

# 7-2 Operation for Component Communications

Only two parameter settings can be sent from the master to the slaves: the Set Point (SP) and the RUN/STOP parameters.

If the set point or the RUN/STOP status is changed at the master, the new value is sent to the slaves starting with the slave with communications unit number 1 and continuing on to the slave with the highest communications unit number. The master sends values only during operation. Values are not sent while in the initial setting level.

If the set point or the RUN/STOP status is changed again while sending a previous value to the slaves, the original value will not be transferred correctly. Always wait for a value to be sent to all of the slaves before you change the set point or RUN/STOP status again.

Levels		Component communications
Operation level, adjustment level, manual control level, monitor/setting item level, and protect level	Setting area 0	Operates
Initial setting level, communications setting level, advanced function setting level, and calibration level	Setting area 1	Stops

For component communications, the master sends the value in order starting from slave 1. There will be a delay of up to 30 ms between when the set point or RUN/STOP status is sent to all of the slaves. If this delay is too long, consider using event inputs to change the set points or to change the RUN/STOP status.

If communications with a slave fail, the master will retry communications twice. If communications still fail, it will move to processing the next slave. To see if the value was sent correctly, check the display of the Set Point or STOP parameter on each slave.

# Exception Processing

Master	<ul> <li>If the multi-SP is changed, the set point is sent to each slave.</li> <li>This function is disabled in the following cases:</li> <li>During operation with a remote SP</li> <li>When changing the set point for SP tracking</li> </ul>
Slaves	<ul> <li>SPs are not calculated when operation is stopped.</li> <li>The value from the master is not received in the following cases.</li> <li>When the set point from the master or the results of set point calculation exceeds the set point limiter of the slave.</li> <li>When Communications Writing parameter is set to "OFF"</li> <li>When RUN/STOP is assigned to an event input (Changes in the set point will be received.)</li> <li>When a communications error occurs three times in a row</li> </ul>

7-1-3 E5□C Setup

# 7-3 Troubleshooting

Possible problems that can occur with component communications and corrective actions are given in the following table.

Status	Cause and corrective action	Page
The set point or RUN/STOP status	The wiring to the slave is not correct.	7-2
The set point or RUN/STOP status will not change for a slave (i.e., a Controller with a communications unit number other than 0).	<ul> <li>The wiring to the slave is not correct.</li> <li>The communications settings for the slave are not correct.</li> <li>The Protocol Setting parameter is not set to <i>EMP</i>.</li> <li>The Communications Unit No. parameter is set to the same value as another slave.</li> <li>The setting of the Communications Baud Rate parameter is not the same as the other slaves.</li> <li>The Highest Communications Unit No. parameter is not set to the highest communications unit number that is actually set.</li> <li>The Communications Writing parameter is set to the set to the functions writing parameter is not set to the set to the highest communications unit number that is actually set.</li> </ul>	7-2 7-3
	<ul> <li>OFF.</li> <li>When the RUN/STOP Does Not Change RUN/STOP is assigned to an event input for the slave.</li> </ul>	7-5
	When the Set Point Does Not Change	7-4
	The set point from the master or the results of set point calculations exceeds the set point limiter of the slave.	7-5
The set points or the RUN/STOP status will not change for any of the	The wiring to the master (i.e., the Controller with communications unit number 0) is not correct.	7-2
slaves.	<ul> <li>The communications settings in the master are not correct.</li> <li>The Protocol Setting parameter is not set to <i>EMP</i>.</li> <li>The Communications Unit No. parameter is not set to 0.</li> <li>The Communications Baud Rate parameter is not set to the same value as the slaves.</li> <li>The Highest Communications Unit No. parameter is not set to the highest communications unit number that is actually set.</li> </ul>	7-3
The set point is not calculated.	<ul> <li>The SP Slope or SP Offset parameter is not set correctly.</li> <li>The set point was changed at the master when the slave was stopped (setting area 1).</li> </ul>	7-4
It is sometimes not possible to change the set points or RUN/STOP status.	There may be noise interference. Connect terminating resistance to both ends of the communications line.	7-2

Note: For information on other problems, refer to A-2 Troubleshooting.

# A

# Appendices

A-1	ASCII List	. A-2
A-2	Troubleshooting	. A-3

# A-1 ASCII List

							b8								_
							b7	0	0	0	0	1	1	1	1
							b6	0	0	1	1	0	0	1	1
	Γ						b5	0	1	0	1	0	1	0	1
						_									
b7 b6	b5	b4	b3	b2	b1		C R	0	1	2	3	4	5	6	7
•		0	0	0	0		0	NUL	DLE	SPACE	0	@	Ρ	"	р
		0	0	0	1		1	SOH	DC1	!	1	А	Q	а	q
		0	0	1	0		2	STX	DC2	"	2	В	R	b	r
		0	0	1	1		3	ЕТХ	DC3	#	3	С	S	С	s
		0	1	0	0		4	EOT	DC4	\$	4	D	Т	d	t
		0	1	0	1		5	ENQ	NAK	%	5	Е	U	е	u
		0	1	1	0		6	ACK	SYN	&	6	F	V	f	v
		0	1	1	1		7	BEL	ЕТВ	,	7	G	W	g	w
		1	0	0	0		8	BS	CAN	(	8	Н	х	h	x
		1	0	0	1		9	НТ	EM	)	9	I	Y	i	у
		1	0	1	0		A	LF	SUB	*	:	J	Z	j	z
		1	0	1	1		В	VT	ESC	+	,	К	[	k	{
		1	1	0	0		С	FF	FS	,	<	L	$\overline{\}$	I	
		1	1	0	1		D	CR	GS	-	=	М	]	m	}
		1	1	1	0		E	S0	RS		>	Ν	^	n	~
		1	1	1	1		F	SI	US	/	?	0		0	DEL
	07 b6	07 b6 b5	<ul> <li>0</li> <li>1</li> <li>1</li> <li>1</li> <li>1</li> <li>1</li> <li>1</li> <li>1</li> <li>1</li> <li>1</li> </ul>	0       0         0       0         0       0         0       0         0       0         0       1         0       1         0       1         0       1         0       1         0       1         0       1         0       1         0       1         0       1         1       0         1       0         1       1         1       1         1       1         1       1	0       0       0         0       0       0         0       0       1         0       0       1         0       0       1         0       1       0         0       1       0         0       1       0         0       1       1         0       1       1         0       1       1         0       1       1         1       0       0         1       0       1         1       0       1         1       0       1         1       0       1         1       0       1         1       0       1         1       0       1         1       1       0         1       1       0         1       1       0         1       1       0         1       1       1	0       0       0       0         0       0       0       1         0       0       1       0         0       0       1       0         0       0       1       1         0       0       1       1         0       1       0       1         0       1       0       1         0       1       0       1         0       1       0       1         0       1       1       0         0       1       1       1         0       1       1       1         0       1       1       1         1       0       0       1         1       0       1       1         1       0       1       1         1       1       0       1         1       1       0       1         1       1       0       1         1       1       0       1	$ \begin{array}{c c c c c c c c } & 0 & 0 & 0 & 0 \\ \hline 0 & 0 & 0 & 1 \\ \hline 0 & 0 & 1 & 0 \\ \hline 0 & 0 & 1 & 1 \\ \hline 0 & 0 & 1 & 0 \\ \hline 0 & 1 & 0 & 1 \\ \hline 0 & 1 & 0 & 1 \\ \hline 0 & 1 & 1 & 0 \\ \hline 0 & 1 & 1 & 1 \\ \hline 0 & 1 & 1 & 1 \\ \hline 1 & 0 & 0 & 0 \\ \hline 1 & 0 & 1 & 1 \\ \hline 1 & 0 & 1 & 1 \\ \hline 1 & 1 & 0 & 1 \\ \hline 1 & 1 & 0 & 1 \\ \hline 1 & 1 & 0 & 1 \\ \hline 1 & 1 & 0 & 1 \\ \hline 1 & 1 & 0 & 1 \\ \hline 1 & 1 & 0 & 1 \\ \hline 1 & 1 & 1 & 0 \\ \hline 1 & 1 & 1 & 0 \\ \hline \end{array} $	b7 b6 b7 b6 b5 b7 b6 b5 b7 b6 b5 b7 b6 b5 b7 b6 b5 b7 b6 b5 b7 b6 b5 b7 b6 b5 b7 b6 b5 b7 b6 b5 b7 b6 b5 b7 b6 b5 b7 b6 b5 b7 b6 b5 b7 b6 b5 b7 b6 b5 b7 b6 b5 b7 b6 b5 b7 b6 b5 b7 c R c Q Q Q Q Q Q Q Q Q Q Q Q Q	b7       0         b7       0         b6       0         b5       0         b7       0         b6       0         b7       0         b7       0         b6       0         b7       0         b7       0         b6       0         b7       0         b7 <td< td=""><td>b7         0         0           b7         0         0           b6         0         0           b7         b6         0         0           b7         b6         b5         0         1           b7         b6         b5         b4         b3         b2         b1           b7         0         0         0         0         1         0         b5         0         1           b7         0         0         0         0         0         1         b5         0         1           b7         0         0         0         0         1         0         NUL         DLE           1         0         0         1         1         0         1         1         0         1         1         0         1         1         0         1         1         0         1         1         0         1         1         0         1         1         0         1         1         0         1         1         0         1         1         1         1         1         1         1         1         1         1<td>b7         0         0         0           b7         b6         0         1         0           b5         0         1         0         0         1           b7         b6         b5         b4         b3         b2         b1         b5         0         1         0           b7         0         0         0         0         1         0         0         1         0           b7         0         0         0         0         1         0         0         1         0           b7         0         0         1         0         0         1         0         0         1         1         0         0         1         1         1         1         1         1         1         1         1         0         1         1         1         1         1         1         1         1         1         1         1         1         1         1         1         1         1         1         1         1         1         1         1         1         1         1         1         1         1         1         1</td><td><math display="block">\begin{array}{ c c c c c c c c c c c c c c c c c c c</math></td><td><math display="block">\begin{array}{c c c c c c c c c c c c c c c c c c c </math></td><td><math display="block">\begin{array}{c c c c c c c c c c c c c c c c c c c </math></td><td><math display="block">\begin{array}{c ccccccccccccccccccccccccccccccccccc</math></td></td></td<>	b7         0         0           b7         0         0           b6         0         0           b7         b6         0         0           b7         b6         b5         0         1           b7         b6         b5         b4         b3         b2         b1           b7         0         0         0         0         1         0         b5         0         1           b7         0         0         0         0         0         1         b5         0         1           b7         0         0         0         0         1         0         NUL         DLE           1         0         0         1         1         0         1         1         0         1         1         0         1         1         0         1         1         0         1         1         0         1         1         0         1         1         0         1         1         0         1         1         0         1         1         1         1         1         1         1         1         1         1 <td>b7         0         0         0           b7         b6         0         1         0           b5         0         1         0         0         1           b7         b6         b5         b4         b3         b2         b1         b5         0         1         0           b7         0         0         0         0         1         0         0         1         0           b7         0         0         0         0         1         0         0         1         0           b7         0         0         1         0         0         1         0         0         1         1         0         0         1         1         1         1         1         1         1         1         1         0         1         1         1         1         1         1         1         1         1         1         1         1         1         1         1         1         1         1         1         1         1         1         1         1         1         1         1         1         1         1         1</td> <td><math display="block">\begin{array}{ c c c c c c c c c c c c c c c c c c c</math></td> <td><math display="block">\begin{array}{c c c c c c c c c c c c c c c c c c c </math></td> <td><math display="block">\begin{array}{c c c c c c c c c c c c c c c c c c c </math></td> <td><math display="block">\begin{array}{c ccccccccccccccccccccccccccccccccccc</math></td>	b7         0         0         0           b7         b6         0         1         0           b5         0         1         0         0         1           b7         b6         b5         b4         b3         b2         b1         b5         0         1         0           b7         0         0         0         0         1         0         0         1         0           b7         0         0         0         0         1         0         0         1         0           b7         0         0         1         0         0         1         0         0         1         1         0         0         1         1         1         1         1         1         1         1         1         0         1         1         1         1         1         1         1         1         1         1         1         1         1         1         1         1         1         1         1         1         1         1         1         1         1         1         1         1         1         1         1	$\begin{array}{ c c c c c c c c c c c c c c c c c c c$	$\begin{array}{c c c c c c c c c c c c c c c c c c c $	$\begin{array}{c c c c c c c c c c c c c c c c c c c $	$\begin{array}{c ccccccccccccccccccccccccccccccccccc$

# A-2 Troubleshooting

### **Before Requesting Repairs**

If communications are not functioning properly, check the items in the following table before requesting repairs. If normal operation cannot be restored even after checking everything, return the product to your OMRON representative.

Item	Confirmation	Page
The communications wiring is not	Correct the wiring.	1-4
correct.		
The communications line has	Connect the communications line securely and tighten the	
become disconnected.	screws.	
The communications cable is	Replace the cable.	
broken.		
The communications cable is too	The total cable length is 500 m maximum for RS-485	1-4
long.	communications.	
The wrong communications cable	Use a shielded, AWG24 to AWG18 (cross-sectional area of	1-4
has been used.	0.205 to 0.823 mm <sup>2</sup> ) twisted-pair cable for the	
	communications cable.	
Too many communications	When 1:N, RS-485 communications are used, a maximum	1-4
devices are connected to the	of 32 nodes may be connected, including the host node.	
communications path.	-	
An end node has not been set at	Set or connect terminating resistance at each end of the	1-4
each end of the communications	line. If the E5 $\Box$ C is the end node, 120- $\Omega$ (1/2-W)	
line.	terminating resistance is used. Be sure that the combined resistance with the host device is 54 $\Omega$ minimum.	
The energiad neuron europhy		
The specified power supply	Supply the specified power supply voltage.	
voltage is not being supplied to the Controller.		
The specified power supply	Supply the specified power supply voltage.	
voltage is not being supplied to	Supply the specified power supply voltage.	
an Interface Converter (e.g., the		
K3SC).		
The same baud rate and	Set the same values for the following on all nodes: baud	1-2
communications method are not	rate, protocol, data length, stop bits, and parity.	
being used by all of the		
Controllers, host devices, and		
other nodes on the same		
communications line.		
The unit number specified in the	Use the same unit number.	2-2
command frame is different from		4-2
the unit number set for the		
Controller.		
The same unit number as the Controller is being used for	Set each unit number for only one node.	1-4
another node on the same		
communications line.		
There is a mistake in	Use a line monitor to check the commands.	
programming in the host device.		
The host device is detecting the	Shorten the send data wait time in the Controller or	1-5
absence of a response as an	increase the response wait time in the host device.	
error before it receives the		
response from the Controller.		
	ł	ļ

### Problem: Communications are not possible or communications errors occur.

Item	Confirmation	Page
The host device is detecting the	The Controller does not return responses for broadcast or	2-2
absence of a response as an	software reset commands.	2-17
error after broadcasting a		4-2
command or sending a software		4-14
reset command.		
The host device sent another	Always read the response after sending a command	
command before receiving a	(except for broadcast or software reset commands).	
response from the Controller.		
The host device sent the next	Wait for at least 2 ms after receiving a response before	1-2
command too soon after	sending the next command.	
receiving a response from the		
Controller.		
The communications line became	Initialize the reception buffer in the host device before	
unstable when the Controller's	sending the first command and after turning OFF the	
power was turned ON or	power to the Controller.	
interrupted, and the host device		
read the unstable status as data.		
The communications data was	Try using a slower baud rate.	
corrupted by noise from the	Separate the communications cable from the source of	
environment.	noise.	
	Use a shielded, twisted-pair cable for the communications	
	cable.	
	Use as short a communications cable as possible and no	
	not lay or loop extra cable.	
	Do not run the communications cable parallel to a power	
	line to prevent inductive noise.	
	If noise countermeasures are difficult to implement, use an	
	Optical Interface.	



# Index

# Index

# Α

addresses	
CompoWay/F	2-7
Modbus	
area definitions	2-6
areas and first address of linked data	6-8
ASCII list	A-2

# В

BCC	 2-2, 2-3

# С

command frame
CompoWay/F2-2
Modbus
command text2-2
communications baud rate1-5, 1-7, 6-7
communications data
CompoWay/F2-4, 3-1
Modbus
communications data length1-5, 1-7
communications monitor
communications node number6-10
communications parameter setup1-6
communications parameters1-5
communications parity1-5, 1-7
communications protocol1-5, 1-7
communications specifications1-2
communications stop bits1-5, 1-7
communications unit No6-7
communications unit number1-5, 1-7
communications writing6-15
component communications7-2
Composite Read from Variable Area (CompoWay/F) 2-7, 2-10
Composite Write to Variable Area (CompoWay/F) 2-7, 2-12
CompoWay/F1-2, 2-1, 3-1
confirming operation of programless communications 6-19
copying parameter settings
CRC-16

# D

data	4-2
data format	
CompoWay/F	2-2
Modbus	
description of communications parameters .	1-7
double-word data	

# Ε

2-7, 2-15
4-6, 4-15
2-3, 2-4
4-5
2-2

# F

FINS	1-2
Four-byte Mode	4-7, 5-2
function code	
functional upgrades	1-13, 1-14
functions (Modbus)	
detailed description	
list	

# Н

highest communications unit No.	6-7
Host Link (FINS)6-	6, 6-9

# I

interface	 .3

# Μ

MC protocol (format 4)6-6, 6	6-9
Modbus1-2, 4-1, 5	5-1

# Ν

no response4	
node number2	2-2
number of elements	
CompoWay/F2	
Modbus4	-7

# 0

operation command	
CompoWay/F	2-7
Modbus	
operation command codes	6-19

# Ρ

PDU	structure	2-6
PLC		6-5

programless communications	
protocol setting	

### R

range of operation for programless communications 6-18		
Read Controller Attributes (CompoWay/F)		
Read Controller Status (CompoWay/F)		
Read Variable Area (CompoWay/F)		
receive data wait time		
Request Flag		
response code list (CompoWay/F) 2-21		
Response Flag		
response frame		
CompoWay/F 2-3		
Modbus		
RS-485 1-4		

# S

send data wait time services (CompoWay/F)	1-5, 1-7, 6-7
detailed description	2-8
list	2-7
set values (Modbus)	
SID	
single-word data	3-2
slave address	
SP calculations	
Status	
CompoWay/F	3-21
Modbus	5-15
Status 2 (CompoWay/F)	3-21
STX	
sub-address	2-2

# Т

1-3
A-3
7-6
under
6-14
s.6-20
4-7, 5-2
2-6

# U

# V

variable area4 variable area (setting range) list	<b>ŀ-</b> 7
CompoWay/F	3-2
Modbus	5-2
Variable Read, Multiple (Modbus)4	<del>1</del> -8
variable type 2	2-6

E5 C Digital	Temperature	Controllers	Communications	Manual (H175)
			••••••••••••••••••	

Variable Write, Multiple (Modbus)	4-10
Variable Write, Single/Operation Command (Modbus)	4-12
versions	1-11

# W

wiring	
Write Mode	
Write Variable Area (CompoWay/F)	

#### **OMRON** Corporation **Industrial Automation Company** Tokyo, JAPAN

#### Contact: www.ia.omron.com

# Regional Headquarters OMRON EUROPE B.V.

Wegalaan 67-69-2132 JD Hoofddorp The Netherlands Tel: (31)2356-81-300/Fax: (31)2356-81-388

# OMRON ASIA PACIFIC PTE. LTD.

No. 438A Alexandra Road # 05-05/08 (Lobby 2), Alexandra Technopark, Singapore 119967 Tel: (65) 6835-3011/Fax: (65) 6835-2711

### **OMRON ELECTRONICS LLC**

One Commerce Drive Schaumburg, IL 60173-5302 U.S.A. Tel: (1) 847-843-7900/Fax: (1) 847-843-7787

OMRON (CHINA) CO., LTD. Room 2211, Bank of China Tower, 200 Yin Cheng Zhong Road, PuDong New Area, Shanghai, 200120, China Tel: (86) 21-5037-2222/Fax: (86) 21-5037-2200

#### Authorized Distributor:

© OMRON Corporation 2011 All Rights Reserved. In the interest of product improvement, specifications are subject to change without notice.

Cat. No. H175-E1-04