
CSM_E5C2_DS_E_6_1

DIN-sized (48 x 48 mm) Temperature Controller with Analog Setting



- Incorporates proportional control and reset adjustment function.
- Consecutive mounting possible using mounting adapter.
- Incorporates a plug-in socket, thus allows to DIN-track and flush mounting.











For the most recent information on models that have been certified for safety standards, refer to your OMRON website.

Model Number Structure

■ Model Number Legend

 $\underbrace{\mathsf{E5C2}}_{\mathsf{1}} - \underbrace{\square}_{\mathsf{2}} \, \underbrace{\square}_{\mathsf{3}} \, \underbrace{\square}_{\mathsf{4}} \, \underbrace{\square}_{\mathsf{5}}$

1. Control Outputs

R: Relay

2. Control Method

20: ON-OFF control40: Proportional control

3. Input

K: K-type thermocouple

J: J-type thermocouple

P-D: Platinum resistance thermometer (Pt100)

G: Thermistor with replaceable element

Note: A functional explanation is provided here for illustration, but models are not necessarily available for all possible combinations. Refer to *Ordering Information* when ordering. Examples

Examples

 Relay control output, ON/OFF control, type-K thermocouple input: E5C2-R20K

 Relay control output, proportional control, thermocouple input: E5C2-R40P-D

Ordering Information

■ Temperature Controllers

					Input					The	ermo	cou	ole			R	esist	ance	The	ermo	met	er		Th	ermi	stor	
							Ch	k rome	(CA	l) . alu	mel		Iron vs	J (IC) s. cons	tantan					sista er Pt			(re		ermi:	stor eleme	ent)
					1,200							1,200														al resista	
			Sta	andard scale	1,000					800	1,000															550 Ω (200°C)	4 kΩ (200°C)
				(°C)	800 600			400	600						400							400					
					400		300		-	-		-		300							300	100					300
					300	200				-	† T		200							200		†			150	200	
					200											50	80	50	100				50	100			
					100																					100	150
					-100	0	0	0	0	0	0	0	0	0	0			0	0	0	0	0		0	50		
																-50	-20						-50				
Setting method	Indica- tion method	Control mode	Output		inimum division (°C)	5	10	10	20	20	25	25	5	10	10	2	2	1	2	5	10	10	2	2	2	2	2
Analog No ON/OFF Relay Model			E5C2-R20K				E5C2-R20J				E5C2-R20P-D					E5C2-R20G											
setting	setting indi- cation Proportiona (P)					E5C2-R40K																					

Note: When placing an order, specify the temperature range and supply voltage in addition to the model number.

OMRON

Standard Models (Power Supply: 100 to 120 VAC)

		Indicati	No ind	ication		
		Co	ON/OFF	Proportional (P)		
	Input	_	Relay			
Input/	Thermo-	K (CA)	0 to 200	E5C2-R20K	E5C2-R40K	
stan- couple		Chromel vs. alumel	0 to 300	E5C2-R20K	E5C2-R40K	
scale			0 to 400	E5C2-R20K	E5C2-R40K	
(°C)			0 to 600	E5C2-R20K	E5C2-R40K	
			0 to 800	E5C2-R20K	E5C2-R40K	
			0 to 1,000	E5C2-R20K		
			0 to 1,200	E5C2-R20K		
		J (IC)	0 to 200	E5C2-R20J		
		Iron vs. constantan	0 to 300	E5C2-R20J		
			0 to 400	E5C2-R20J		

Note: Ask your OMRON representative about models with 200 to 240
VAC power supply.

		Indicati	on method	No indication		
		Co	ntrol mode	ON/OFF		
Input			Output	Relay		
Input/	Resis-	Platinum	-50 to 50	E5C2-R20P-D		
stan- dard	tance Ther-	resistance thermom- eter Pt100	-20 to 80	E5C2-R20P-D		
scale mo	mome- ter		0 to 50	E5C2-R20P-D		
(°C)	lei		0 to 100	E5C2-R20P-D		
				0 to 200	E5C2-R20P-D	
				0 to 300	E5C2-R20P-D	
			0 to 400	E5C2-R20P-D		
	Ther-	THE (re-	-50 to 50	E5C2-R20G		
	mistor	placeable element)	0 to 100	E5C2-R20G		
		,	50 to 150	E5C2-R20G		
			100 to 200	E5C2-R20G		
			150 to 300	E5C2-R20G		

■ Accessories (Order Separately)

Sockets

Name	Model
Front Connecting Socket	P2CF-08
Back Connecting Socket	P3G-08
Front Connecting Socket with Finger Protection	P2CF-08-E
Protective Cover (for finger protection)	Y92A-48G

Protective Cover

Туре	Model
Hard Protective Cover	Y92A-48B

Specifications

■ Ratings

Supply voltage	100 to 240 VAC 50/60 Hz
Operating voltage range	90% to 110% of rated supply voltage
Power consumption	Approx. 3.6 VA
Input	Thermocouple (with sensor burnout detection circuit), platinum resistance thermometer, or thermistor with replaceable element
Control method	ON/OFF or proportional control
Setting method	Analog setting
Indication method	No indication
Control output	Relay output: SPDT, 3 A at 250 VAC, resistive load (switching capacity: 330 VA)
Ambient operat- ing temperature	-10°C to 55°C (with no icing or condensation)
Ambient operat- ing humidity	45% to 85%

Note: Do not use an inverter output as the power supply. (Refer to *Safety Precautions for All Temperature Controllers.*)

■ Characteristics

Setting accuracy	±2% FS max.
Hysteresis	Approx. 0.5% FS (fixed)
Proportional band	3% FS (fixed)
Control period	Approx. 20 s
Reset range	5 ±1% FS min. (See note 1.)
Insulation resistance	20 MΩ min. (at 500 VDC)
Dielectric strength	2,000 VAC, 50/60 Hz for 1 min between charged termi- nals and uncharged metallic parts
Vibration resistance	Malfunction: 10 to 55 Hz, 0.15-mm single amplitude for 10 min each in X, Y, and Z directions Destruction: 16.7 Hz, 2-mm double amplitude for 2 hrs each in X, Y, and Z directions
Shock resistance	Malfunction: 147 m/s², 3 times each in 6 directions Destruction: 294 m/s², 3 times each in 6 directions
Life expectancy	Electrical: 100,000 operations min. (3 A at 110 VAC, resistive load)
Weight	Approx. 100 g (with flush-mounting adapter)
Degree of protection	Front panel: IEC standard IP40 (See note 2.) Terminals: IEC standard IP00
Applicable Socket	P2CF-08 (order separately), P3G-08 (order separately)
Applicable Protective Cover	Y92A-48B (order separately)

Note: 1. No reset function is incorporated by any E5C2 model with ON/OFF control.


The reset function is used to correct offset for proportional control. If there is an offset below the set value, turn the reset adjustment clockwise.

2. A special Watertight Cover is used to achieve this degree of protection (IP66, NEMA4). Refer to *Y92A-\(\subseteq\subsete\)N*.

■ Connections

Connecting the Input

 Connect a thermocouple, the E52-THE□ Thermistor (replaceable element) or a platinum resistance thermometer to terminals 1 (positive) and 2 (negative) on the E5C2 as shown in the following illustration.

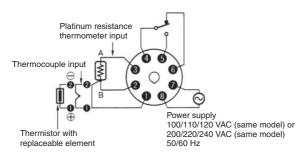

 On the E52-\(\sigma\) 1D, the lead wires are thermocouple element wires, making them difficult to solder because solder will not stick to them easily. Remove the crimp terminal and polish the ends before attempting to solder them.


Output

- If the load circuit is a heating control system, be sure to connect the load to terminals 4 and 5. If the load circuit is a cooling control system, be sure to connect the load to terminals 4 and 6.
- We recommend using an external relay to extend the electrical life of internal relays when driving a large capacity load. This is particularly important when the output relay is switched frequently (e.g., with proportional control).

Power Supply

- If a single power supply is used for the E5C2 and the load, the supply voltage of the power supply may vary greatly when the load is open or closed if the capacity of the power supply is not large enough. Make sure that the capacity of the power supply is large enough so that the supply voltage range will be always from 90% to 110% of the rated supply voltage.
- The E5C2 operates at either 50 or 60 Hz.
- Different models must be order for 100 to 120 VAC and 200 to 240 VAC.

Nomenclature

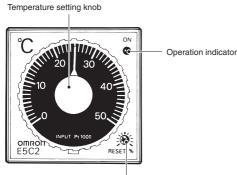

RESET adjustment shaft No reset function is incorporated by any E5C2 model with ON/OFF control.


Operation Indicator


Indicator		Output					
		NO contacts (4 and 5)	NC contacts (4 to 6)				
Red	Lit	ON	OFF				
	Not lit	OFF	ON				

Dimensions

Note: All units are in millimeters unless otherwise indicated.








Terminal Arrangement (Bottom View)




Dimensions with Flush-mounting Adapter (Accessory), and Back Connecting Socket (Sold Separately)






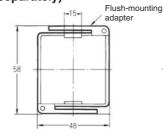

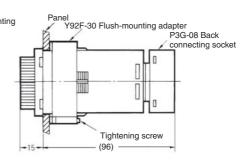

Panel Cutout



Side-by-side Mounting of N Controllers



Qty.	2	3	4	5	6
L	93 0	141 0	189 ⁺¹ ₀	237 0	285 0


Note: 1. Recommended panel thickness is 1 to 4 mm.

2. Close side-by-side mounting is possible (in a single direction).


■ Accessories (Order Separately)

Connection Sockets

P2CF-08 Front Connecting Socket

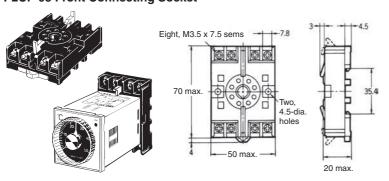

Terminal Arrangement/ Internal Connections (Top View)









Note: Can also be mounted to a DIN track.


Note: A finger-protection model (P2CF-08-E) is also available.


P3G-08 Back Connecting Socket (for Flush Mounting)











Terminal Arrangement/ Internal Connections (Bottom View)




Note: A Protective Cover for finger protection (Y92A-48G) is also available.

Hard Protective Cover

A Hard Protective Cover (Y92A-48B) is available. It can be used in the following cases.

- To protect the setting section, against dust and dirt
- To prevent accidently changing settings by touching the front of the Controller.
- To protect the Controller from water drips



Applicable Thermistor

Connect a Thermistor with a replaceable element (E52-THE5A, E52-THE6D, or E52-THE6F) to the E5C2-R20G. Refer to *E52* for details.

Safety Precautions


Refer to Safety Precautions for All Temperature Controllers.

■ Correct Use

Mounting


Track Mounting (E5C2 with P2CF-08)

When mounting two or more E5C2 models with track-mounting sockets, leave a space of approximately 20 mm on both sides of the sockets where hooks are located.

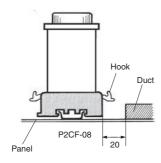


Flush Mounting

Insert E5C2 into the square hole of the panel and insert an adapter from the back so that there will be no space between E5C2 and the panel. Then, secure the E5C2 with a screw.



The P3G-08 can be wired in the same way as the P2CF-08.



Dismounting

If flush mounted, loosen the screw of the adapter and disengage the hooks for dismounting.



Temperature Setting

Do not turn the temperature setting knob of the E5C2 with excessive force, otherwise the stopper of the knob may break.

Others

- Do not remove the housing of the E5C2, otherwise the housing may break.
- To clean the surface of the E5C2, use a soft cloth wet with neutral detergent or alcohol. Do not use any organic solvent, such as paint thinner or benzine, strong acid or strong alkali to clean the surface of the E5C2, otherwise the surface of the E5C2 will become damaged.

ALL DIMENSIONS SHOWN ARE IN MILLIMETERS.

To convert millimeters into inches, multiply by 0.03937. To convert grams into ounces, multiply by 0.03527.

In the interest of product improvement, specifications are subject to change without notice.

Terms and Conditions Agreement

Read and understand this catalog.

Please read and understand this catalog before purchasing the products. Please consult your OMRON representative if you have any questions or comments.

Warranties.

- (a) Exclusive Warranty. Omron's exclusive warranty is that the Products will be free from defects in materials and workmanship for a period of twelve months from the date of sale by Omron (or such other period expressed in writing by Omron). Omron disclaims all other warranties, express or implied.
- (b) Limitations. OMRON MAKES NO WARRANTY OR REPRESENTATION, EXPRESS OR IMPLIED, ABOUT NON-INFRINGEMENT, MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE OF THE PRODUCTS. BUYER ACKNOWLEDGES THAT IT ALONE HAS DETERMINED THAT THE

PRODUCTS WILL SUITABLY MEET THE REQUIREMENTS OF THEIR INTENDED USE.

Omron further disclaims all warranties and responsibility of any type for claims or expenses based on infringement by the Products or otherwise of any intellectual property right. (c) Buyer Remedy. Omron's sole obligation hereunder shall be, at Omron's election, to (i) replace (in the form originally shipped with Buyer responsible for labor charges for removal or replacement thereof) the non-complying Product, (ii) repair the non-complying Product, or (iii) repay or credit Buyer an amount equal to the purchase price of the non-complying Product; provided that in no event shall Omron be responsible for warranty, repair, indemnity or any other claims or expenses regarding the Products unless Omron's analysis confirms that the Products were properly handled, stored, installed and maintained and not subject to contamination, abuse, misuse or inappropriate modification. Return of any Products by Buyer must be approved in writing by Omron before shipment. Omron Companies shall not be liable for the suitability or unsuitability or the results from the use of Products in combination with any electrical or electronic components, circuits, system assemblies or any other materials or substances or environments. Any advice, recommendations or information given orally or in writing, are not to be construed as an amendment or addition to the above warranty.

See http://www.omron.com/global/ or contact your Omron representative for published information.

Limitation on Liability; Etc.

OMRON COMPANIES SHALL NOT BE LIABLE FOR SPECIAL, INDIRECT, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, LOSS OF PROFITS OR PRODUCTION OR COMMERCIAL LOSS IN ANY WAY CONNECTED WITH THE PRODUCTS, WHETHER SUCH CLAIM IS BASED IN CONTRACT, WARRANTY, NEGLIGENCE OR STRICT LIABILITY.

Further, in no event shall liability of Omron Companies exceed the individual price of the Product on which liability is asserted.

Suitability of Use.

Omron Companies shall not be responsible for conformity with any standards, codes or regulations which apply to the combination of the Product in the Buyer's application or use of the Product. At Buyer's request, Omron will provide applicable third party certification documents identifying ratings and limitations of use which apply to the Product. This information by itself is not sufficient for a complete determination of the suitability of the Product in combination with the end product, machine, system, or other application or use. Buyer shall be solely responsible for determining appropriateness of the particular Product with respect to Buyer's application, product or system. Buyer shall take application responsibility in all cases.

NEVER USE THE PRODUCT FOR AN APPLICATION INVOLVING SERIOUS RISK TO LIFE OR PROPERTY OR IN LARGE QUANTITIES WITHOUT ENSURING THAT THE SYSTEM AS A WHOLE HAS BEEN DESIGNED TO ADDRESS THE RISKS, AND THAT THE OMRON PRODUCT(S) IS PROPERLY RATED AND INSTALLED FOR THE INTENDED USE WITHIN THE OVERALL EQUIPMENT OR SYSTEM.

Programmable Products.

Omron Companies shall not be responsible for the user's programming of a programmable Product, or any consequence thereof.

Performance Data.

Data presented in Omron Company websites, catalogs and other materials is provided as a guide for the user in determining suitability and does not constitute a warranty. It may represent the result of Omron's test conditions, and the user must correlate it to actual application requirements. Actual performance is subject to the Omron's Warranty and Limitations of Liability.

Change in Specifications.

Product specifications and accessories may be changed at any time based on improvements and other reasons. It is our practice to change part numbers when published ratings or features are changed, or when significant construction changes are made. However, some specifications of the Product may be changed without any notice. When in doubt, special part numbers may be assigned to fix or establish key specifications for your application. Please consult with your Omron's representative at any time to confirm actual specifications of purchased Product.

<u>Errors and Omissions.</u> <u>Information presented by Omron Companies has been checked and is believed to be accurate; however, no responsibility is accurate.</u> assumed for clerical, typographical or proofreading errors or omissions.

2013.9

In the interest of product improvement, specifications are subject to change without notice.

